



SUPER BOOST SPINWAY™

INSTRUCTIONS

 

 
 




CONTENTS

Please keep these instructions for future reference as they contain important information.

5+



Y0569-0920

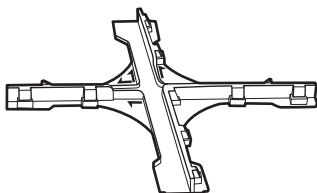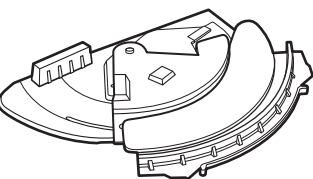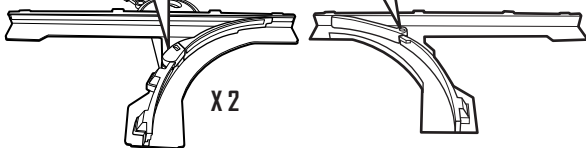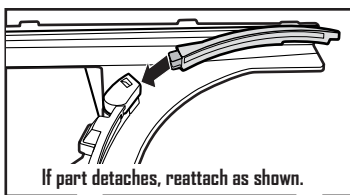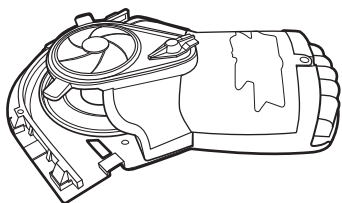


WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Requires 3-C alkaline batteries, not included. Dispose of batteries safely.

This product contains a magnet. Do not use around items that are sensitive to or affected by magnetic fields.

BATTERY INSTALLATION

- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 3 "C" alkaline batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- Replace batteries when booster can no longer propel the disc through the track set.

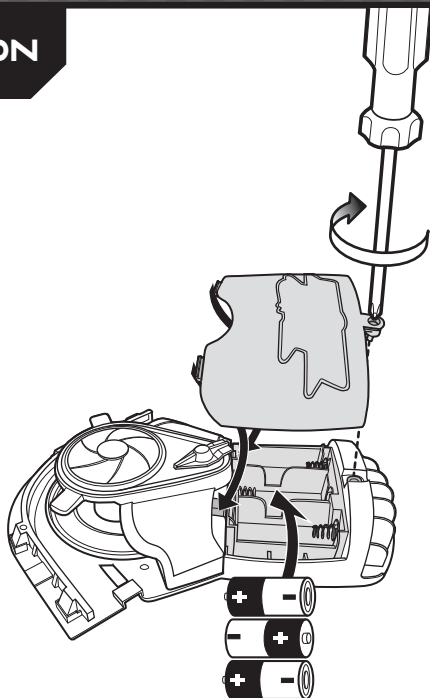

BATTERY SAFETY INFORMATION




In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.




Protect the environment by not disposing of this product with household waste [2002/96/EC]. Check your local authority for recycling advice and facilities.


ASSEMBLY

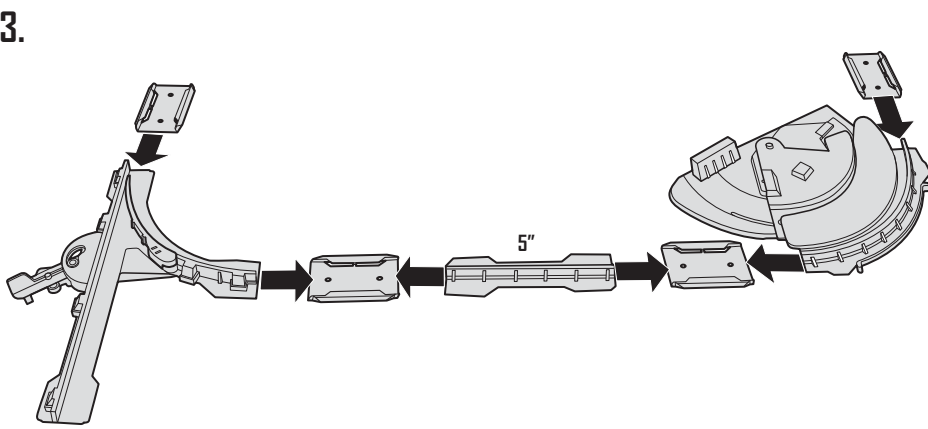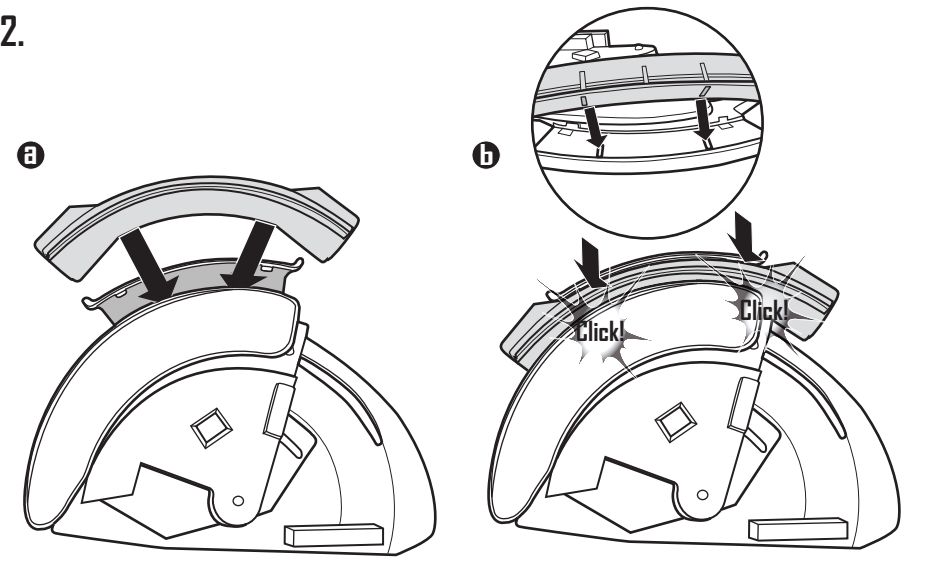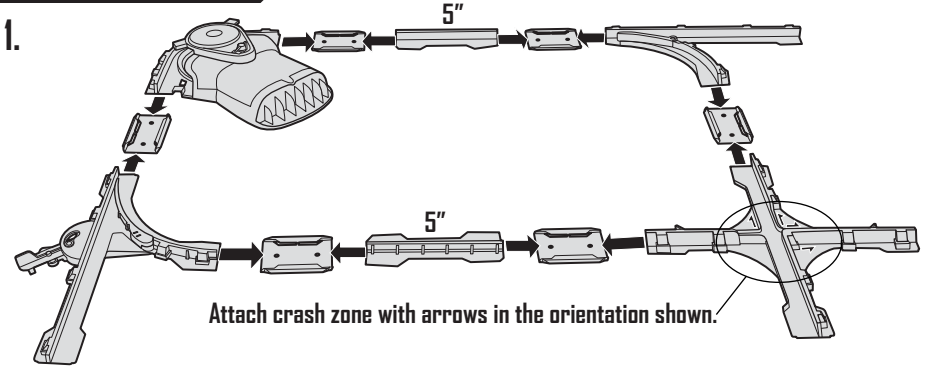


4.

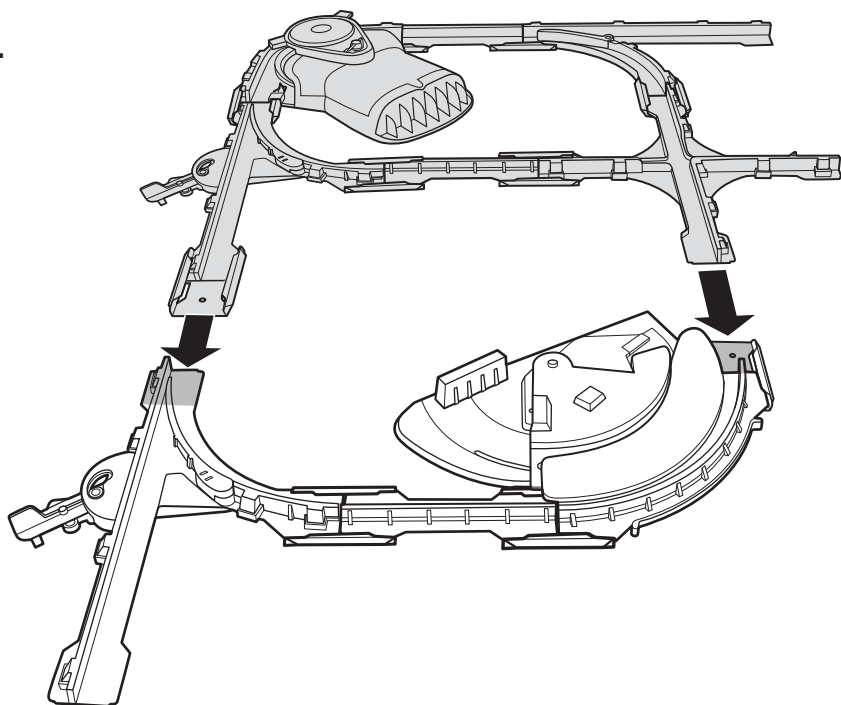

5.

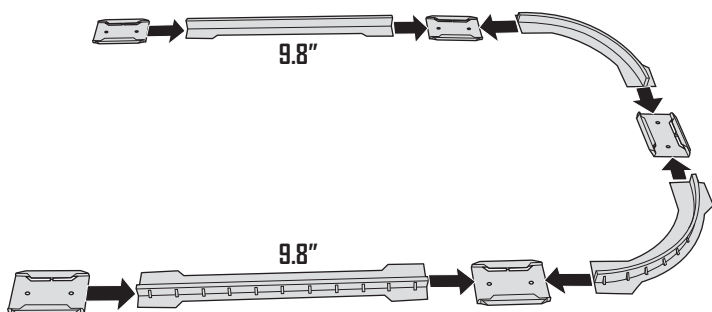


6.

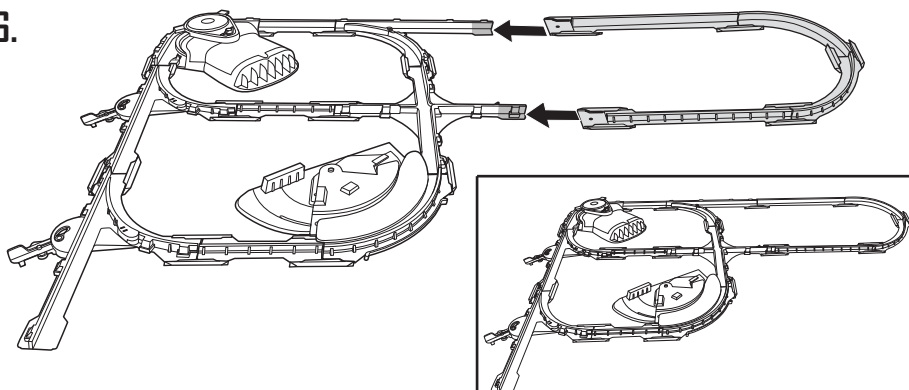

TO PLAY


To launch discs, set power switch to I for best performance. After launching, increase speed as desired.

1. Load disc.


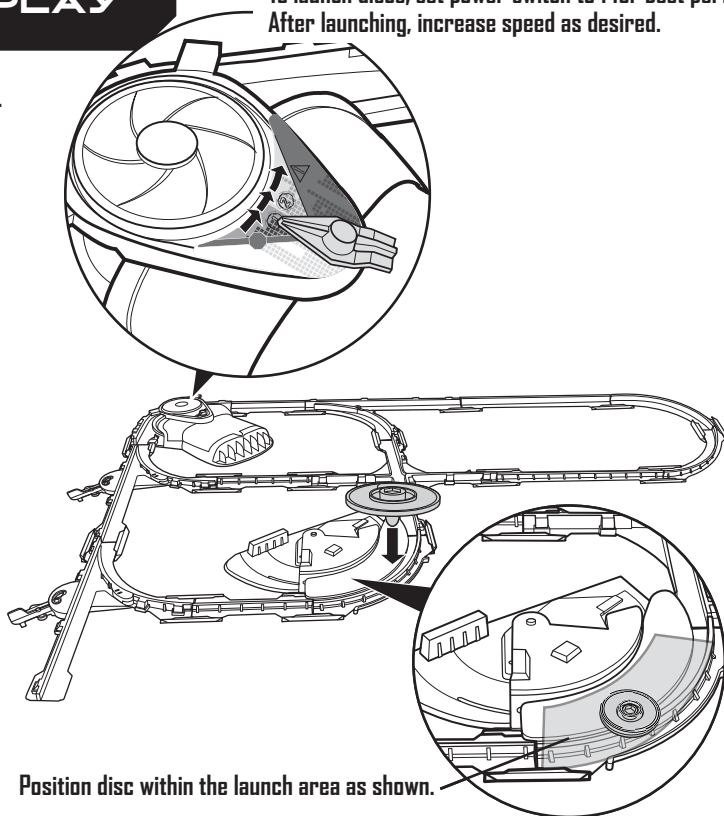


2.


a Pull tab back.

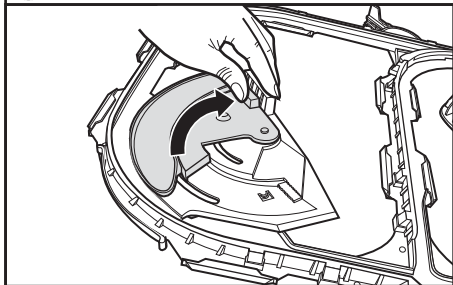


b Let go to launch.

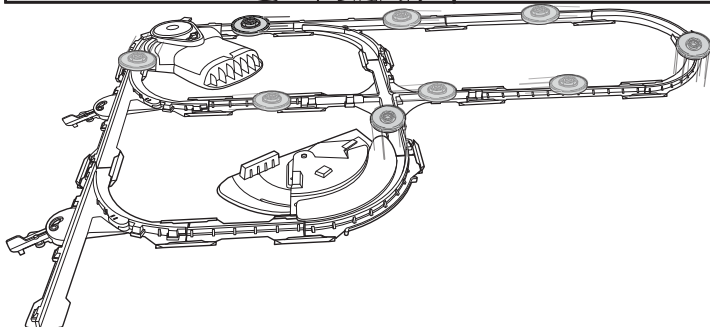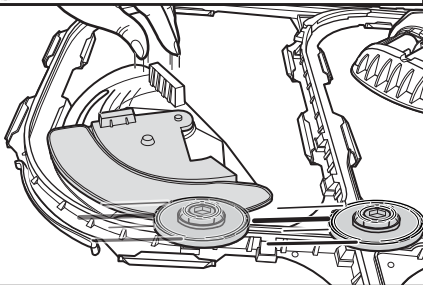

3. Launch more discs for more thrills!

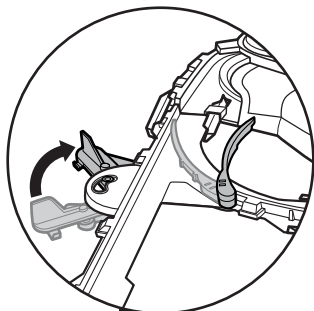

Send your discs in different directions.

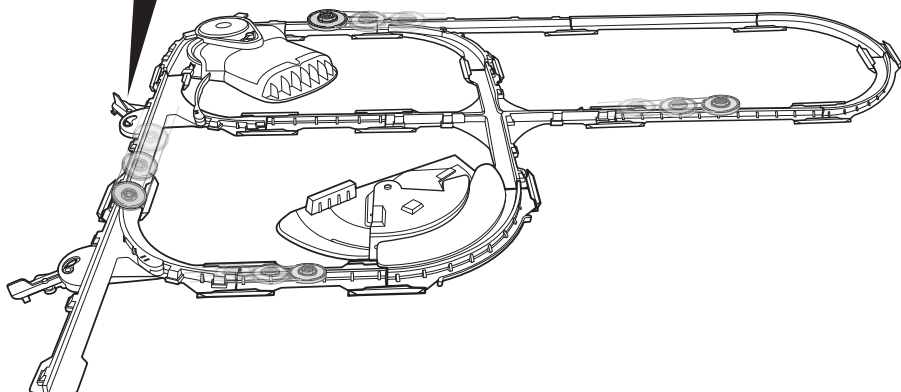

MORE WAYS TO PLAY

CONNECT WITH OTHER SPINSHOTZ™ SETS
TO CREATE YOUR OWN TRACK DESIGNS.

NOT INCLUDED

