

Fisher-Price®



Y0901



Y0997

Each sold separately and subject to availability.

Please keep this instruction sheet for future reference,
as it contains important information.

Requires one AAA (LR03) **alkaline** battery (included) for operation.

Adult assembly is required for battery replacement.

Tool required: Phillips screwdriver.

fisher-price.com

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 **service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

Care

- Wipe this toy with a clean, damp cloth. Do not immerse.
- This toy has no consumer serviceable parts. Do not take apart.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

 
Battery Replacement

Use an **alkaline** battery for longer life.



- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted battery and dispose properly.
- Insert one, new AAA (LR03) **alkaline** battery.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Remove the battery and reinstall it.
- When sounds or the display become faint or stop, it's time for an adult to change the battery.

Battery Safety Information

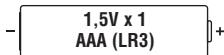

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Consumer Information

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Features

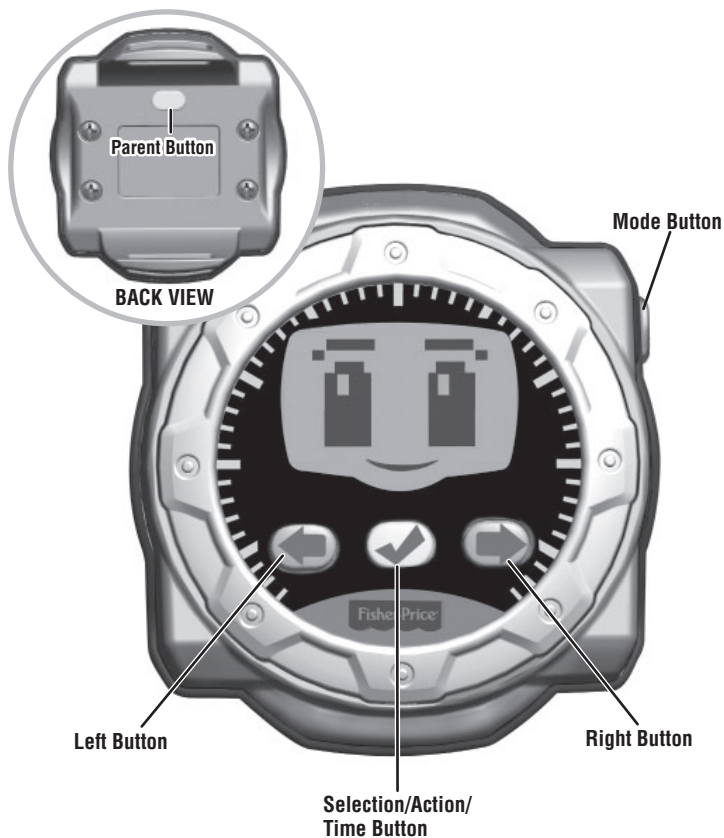


- Before first-time use, you will need to remove this toy from “try-me” mode. Press the parent mode button on the back of the watch to turn off “try-me” mode.

 Setup

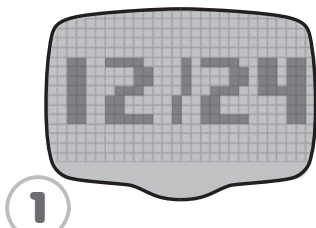

Set 12-hour or 24-hour clock

 
- Press the parent button on the back of the watch.
- Press the ✓ button to change the clock format. Press the ◀ or ▶ button to choose **12-hour** or **24-hour** format.
- Press the ✓ button to save your selection.

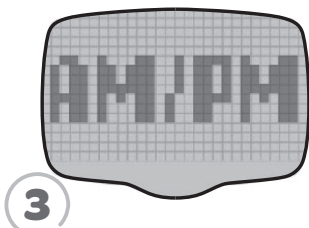

Set AM or PM


- Press the ◀ or ▶ button to choose **AM** or **PM**. Press the ✓ button to save your selection.

 ***Hint:** You can only change the AM or PM setting when the clock is set to 12-hour format.*

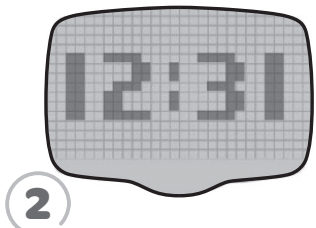

Set Time

 - Press the ◀ or ▶ buttons to change the hour. Press the ✓ button to save your selection.
- Press the ◀ or ▶ button to change the minutes. Press the ✓ button to save your selection.

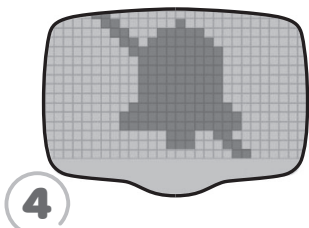


Set Hourly Chime

***Hint:** Hourly chime will only occur between 8 am and 8 pm.*

- Press the parent button twice. Then press the ✓ button.
- Press the ◀ or ▶ buttons to scroll through chime sounds or choose no sound.
- Press the ✓ button to save your selection.

 
Setup

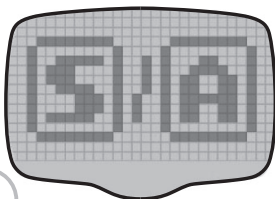

5


- You can change how the watch tells time - **Simple** (e.g., it's eight fifteen) or **Advanced** (e.g., it's quarter after eight).
- Press the parent button three times and then press the ✓ button.
- Press the ◀ or ▶ button to choose **S** - Simple or **A** - Advanced.
- Press the ✓ button to save your selection.

 Choose a Mode

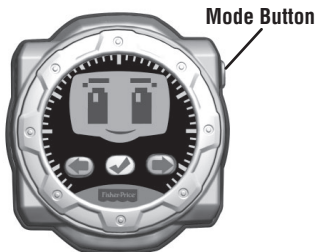


- Press the mode button on the side of the watch to scroll through options: **Clock**, **Stopwatch**, **Race the Clock Game** or **Numbers Pop Game**.

 Stopwatch

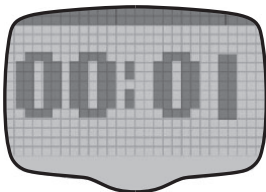

- Press the ✓ button.
- When you are ready, press the ✓ button again to start the stopwatch.
- To stop or pause the stopwatch, press the ✓ button.
- Press the ◀ or ▶ button to reset the stopwatch.

 
Timer

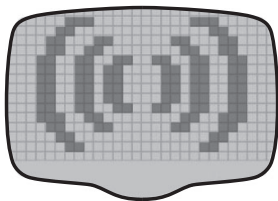

- Press the ✓ button.
- Press the ◀ or ▶ button to pick a time. Press the ✓ button to save your selection.
- Press the ◀ or ▶ button to pick a sound. Press the ✓ button to save your selection.
- Press the any button to stop the timer sound.


Hint: Once the timer is set, it cannot be shut off until the time that was chosen is complete. If you'd like to change modes while the timer is on, simply press the mode button.

 Numbers Pop Game

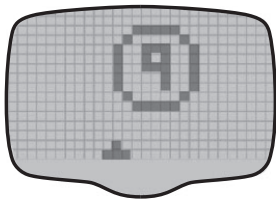

- Press the ✓ button to start the game.
- Listen for the number in the bubbles you need to pop.
- Press the ◀ or ▶ button to move the launcher.
- Press the ✓ button to pop the bubbles.
- Pop as many bubbles with the correct number before time runs out!
- Press the ✓ button to start the next round.

 Race the Clock Game

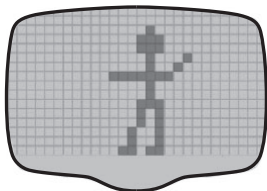

- Press the ✓ button to start the game.
- Listen to the challenge and complete your task before time runs out!
- Press the ✓ button to start the next round.