

IMPORTANT INFORMATION

NOTE TO ADULTS: TO ENSURE THAT THE CHILD'S PLAY IS BOTH SAFE AND FUN, PLEASE REVIEW ALL OPERATING INSTRUCTIONS AND SAFETY RULES WITH YOUR CHILD.

- A. THIS PRODUCT IS NOT RECOMMENDED FOR USE ON LOOSE DIRT OR WET SURFACES.
- B. DO NOT IMMERSE IN WATER.
- C. PLAY SAFELY. USE ONLY INDOORS ON THE FLOOR.

CAUTION:

- A. VEHICLE CONTAINS A RECHARGEABLE CELL. IF FLUID LEAKS, AVOID CONTACT WITH EYES AND DISCARD VEHICLE.
- B. ONLY USE THE CHARGER SUPPLIED WITH THIS TOY. USE OF AN ALTERNATE CHARGING SOURCE WILL DAMAGE YOUR VEHICLE.
- C. DO NOT ATTEMPT TO HOLD WHEELS WHILE CHARGING. WHEELS MUST SPIN DURING CHARGING PERIOD.
- D. YOUR VEHICLE WILL BE FULLY CHARGED AFTER 20 SECONDS. ADDITIONAL CHARGING WILL NOT IMPROVE PERFORMANCE. OVERCHARGING MAY REDUCE THE LIFE OF YOUR VEHICLE.
- E. DO NOT RUN VEHICLES ON SHAG CARPET. USE ONLY ON A HARD FLOOR.
- F. DO NOT RECHARGE THE VEHICLE IF IT FEELS HOT. ALLOW IT TO COOL BEFORE RECHARGING.
- G. DO NOT ATTEMPT TO USE OR CHARGE THE VEHICLE IF IT SHOWS SIGNS OF LEAKAGE OR CORROSION.
- H. DO NOT DISASSEMBLE THE VEHICLE AND/OR CHARGER.
- I. IF THE VEHICLE AND/OR CHARGER ARE WET, THOROUGHLY DRY BEFORE USING OR CHARGING.
- J. REGULARLY EXAMINE ALL WIRES AND CONNECTORS. IN THE EVENT OF DAMAGE, DO NOT USE.
- K. ADULT SUPERVISION IS RECOMMENDED WHEN THIS VEHICLE IS BEING OPERATED.
- L. TO AVOID ACCIDENTAL OPERATION, REMOVE ALL BATTERIES WHEN NOT IN USE.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Battery Performance Note: For best performance use alkaline batteries. Battery life may vary depending on battery brand.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.



 
 
INSTRUCTIONS

Keep these instructions for future reference as they contain important information. IMPORTANT: Please read all instructions before operating your vehicle.



CONTENTS

EACH SET INCLUDES 1 VEHICLE AND 1 CHARGER.

Y4338/Y4339

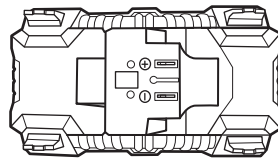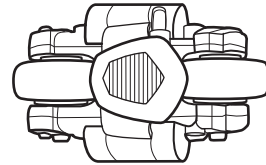

Y2501/Y2502

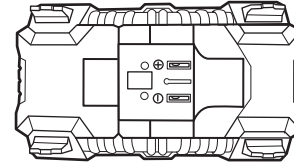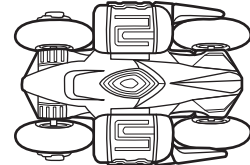  

Asst. X9636/Y7053
Y4338/Y4339-0920
Y2501/Y2502-0920

CAUTION: To prevent entanglement, keep all hair away from the wheels.

CAUTION: Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

 
©2012 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867. service.mattel.com

INSTRUCTION SHEET SPECIFICATIONS

Toy: X9636/Y7053
Toy No.: X9636/Y7053
Part No.: 0920
Trim Size: 11" W x 8.5" H
Folded Size: 5.5" W x 8.5" H
Type of Fold: Single
colors: One
Colors: Black
Paper Stock: White Offset
Paper Weight: 70 lb.
EDM No.:




2 PANEL Folding Dummy

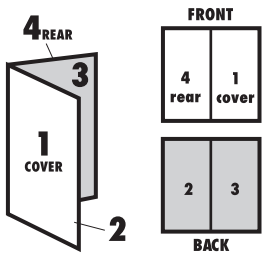

FEATURES

 
- 1 LED
- 2 CHARGER CONNECTIONS
- 3 BATTERY COVER

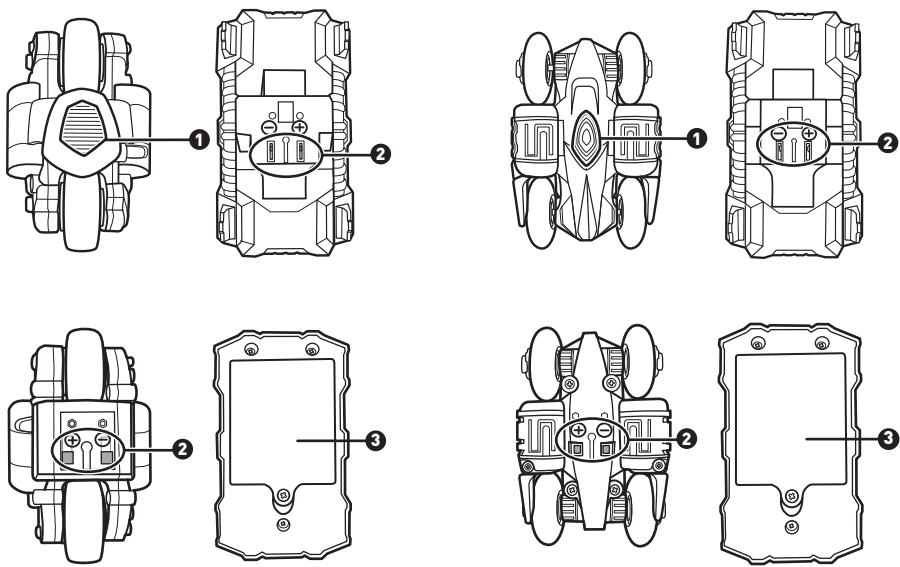

NOTE: Vehicle powered by permanently installed rechargeable cell and charger requires 3 AA alkaline batteries, not included.

BATTERY INSTALLATION

 
1. Unscrew the battery cover with a Phillips head screwdriver (not included).
2. Install 3 new AA alkaline batteries with polarity (+/-) as shown inside the battery compartment.
3. Replace battery cover and tighten screw.
4. Replace batteries in charger if vehicle runs slowly after a recharge or if time to recharge the vehicle exceeds 20 seconds. Dispose of batteries safely.

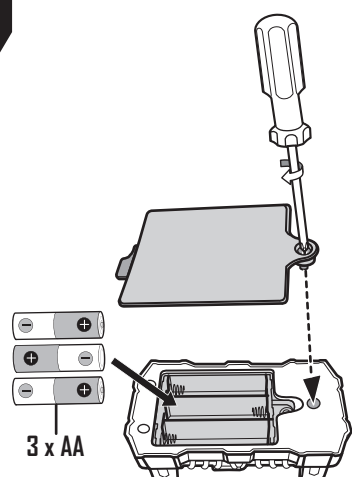


OPERATION

Your vehicle is powered by a rechargeable cell that is permanently installed. The vehicle must be charged before play. To charge, first make sure you have installed 3 AA alkaline batteries in the charger.

 
1. Align charger connections and press vehicle onto charger.

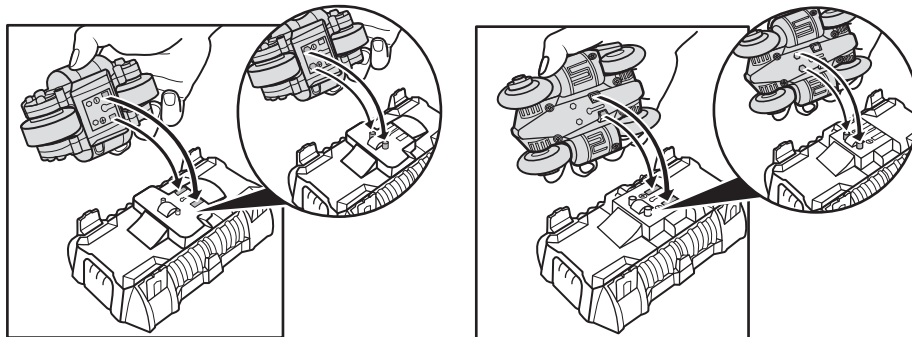

 
2. PRESS DOWN AND HOLD for 20 seconds to charge the vehicle. Wheels will spin and LED will glow brightest when vehicle is ready for action.

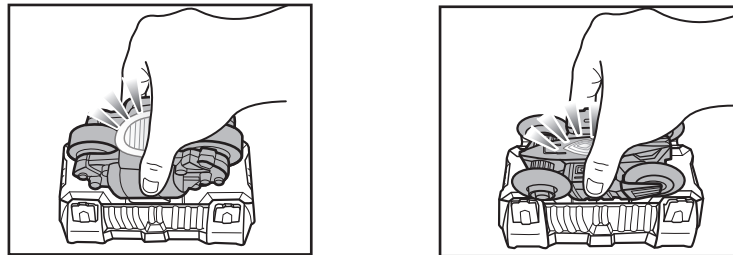

 3. Let it go on the floor for crazy non-stop stunt action!

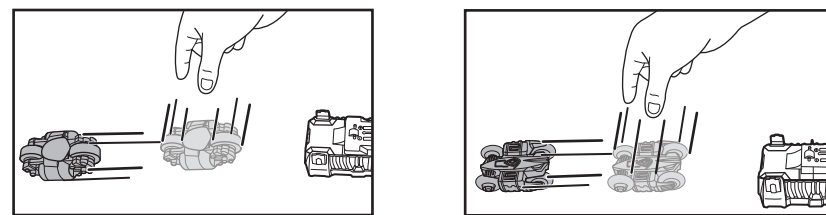

 4. Watch it rebound and go!

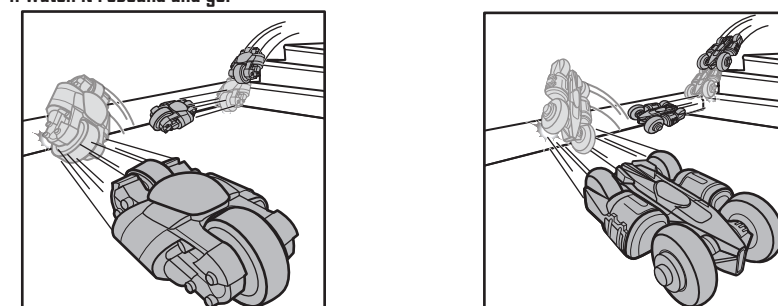

Artwork Check Points

- Artwork is prepared in CMYK color mode.
- All images' resolution is not less than 300 dpi.
- Company address, legal and warning statements are up to date.
- Correct UPC size and format, and it's readable by UPC scanner.
- All comments are revised.
- For international version, need to check if English copy can match DOM version, if not, need to double check with Graphic Designer.