


Rock & Roll Stage


INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

ASSEMBLY

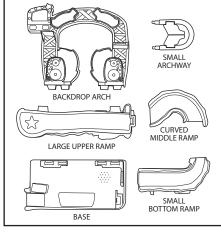


PARTS

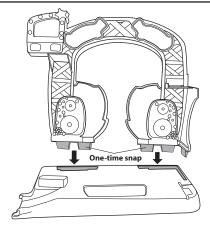


1 Attach BACKDROP ARCH to BASE.




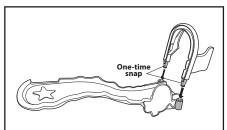


2 Attach SMALL ARCHWAY to LARGE UPPER RAMP.

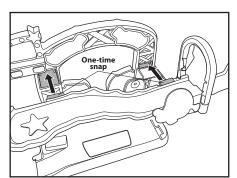

3 Attach LARGE UPPER RAMP to BACKDROP ARCH.

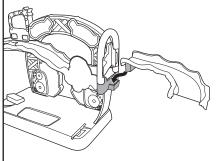

4 Attach CURVED MIDDLE RAMP to LARGE UPPER RAMP.

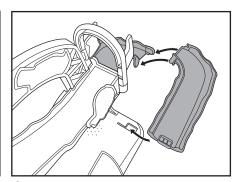

5 Attach SMALL BOTTOM RAMP to CURVED MIDDLE RAMP and BASE.

LABEL PLACEMENT

NOTE: Many of these assemblies are "one-time snaps". Once these pieces are snapped together, they cannot be taken apart.

NickJr.com





Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Albany 1331, Auckland.

© 2013 Viacom International Inc. All Rights Reserved. Nickelodeon, Bubble Guppies and all related titles, logos and characters are trademarks of Viacom International Inc.

©2012 Mattel. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, except as noted.

PRINTED IN CHINA.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Item No : Y2830-0920 Version : EL Size : A4

Size : A4
Paper : Woodfree paper 70 gsm

r : Black

te : 8/10/2012 (William Tam)

Y2830-0920