

Fisher-Price®

fisher-price.com





WARNING

For your child's safety and health:

- Always use this product with adult supervision.
- Continuous and prolonged sucking of fluids will cause tooth decay.
- Always check food temperature before feeding.
- Never allow child to walk or run with this product.

Instructions for Use

Keep instructions for future reference.

Before use, thoroughly wash all parts that may contact food.

Wash in warm, soapy water.

Do not use harsh or abrasive cleaners or sponges.

Rinse to remove residue.

Do not use in microwave. Do not use with carbonated beverages, pulpy juices or fatty foods.

Inspect the spout before each use. Pull the spout in all directions and throw away at the first sign of damage or weakness.

Do not leave the spout in direct sunlight/heat or leave in a disinfectant for longer than what is recommended.

Top-rack dishwasher safe.



1-800-432-5437

Fisher-Price, Inc., 636 Girard Avenue,
East Aurora, NY 14052. Hearing-impaired
consumers: 1-800-382-7470.

Mattel Australia Pty. Ltd., 658 Church
Street, Locked Bag #870, Richmond,
Victoria 3121 Australia.

16-18 William Pickering Drive,
Albany 1331, Auckland.

Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186MJ
Amstelveen, Nederland.