

Fisher-Price®

Y4234



fisher-price.com



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.


Apple, iPhone and iPod touch are trademarks of Apple Inc.,
registered in the U.S. and other countries.
App Store is a service mark of Apple Inc.

©2012 Mattel. All Rights Reserved. ® and ™ designate U.S.
trademarks of Mattel, except as noted.

Consumer Information

- Please keep these instructions for future reference, as they contain important information.
- Adult setup is required.
- This product is compatible with the iPhone® 3GS, iPhone 4/4S mobile digital device, iPod touch® device 4th generation. Device not included.
- Only use this product with your iPhone® or iPod® device properly inserted and locked in the case. Remove any other cases or bumpers from the device before inserting it in this case.
- This product contains a magnet (to interact with your iPhone or iPod device). Do not use around other items that are sensitive to or affected by magnetic fields.

Setup

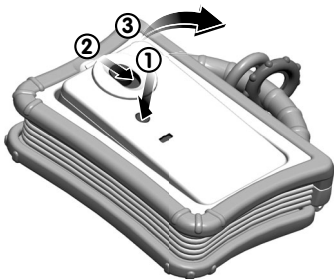

BACK VIEW


- While pressing the button on the door ①, slide the release switch ② and lift the door ③.

Setup



-
- Pull the door to remove it.

Setup

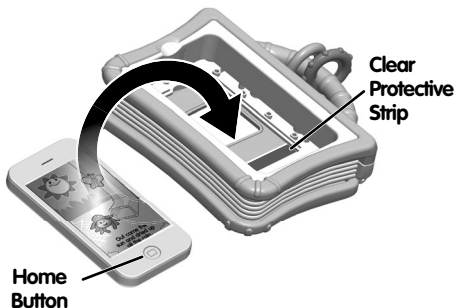


BACK VIEW

Hint: If you'd like to **block** your child from pressing the home button, follow the instructions in this step.

- Turn your device power ON.
- Insert the device with the home button on the **same** side as the clear protective strip.

Setup

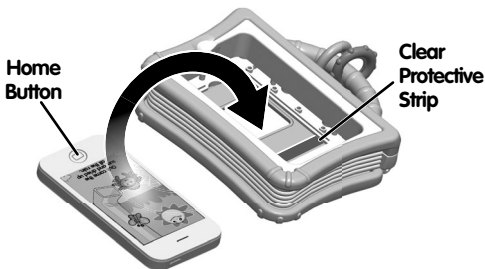


BACK VIEW

Hint: If you'd like to allow your child to press the home button, follow the instructions in this step.


- Insert the device with the home button on the **opposite** side of the clear protective strip.

Setup

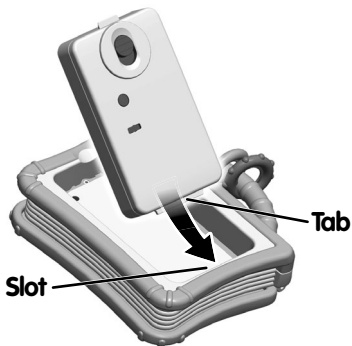

-
- At an angle, fit the tab on the door into the slot in the case.

Setup

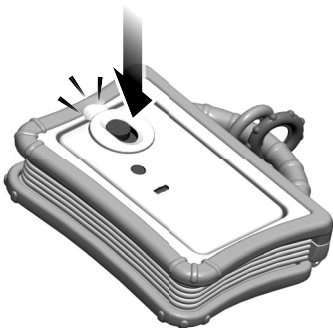

-
- Push the door to lock in place. Make sure you hear a **"snap"**.

Free Story Apps



-
- Scan the QR code above with your iPod or iPhone to download our free Fisher-Price® story apps from the App StoreSM (no purchase necessary) for interactive fun!

Interactive Fun!



- Open and close the cover, or swipe the screen to turn the page in the story.
- Touch the screen to hear about things in the story.

Care

- Periodically check this product and your device for damage or cracks. Do not use if either is damaged or broken. Follow your device's instructions for use and care.
- Wipe this product with a clean, damp cloth. Do not immerse.