



2 Tummy Time Fun

1 Kick & Play Overhead Gym



WARNING

To prevent entanglement injury, never place gym in a crib or playpen. Never add strings, ties or other products to the gym.

Please keep this instruction sheet for future reference, as it contains important information.

Requires four “AA” (LR6) **alkaline** batteries (not included) for operation.

Adult assembly is required.

Tool required for battery installation: Phillips screwdriver (not included).

fisher-price.com

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

**service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Aibany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

© Disney/Pixar

©2012 Mattel. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, except as noted.

ICES-003

- This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Assembled Parts



2 Removable Arches



 
Arch with Electronic Toy



Hub




4 Hanging Toys

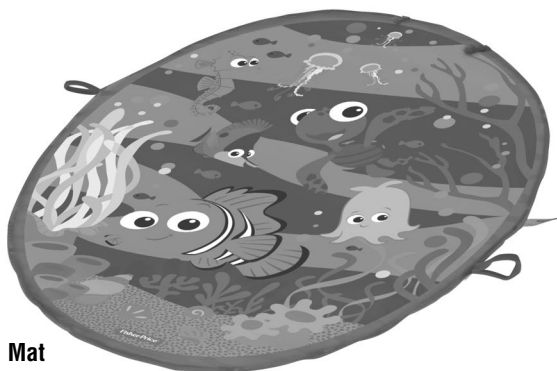

Mat

 Battery Installation

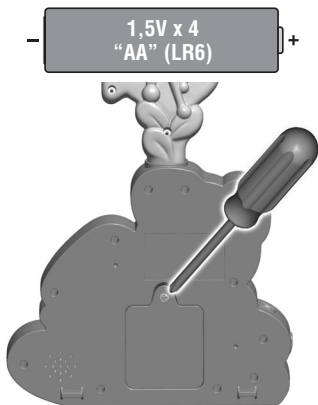

- Locate the battery compartment door on the electronic toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert four "AA" (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries.
- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.



Battery Safety Information

 
In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

- Machine wash the mat in cold water on the gentle cycle. Do not use bleach. Tumble dry low.
- Wipe the arches, hub and toys with a clean cloth dampened with a mild soap and water solution. Do not use bleach.
- Do not immerse the electronic toy.

Assembly & Setup

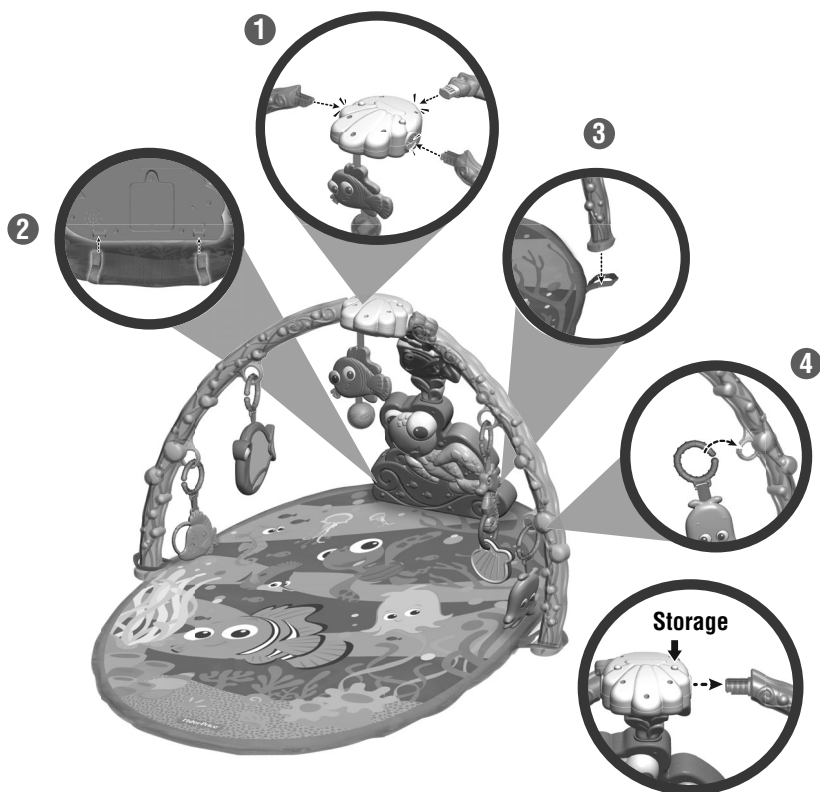


- 1 Insert and **"snap"** the removable arches into the hub sockets (with buttons above them). Insert and **"snap"** the arch with electronic toy into the remaining hub socket (this is a permanent assembly).
- 2 Lay the mat on a flat surface, decorated side up. Fit the straps on the mat up through the slots on the back of the electronic toy. Pull on the straps to be sure they are secure.

- 3 Insert the end of each arch through the loops on the mat.
- 4 Hang the toys from loops on the arches.


Disassembly for Storage and Care

Press the button on the hub near each socket and remove the removable arches. Remove the mat straps from the electronic toy and the arches from the mat loops.

 Kick & Play and Tummy Time Fun!

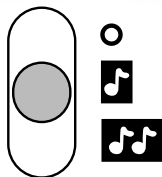

Mode Switch

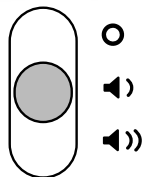 

Power/Volume Switch

- Slide the power/volume switch to ON with low volume , ON with high volume  or OFF .
- Slide the mode switch to: **Baby Activated**  or **Mom Activated** .



Baby Activated (Short Play)

Kick or press Squirt for fun sounds and dancing lights.



Mom Activated (Long Play)

Press Squirt for up to 20 minutes of music, sounds and lights.