

Instructions

Watch a video of these instructions at www.pollypocket.com/wallparty

NOTE: Video in English only.

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.

4+


Hangs with


Command

BRAND

STRIPS

Keep these instructions for future reference as they contain important information. Please read all instructions before beginning assembly and set-up.

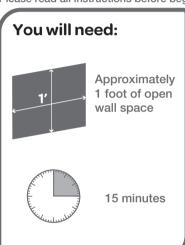

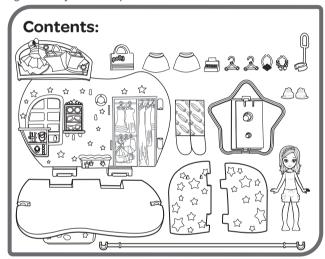

Before applying Command® Strips:


- · CAUTION: NEVER use with wallpaper. May not adhere well to vinyl surfaces.
- · CAUTION: NEVER hang items over beds.
- · Make sure the wall surface is clean and dry. If cleaning is necessary 3M recommends using isopropyl rubbing alcohol. DO NOT use household cleaners.
- · Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).

When removing bracket from wall:

- · NEVER pull strip towards you.
- · NEVER press bracket against wall.
- · ALWAYS hold bracket gently in place to prevent it from hitting fingers.
- ALWAYS pull tab on Command® Strip SLOWLY AND STRAIGHT DOWN WALL. Stretch at least 12 inches (30.5 cm) until bracket and strip release.

Purchase medium Command® Refill Strips to reapply to your wall.



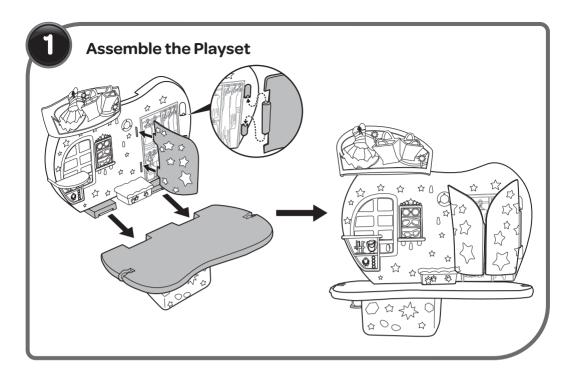

Apply Command® Strips


Separate strips. Remove red-printed liner from one Command® Strip and apply to back of bracket as shown. Make sure the strip tab is accessible for future removal.

NOTE: DO NOT PULL BRACKET OFF WALL without reading removal instructions.

Red Printing = On Bracket



Black Printing = On Wall

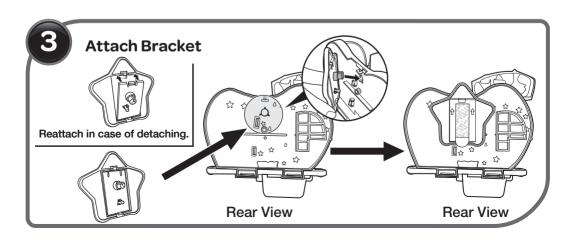

4

Hang Playset on Wall

- 1. Remove black-printed liner from Command[®] Strip.
- 2. Position playset level against the wall at a suitable height for your child.
- 3. Press bracket firmly onto wall and hold for 30 seconds.

NOTE: For optimal adhesion performance, 3M recommends waiting 1 hour before adding weight to Command® Strips.









5

Connect with other Wall Party[™] Playsets (sold separately)

- 1. Attach zip line to playset on wall.
- 2. Follow Steps 1-3 on the other Wall Party™ playset instructions.
- 3. Attach zip line to other Wall Party™ playset.
- 4. Position other playset to desired location, level against the wall.
- 5. Press playset firmly onto wall and hold for 30 seconds.
- Connect all playsets together to create your own Wall Party™!

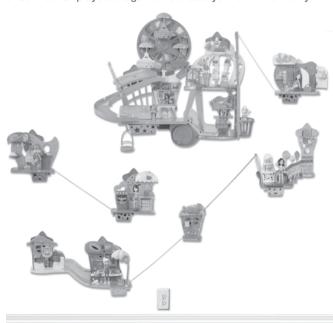


Connects to ALL Wall Party™ playsets!

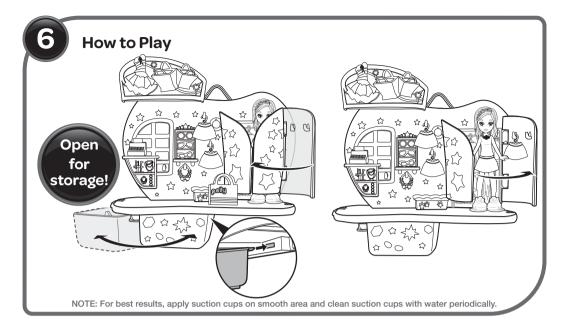

7

Reattaching & Removal

- Mounting plates are designed to break away from the set without causing surface damage.
- 2. To remove bracket from the wall entirely:
 - a. NEVER pull strip towards you.
 - b. Hold bracket gently to prevent it from snapping fingers. DO NOT press against wall.
 - c. Grab tab on Command® Strip and SLOWLY STRETCH STRAIGHT DOWN ALONG WALL AT LEAST 12 INCHES until bracket and strip release.
- Purchase medium Command® Refill Strips to reapply to your wall.

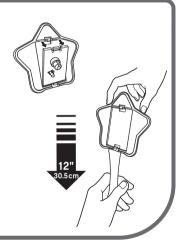



Command® Strips are a product of 3M. For further information visit command.com

NOTE: Apply strips to surfaces above 50°F (10°C). Adhesive could lose adhesion above 105°F (40°C).

CAUTION:

DO NOT use with wallpaper. May not adhere well to vinyl surfaces. DO NOT hang items over beds.

3M and Command are trademarks of 3M.

© 3M 2012. All Rights Reserved.

©2012 Mattel and/or Origin Products Ltd. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. 1-800-524-8697. Mattel Australia Pty. Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.

