

Fisher-Price®

Y9357



Please keep this instruction sheet for future reference,
as it contains important information.


Adult assembly is required. Tool required: Phillips screwdriver (not included)

Wipe this toy with a clean, damp cloth. Do not immerse.


This toy has no consumer serviceable parts. Do not take apart.

fisher-price.com

Assembled Parts

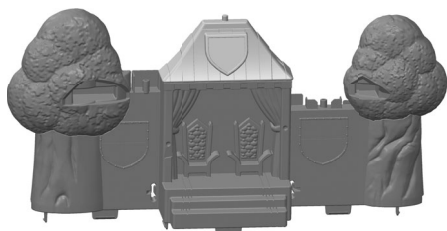

Wall

 

Base



2 Canopies



2 Stands



2 Small Flags



Large Flag




Small Flag Rack



Large Flag Rack



Upper Track

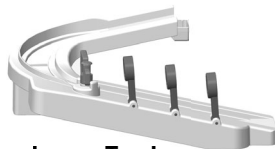

Lower Track



M3,5 x 12mm Screw – 2

SHOWN ACTUAL SIZE

Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten.


Assembly



CAUTION


This package contains small parts. For adult assembly only.

1

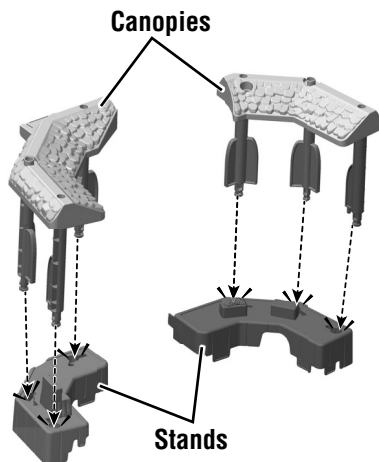

- Fit the canopies into the stands. Push to “**snap**” each into place.

***Hint:** Each canopy is designed to fit a stand one way. If it does not seem to fit, try the other canopy.*

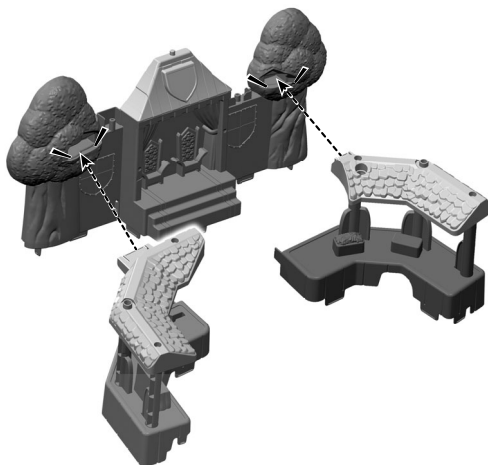


2

- Fit the tab on the back of each canopy into the slots in the wall. Push to “**snap**” in place.


Assembly

3

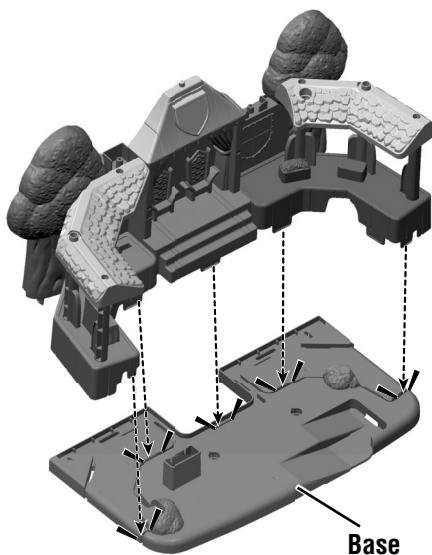


- Fit the wall assembly into the base and push to “**snap**” in place.

4

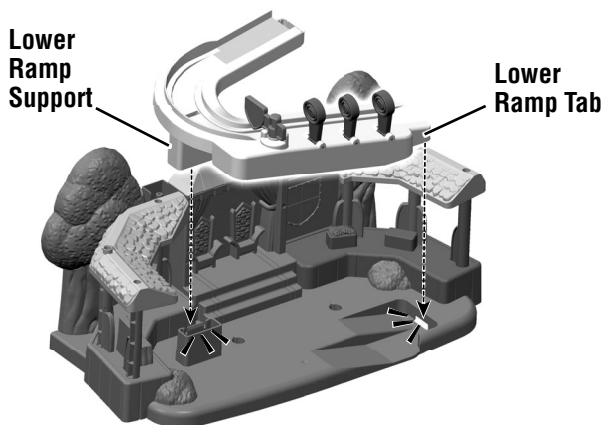


- First fit the support on the lower ramp over the support on the base and push to “**snap**” in place. Then fit the tab on the end of the lower ramp into the slot in the base. Push to “**snap**” in place.

Assembly

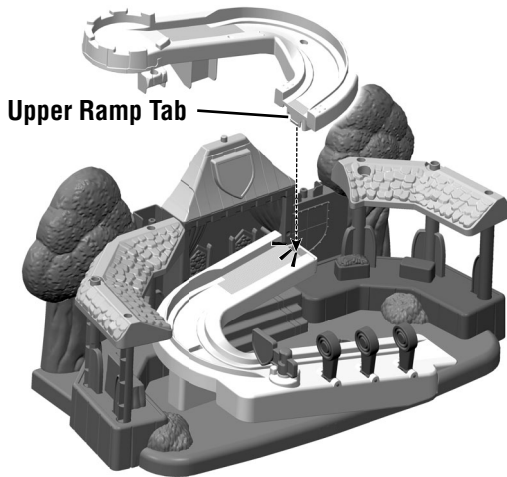

5

- Fit the tab on the upper ramp into the slot in the lower ramp. Push to “snap” in place.

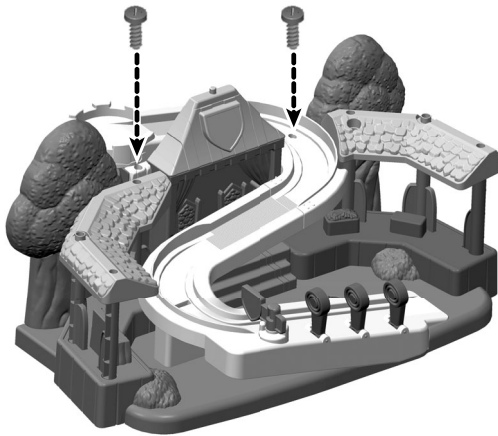


6

- Insert two screws into the upper ramp and tighten.

Assembly


Small Flag Rack

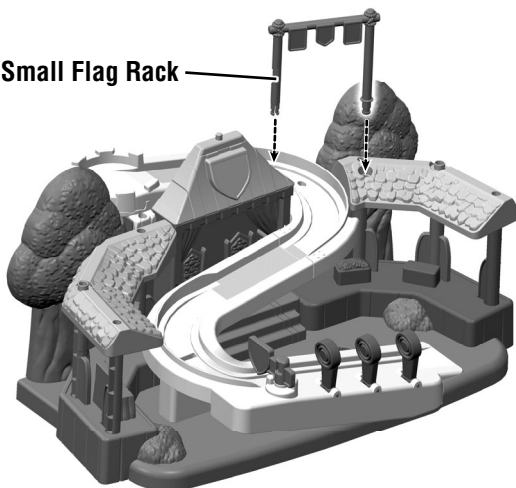

7

- “Snap” the small flag rack into the top of the assembly.

Large Flag Rack

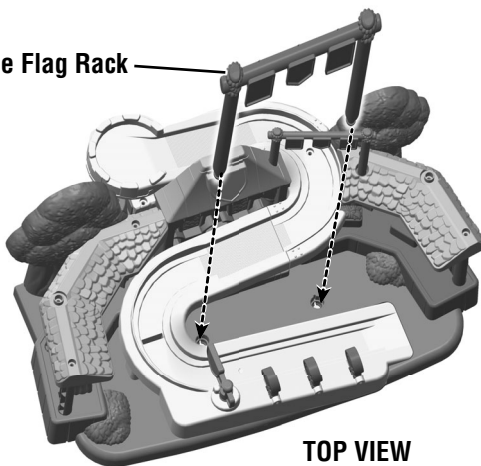

8

TOP VIEW


- “Snap” the large flag rack into the base.

© HIT Entertainment Limited.

HIT and the HIT logo are trademarks of HIT Entertainment Limited.


©2013 Mattel. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, except as noted.

Assembly

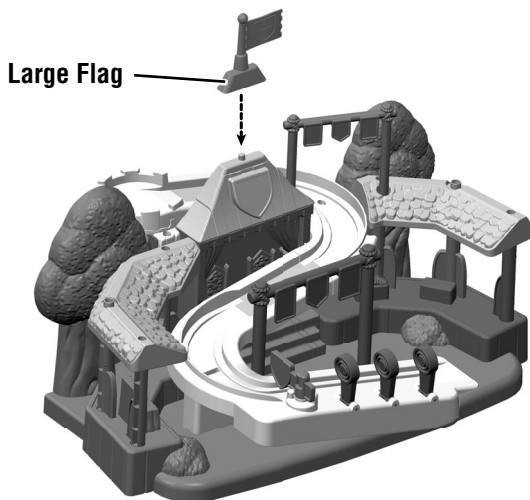

9

- Fit the large flag onto the roof.

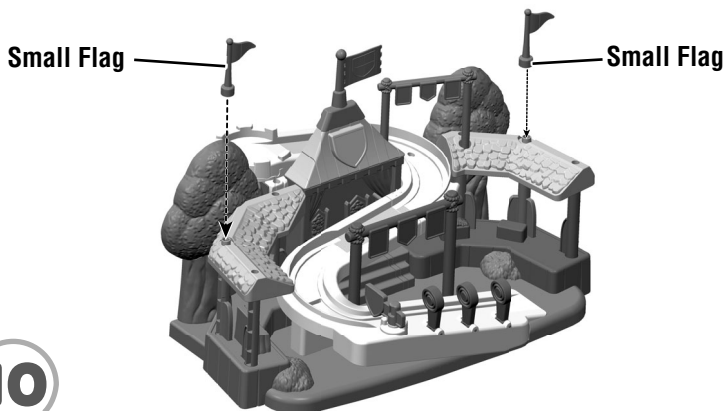


10

- Fit a small flag onto each canopy.

Decoration

Apply labels exactly as shown in illustrations. Avoid repositioning a label after it has been applied.

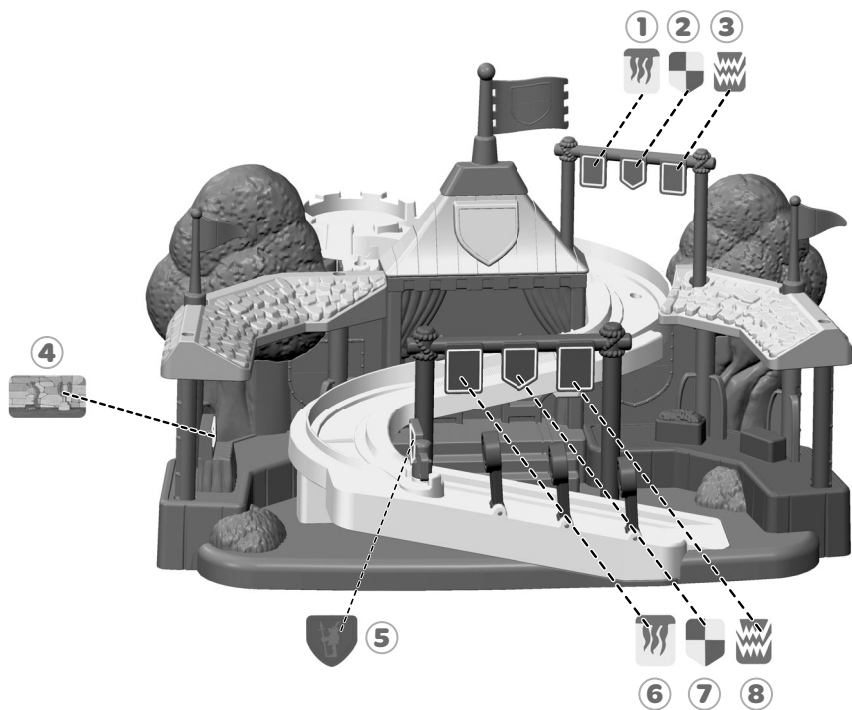

“Klip-klop” Down the Ramp!



- Place a horse figure on the ramp and tap his tail. Watch him “klip-klop” down the ramp and knock down the targets!

Tips for Use

- For best performance, place the toy on a flat, level surface.
- Make sure the surface of the ramp and horse figure are clean. Wipe with a damp cloth to remove any dirt or dust.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)

1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.

Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.