



6. Press button to launch missiles, press again for lights and sounds.

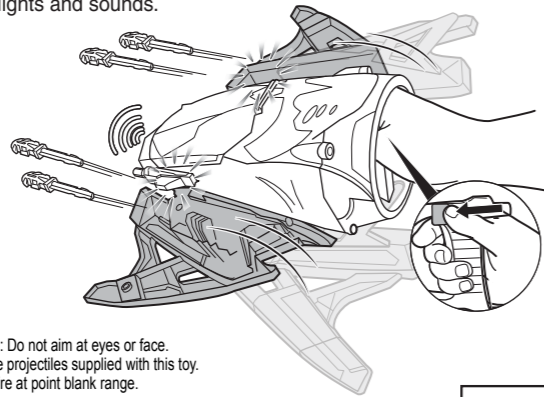

NOTE: Press button with left hand if unable to reach button with one hand.

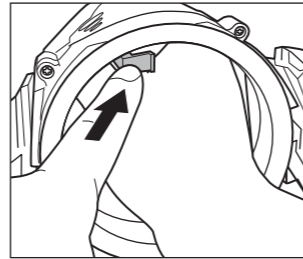


Warning: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.

RESET



If parts detach, reattach as shown.

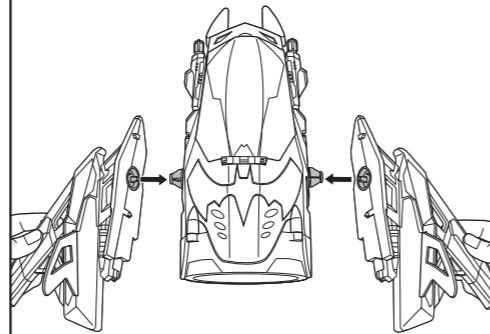

BATTERY REPLACEMENT


Batteries included are for demonstration purposes only. Replace the batteries if sounds distort or lights dim. Unscrew the battery cover with a Phillips head screwdriver (not included). Remove batteries and dispose of them safely. Install 3 new button cell (AG13, LR44) batteries in the orientation (+/-) shown. Replace battery cover and tighten screw. For longer life, use alkaline batteries. To resume normal operation, remove and reinstall the batteries.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard(carbon-zinc), or rechargeable(nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

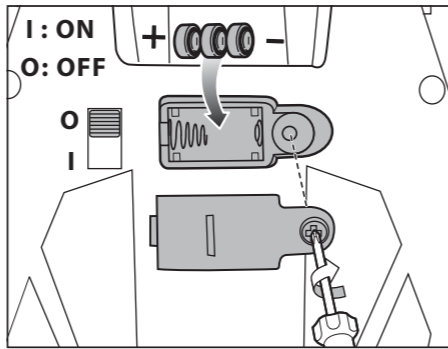

©2013 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Y9465-0920 Fax:03-78803867.

BATMAN and all related characters and elements are trademarks of and © DC Comics.



service.mattel.com



back panel

 


4+


SPIN STRIKE™ BATJET VEHICLE INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

CONTENTS




x4

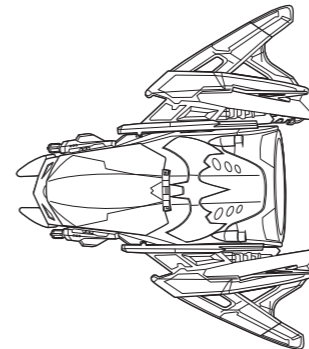


TO PLAY


1. Cockpit fits most Batman™ 6" figures (not included).

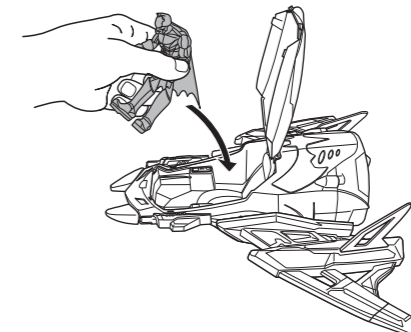


2.

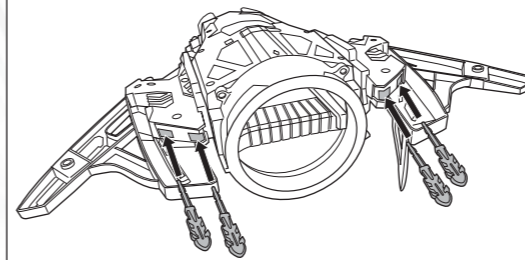


3. Insert right hand and hold Batjet as shown.

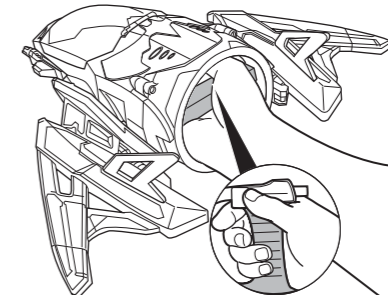

4. Press and hold trigger, then rotate right arm for 360° spins.

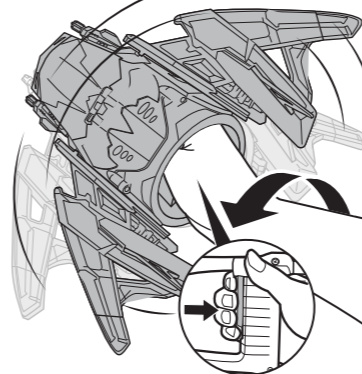

5. Release trigger and position handle and Batjet as shown to enter missile mode.

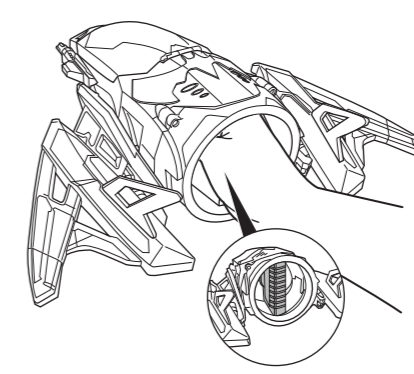

front panel

INSTRUCTION SHEET SPECIFICATIONS

Toy:	
Toy No.:	Y9465
Part No.:	0920
Trim Size:	A5
Folded Size:	
Type of Fold:	
# colors:	One
Colors:	1C+1C
Paper Stock:	White Offset
Paper Weight:	70 lb.
EDM No.:	