

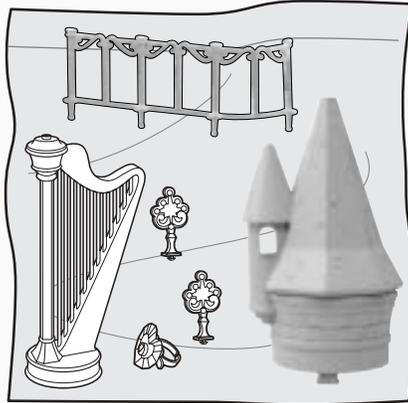
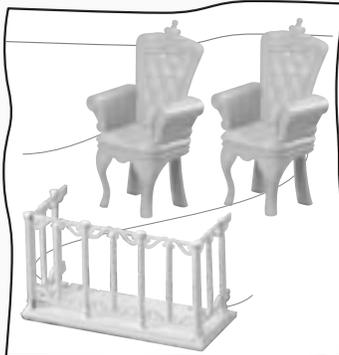
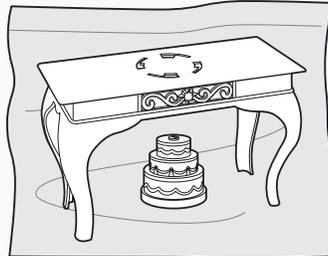
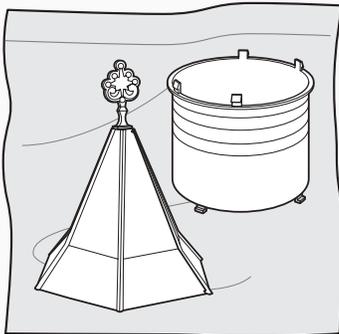


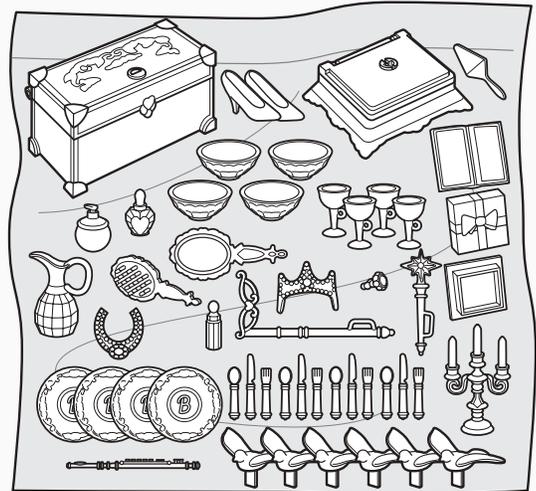

# Musical Fantasy Castle™ Play Set

## INSTRUCTIONS

### Contents

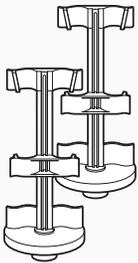

### WARNING:

**CHOKING HAZARD** – Small parts.  
Not for children under 3 years.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel, Inc. office listed below.

Keep these instructions for future reference as they contain important information.

*Requires 3 AA alkaline batteries, not included. Dolls and fashions not included.*

© 2003 Mattel, Inc. El Segundo, CA 90245 U.S.A. All Rights Reserved. Helpline 1 800 524 TOYS.

3+




B1351-0920


# Open & Assemble

Follow steps **1** to **32** by number as shown.

Attach labels by number **(1)** as shown.

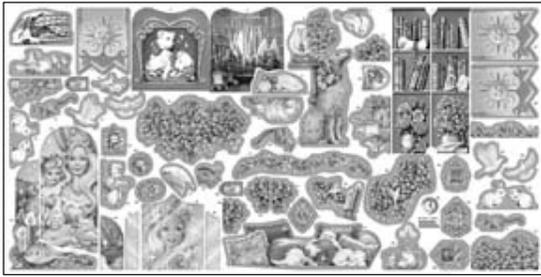


**1**

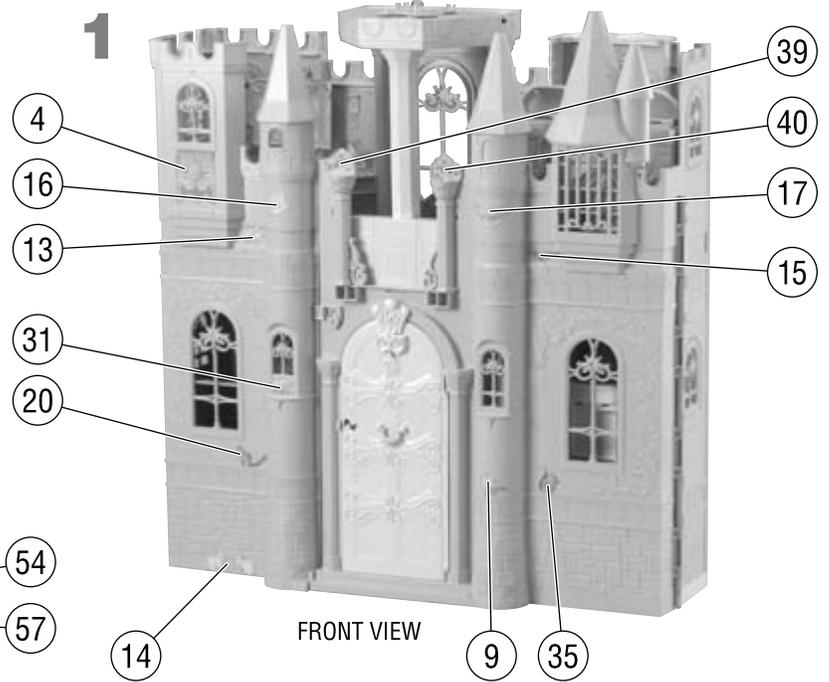



FRONT VIEW

**2**

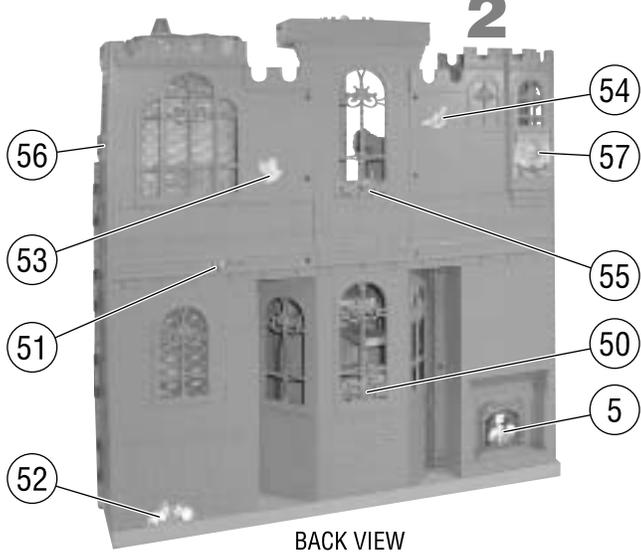


BACK VIEW

**3**

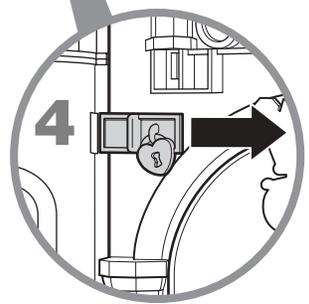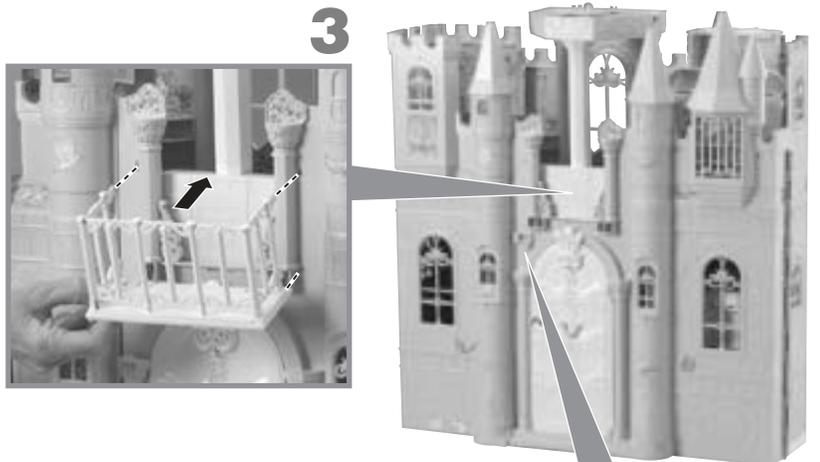



Open latch.

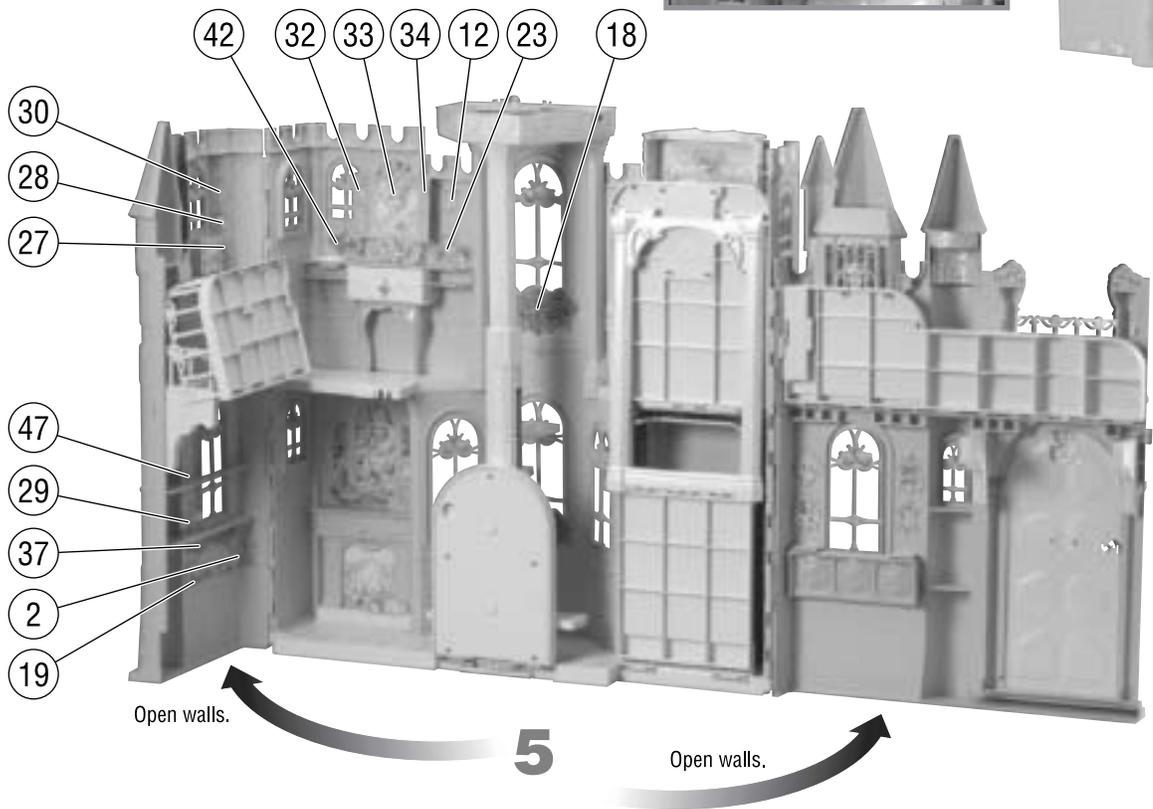


Open walls.

Open walls.

# 6-11

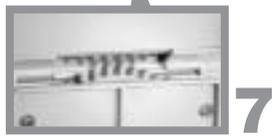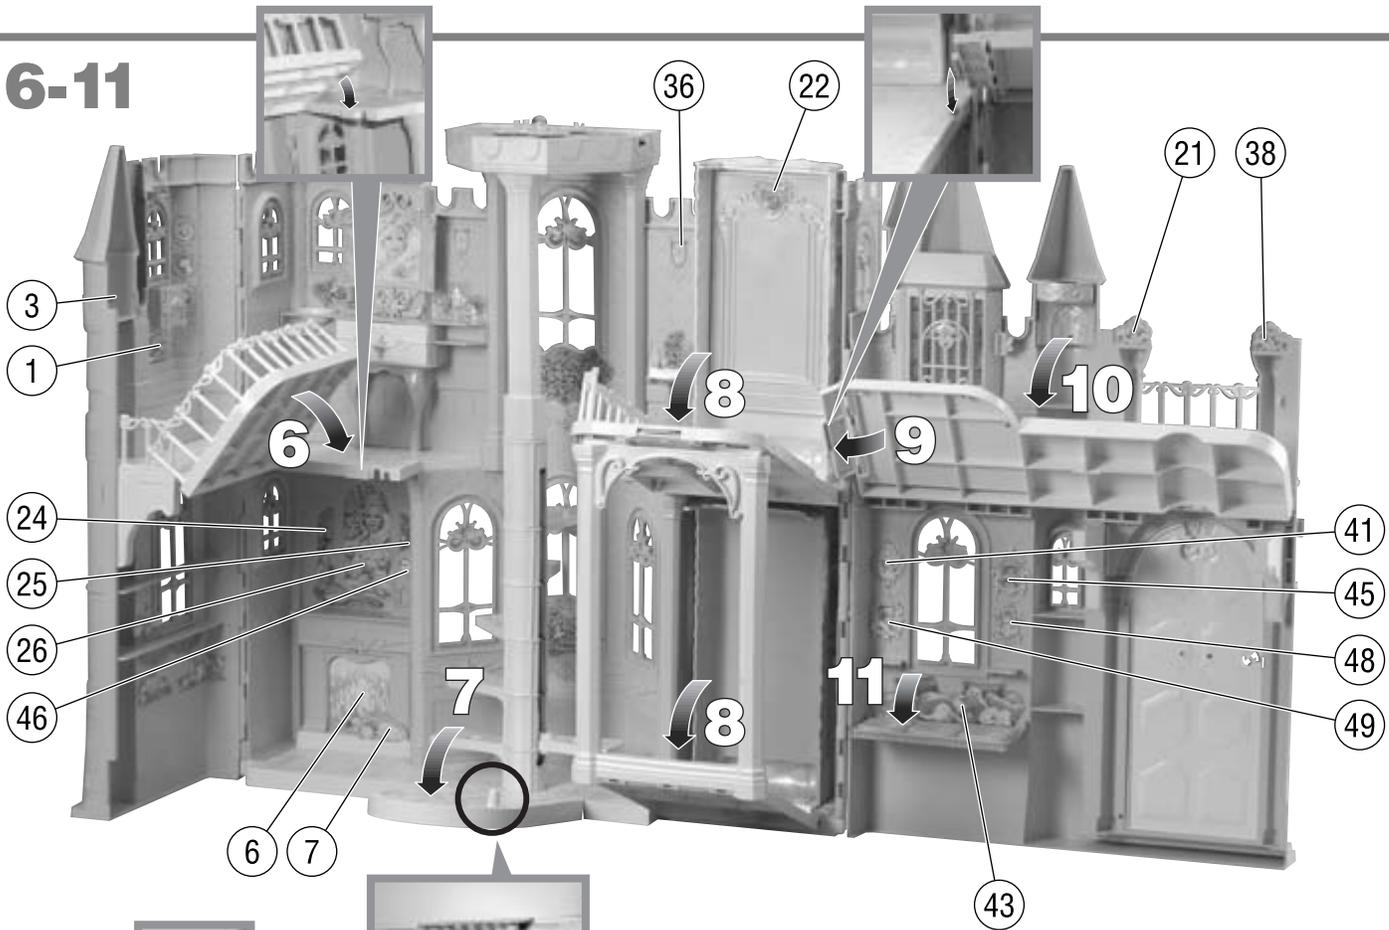

If platform does not lower all the way, check to make sure the gears are properly aligned by turning the circled knob.

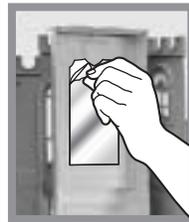

**16**  
Peel off clear protective coating from "mirror".



# 12-18









## 19 Install Batteries

Unscrew 1 battery door screw with Phillips screwdriver (not included), and remove door. Insert 3 AA alkaline batteries as shown. Requires 3 AA alkaline batteries, not included. For longer life, use only alkaline batteries. Dispose of batteries safely. Replace door. Replace batteries when light becomes dim and/or sounds become distorted.

### Battery Safety Information:


1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.
11. Do not dispose of in fire as batteries may explode or leak.

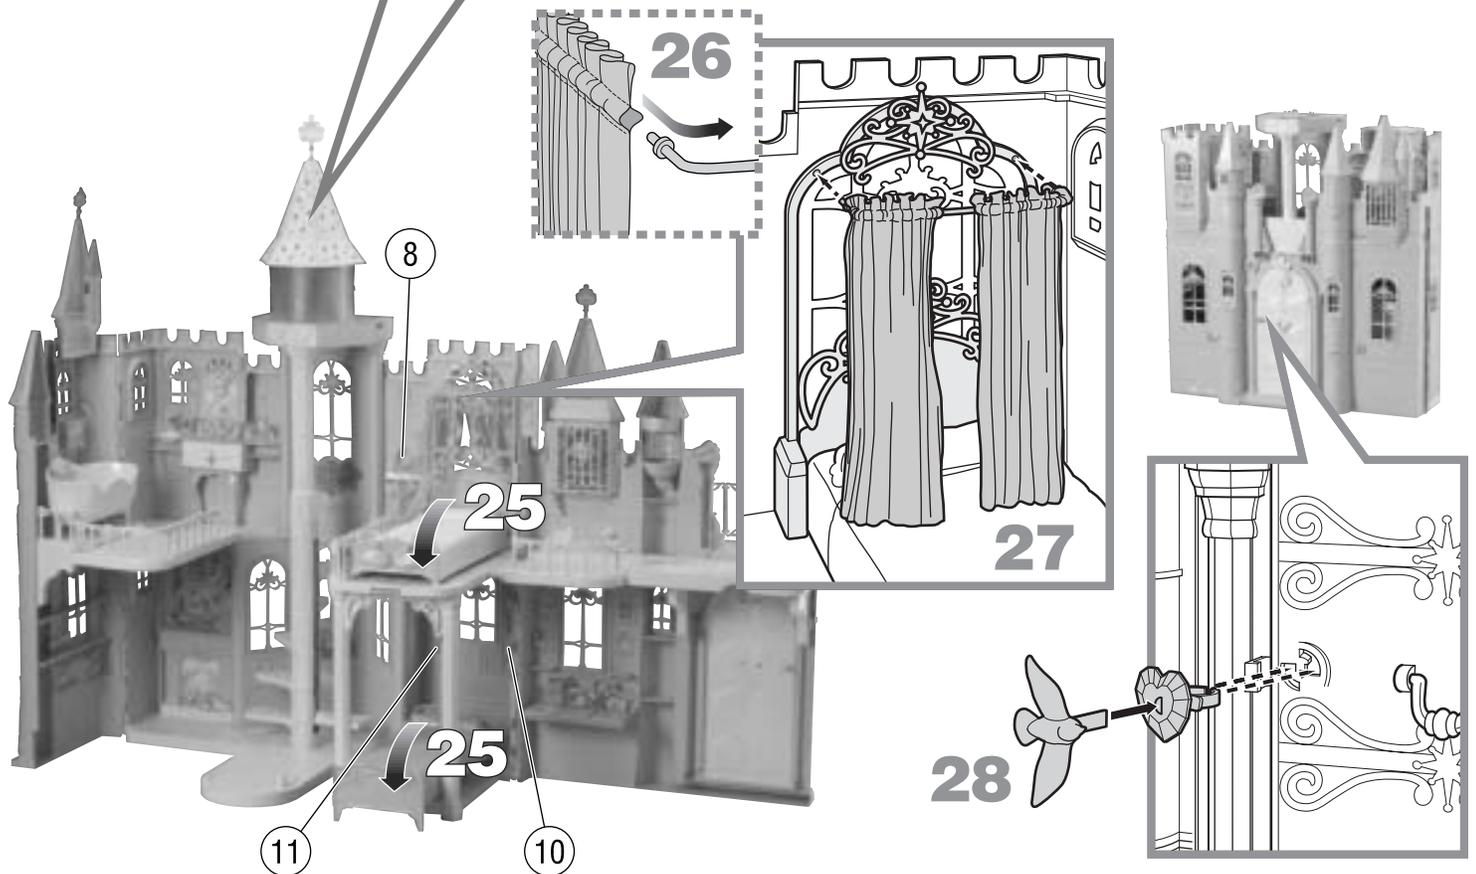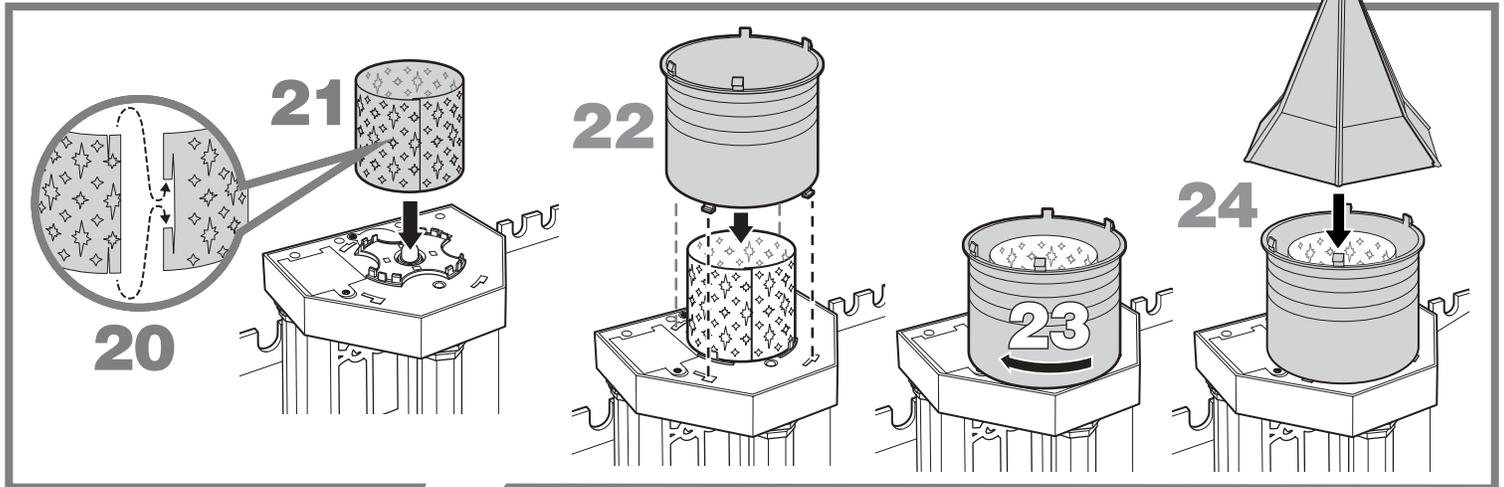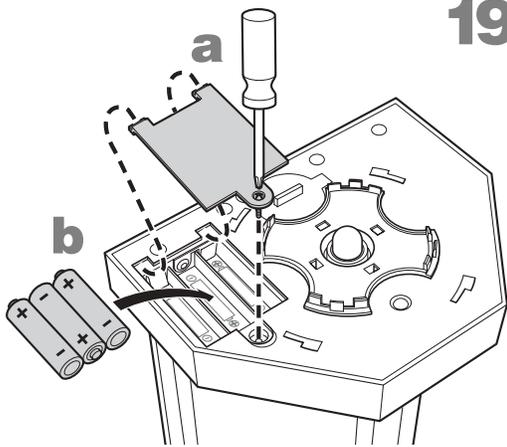

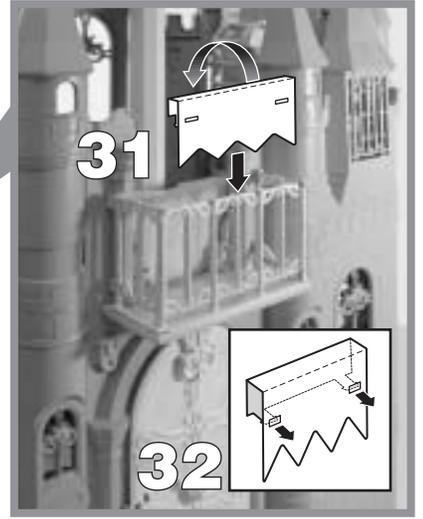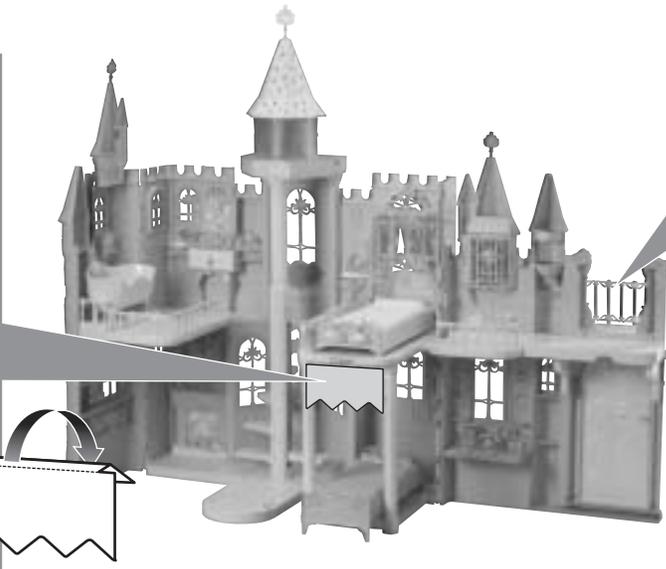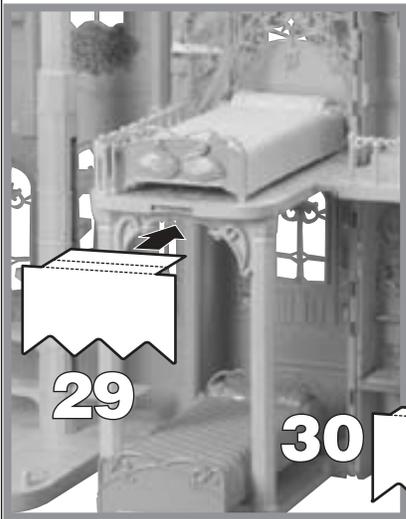

## Change Bulb (Lower)

Remove Turret Assembly (Reverse steps 21 to 24).  
 Unscrew 1 bulb cover screw with Phillips screwdriver (not included), and remove bulb assembly.

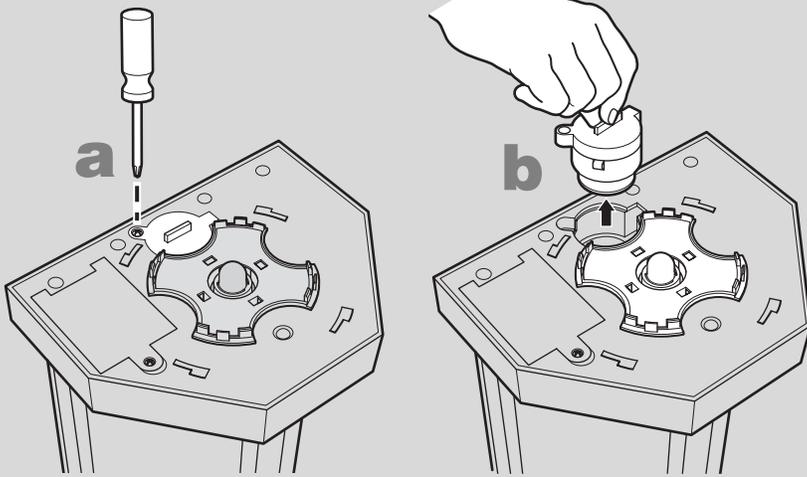


### Lower Bulb Assembly




Flip bulb assembly upside-down.

Remove bulb cover and replace bulb with a PR4 or K4 replacement bulb or equivalent.  
 Reassemble bulb cover and reinstall bulb assembly. Reinstall Turret Assembly.

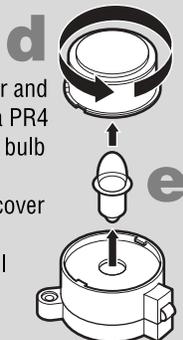




## Change Bulb (Upper)

Remove Turret Assembly (Reverse steps 21 to 24).  
 Remove dome, bulb and bulb base.  
 Replace bulb with a PR4 or K4 replacement bulb or equivalent.  
 Reinstall dome.  
 Reinstall Turret Assembly.

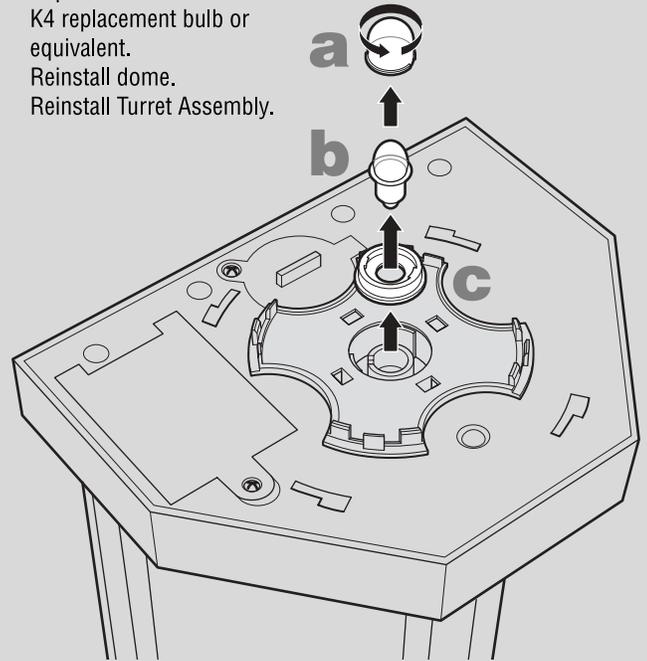

### Upper Bulb Assembly

# Play Time

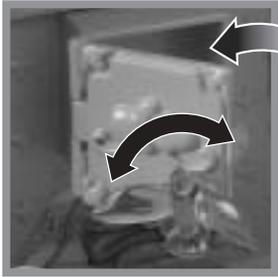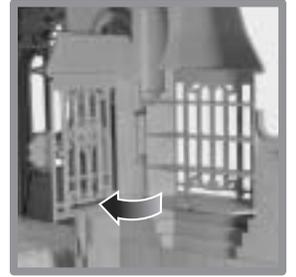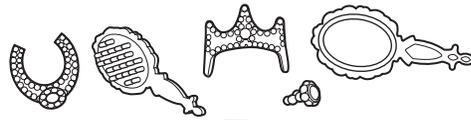

**Vanity Drawer**  
Hide jewelry here. Move up to reveal secret drawer. Move down to release secret drawer.



**Bath Chest**  
Hide perfume here.

**Bird Cage**  
Open door. Insert birds.




**Bathtub**  
Removable bath tub can be filled with water.


**Magic Wand**  
Hide behind clock.

**Bird Bath**  
Removable bird bath can be filled with water.


## Table



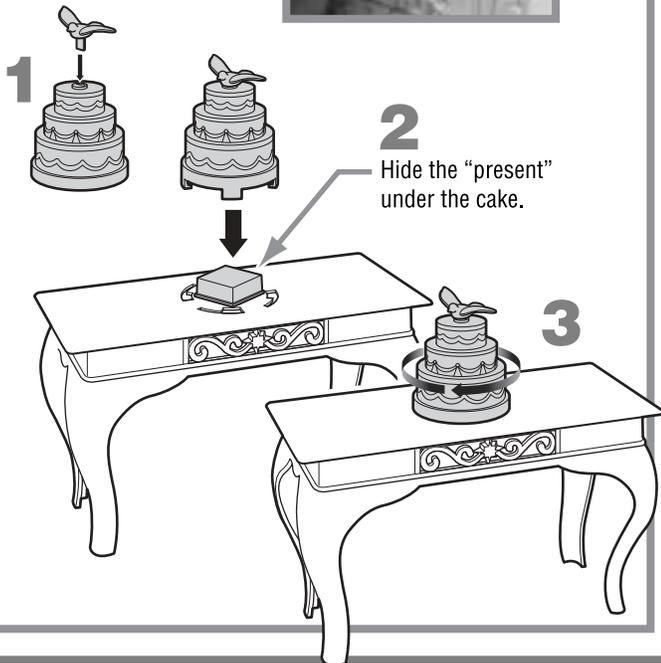


## Jewelry Box

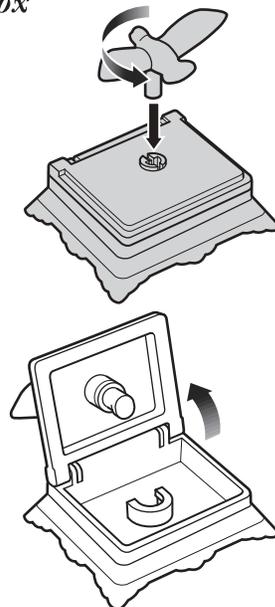


## Musical Harp

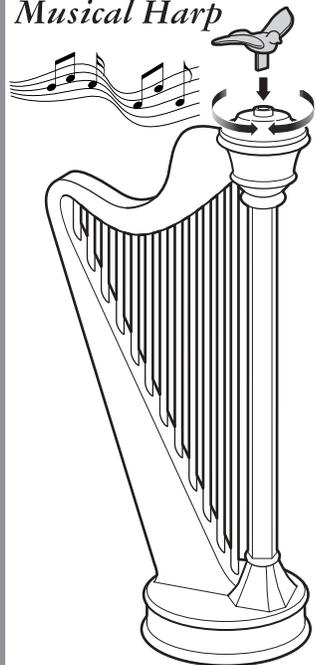

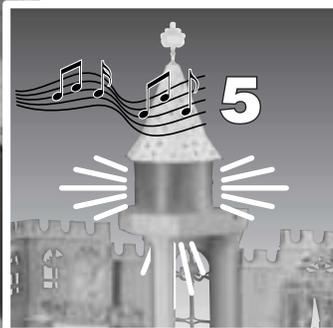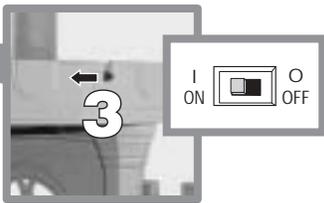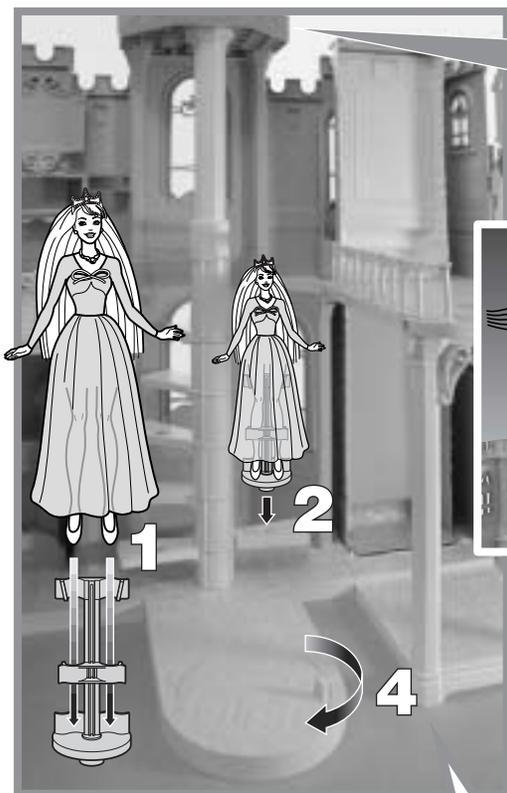

**Elevator Stair**

1. Attach doll to doll stand.
2. Place doll in elevator stair.
3. Move switch left to "ON" (I).
4. Turn handle to raise elevator stair.
5. Lights and sound are activated.

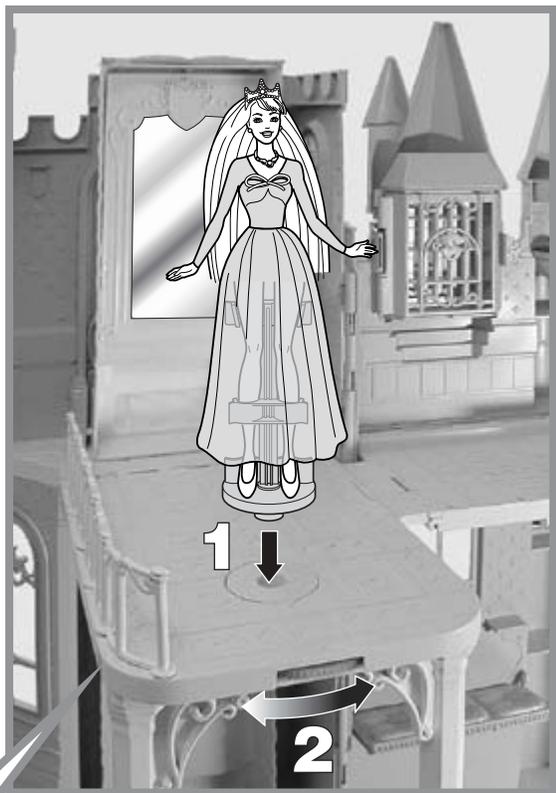


**Twirling Platform**


1. Attach doll stand to platform as shown.
2. Turn wheel to make the doll "twirl" in front of mirror.

*Dolls and fashions not included.*

**Magic Chest**



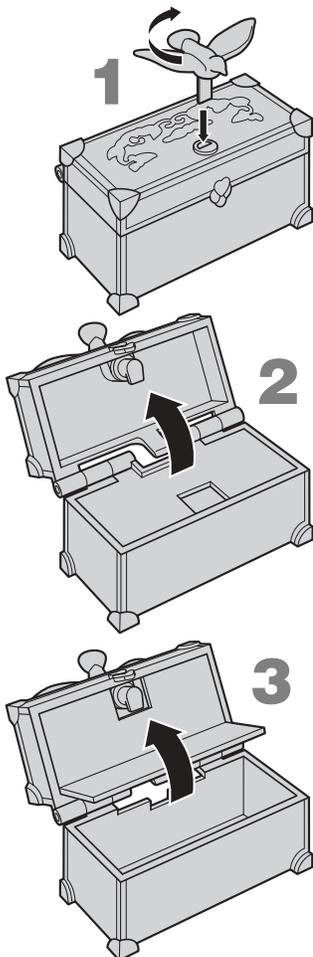


**Kelly Doll Stand**

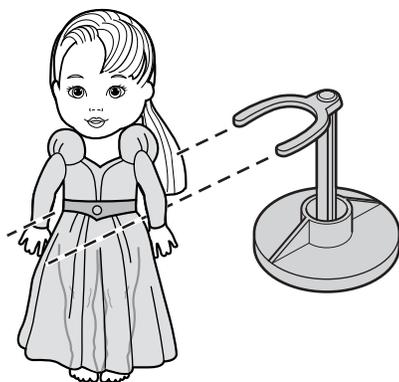

Use the smaller doll stand to attach Kelly® doll to the Elevator Stair or Twirling Platform.


**Ring**

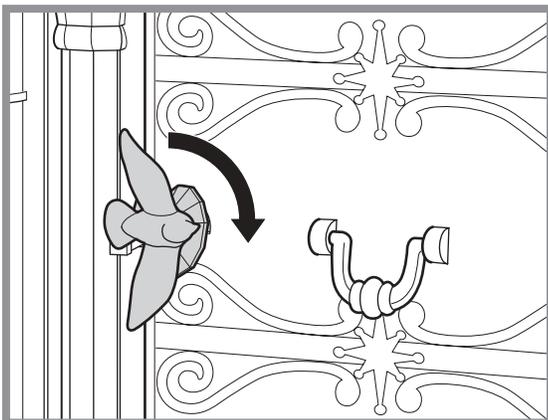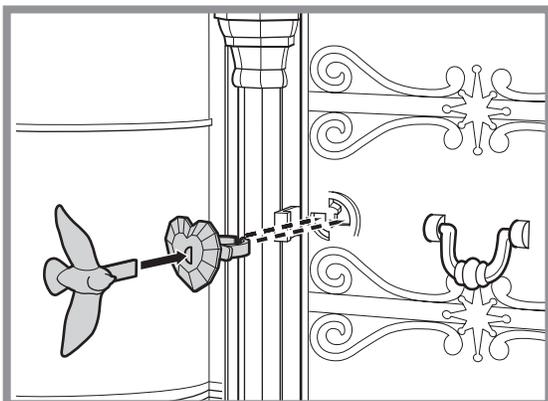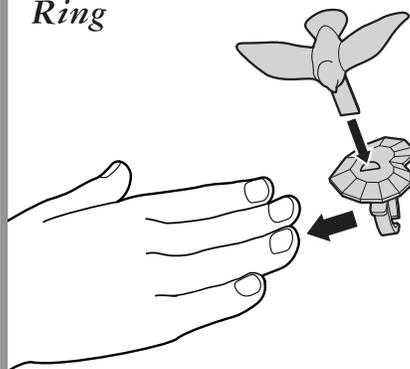



**Open Front Door**

Insert ring in keyhole.  
Turn clockwise to release latch. Open door.

# Storage

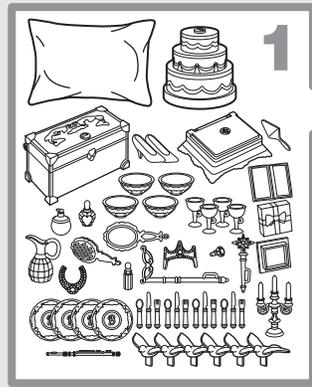

1

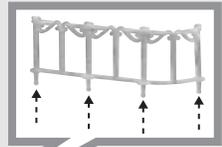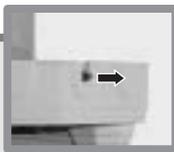


2



3




4

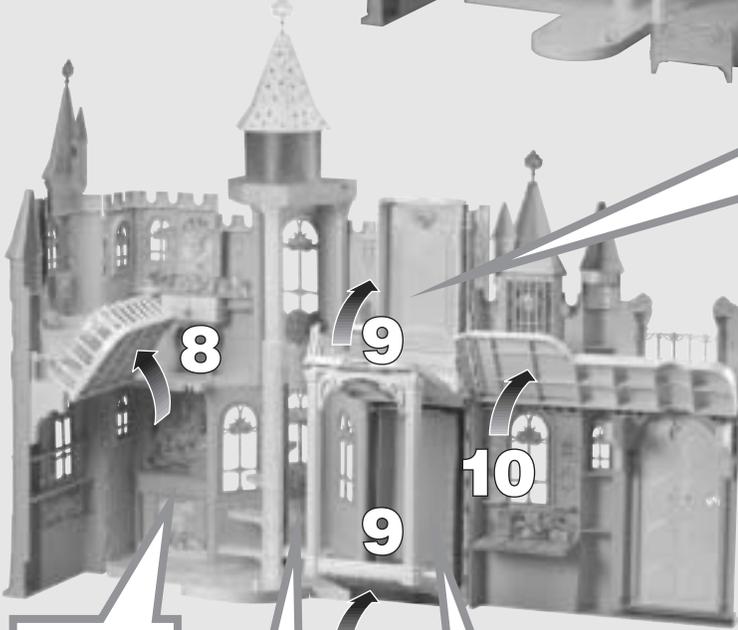

8

9

10

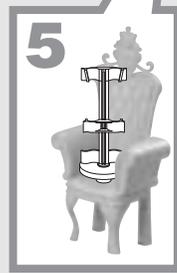


5



6



7

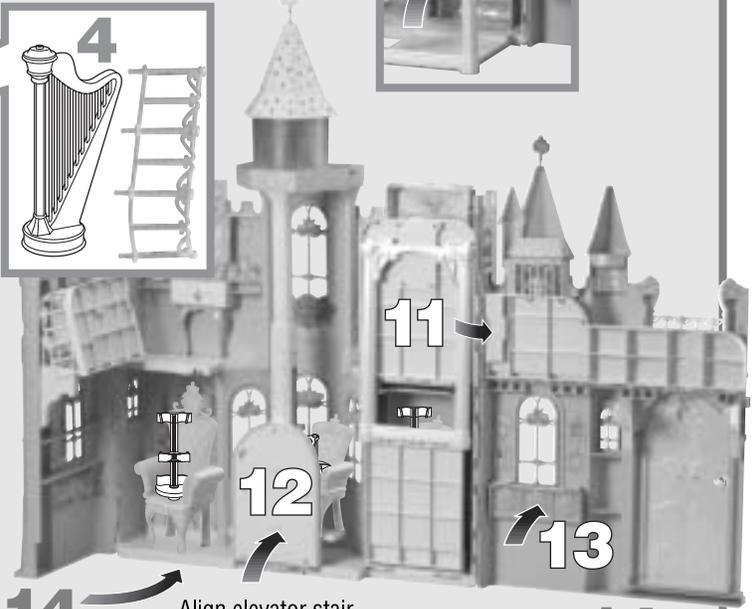

11

12



13

14

Align elevator stair to allow platform to close.

14

15  
Close latch.

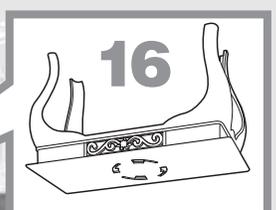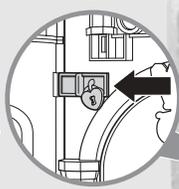

16

**CONSUMER INFORMATION**

**MATTY MATTEL™ TOYS**

YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.  
333 Continental Blvd.  
El Segundo, CA 90245 USA

**1(800)524-TOYS**

**WE ARE DEDICATED TO QUALITY PRODUCTS.**

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-665-6288.  
 Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.  
 Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.  
 Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China  
 Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.  
 Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.



**INSTRUCTION SHEET  
SPECIFICATIONS**

Toy: Barbie Castle  
Toy No.: B1351  
Part No.: 0920  
Trim Size: 34" W x 11" H  
Folded Size: 11" H x 8.5" W  
Type of Fold: three folds  
# colors: One  
Colors: Black  
Paper Stock: White Offset  
Paper Weight: 70 lb.  
EDM No.: 015

**4 PANEL  
Folding Dummy**

