


Fisher-Price® MagnaDoodle™


B2185

ALPHA PAD™


Please keep this instruction sheet for future reference, as it contains important information.
Adult assembly is required. No tools necessary for assembly.

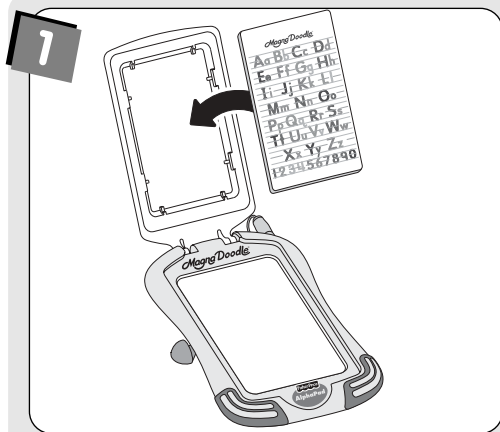


- Open the lid on the Alpha Pad™.
- With the writing facing toward you, fit the flash card into the lid.

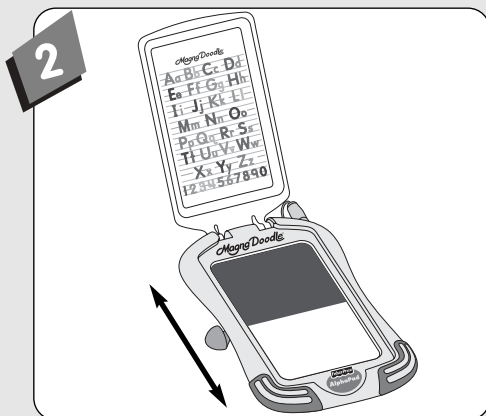

IMPORTANT! Before first-time use, completely darken the drawing screen with the magnetic pen. Slide the eraser lever slowly up and down to clear the drawing screen. Repeat this procedure several times to enable the drawing screen to create the clearest, darkest images.

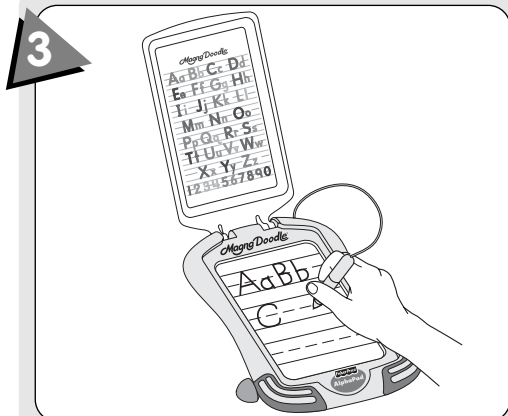


- With the flash card in place, lower the lid on the Alpha Pad™.
- Lift the lid to see writing guidelines on the screen.
- Practice writing the alphabet and numbers using the magnetic pen on the screen.

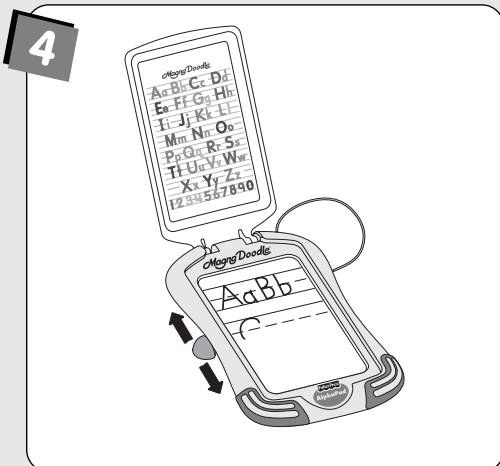


- To erase the drawing screen, slide the eraser lever slowly up and down.

5

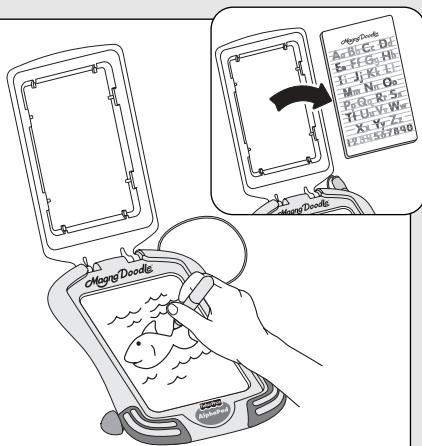

- To draw, doodle or play games without the writing guidelines, simply lift and remove the flash card.

6

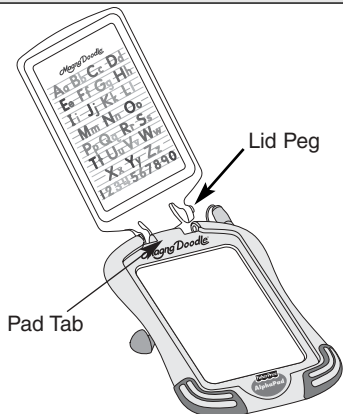

- The lid is designed to come off the pad easily.
- To re-attach the lid, position it face down and underneath the tab on the pad. At an angle, insert one of the pegs on the lid into the hole in the pad. Then push the other peg on the lid into place in the pad.

IMPORTANT! To avoid damage to the drawing screen:

- Use only the magnetic pen included.
- Do not use regular pencils, pens, crayons, or markers.
- Keep Alpha Pad™ away from extreme heat sources such as ovens, heaters, radiators and hot vehicles.



Do not apply heavy pressure or force to the drawing screen. Heavy pressure is not necessary and could damage the drawing screen. A light touch makes a black line.



Use only the special, magnetic pen included. Do not use any other object on the drawing screen.

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For other countries outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Discover what's possible™
www.fisher-price.com