




3-in-1 Baby Explorer™

INSTRUCTION SHEET

Please keep these instructions for future reference as they contain important information.

PARTS

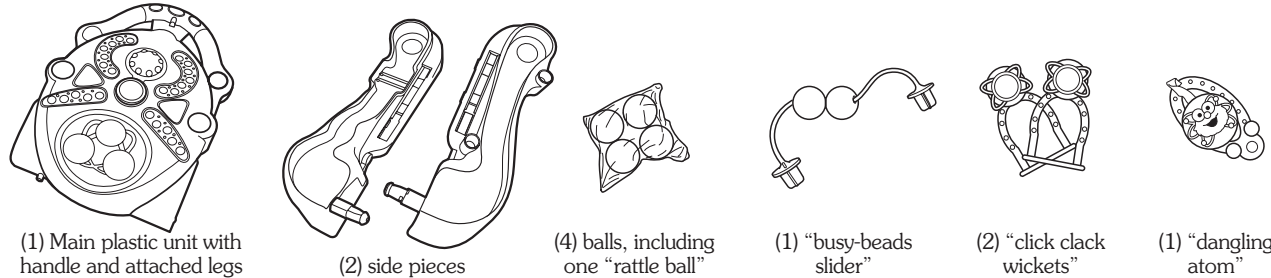


BATTERY INSTALLATION

- It is better to install the batteries before assembling the product.
- Before installing the batteries, make sure the mode switch is in the **OFF** position. The mode switch is located on the top of the handle on the main plastic unit.
- The battery compartment is located on the back of the main plastic unit.



Unscrew and lift cover away from back of product.
Replace batteries as shown.

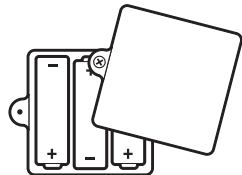

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.

- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Batteries included are for demonstration purposes only. For longer life use only alkaline batteries. Requires 3 "AA" (LR6) batteries.

ASSEMBLY

- Insert the 2 side pieces into the main plastic unit.

NOTE: This is a one-time assembly. Once these pieces are assembled they cannot be taken apart.





- Insert the ends of the legs into the sliding tracks on the side pieces. Once the legs are inserted into the tracks they are locked in.

NOTE: If you prematurely trigger the locking mechanism you can release it with the switch located on the bottom of each side piece.

- Insert the "click-clack wickets" and the "busy-beads slider" into their holes on the side pieces.

Now you are ready to play!

NOTE: If the toy does not function properly during play, turn switch **OFF** and **ON** to reset.

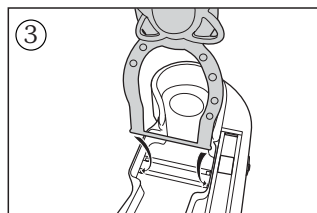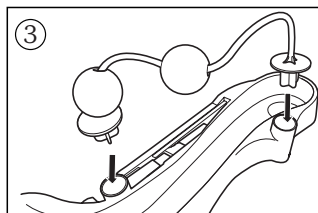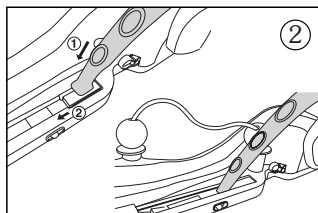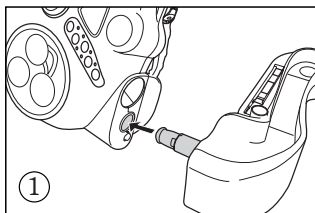

ADULT ASSEMBLY REQUIRED

Fisher-Price
ITEM NO. B2587




STAGE 1: Gym – for Newborn

STAGE 1 is for the newborn baby who is not yet ready to crawl or sit up.

- Position the 3-in-1 Baby Explorer into **STAGE 1** by releasing the two leg-lock switches located by the sliding track of the leg assembly.
- Slide the legs along the tracks until the 3-in-1 Baby Explorer is in the **STAGE 1** position and you hear the legs snap into place.

ATTENTION: BOTH LEGS MUST BE PROPERLY SNAPPED INTO PLACE FOR PROPER STABILITY AND SUPPORT.

- Slide the mode switch to **MODE 1**.
- Be sure the wheels in the front of the walker are locked in the UP position.
- Insert the "dangling atom" into the top of the main unit until you hear it snap into place.
- Position the baby under the 3-IN-1 BABY EXPLORER so he can see himself in the mirror and reach the dangling atom and other activities.
- When the baby hits the dangling atom it will trigger music, sound effects, character phrases, and flashing lights.

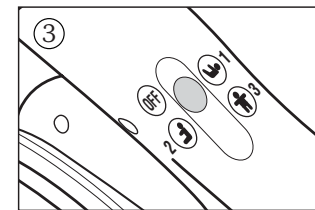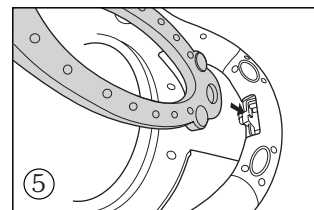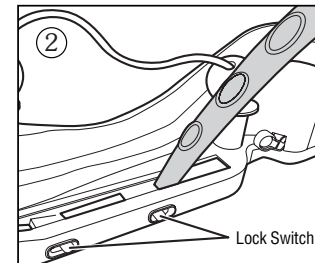



STAGE 2: Activity Center – for Infant

When baby is able to sit up he or she is ready for **STAGE 2**.

- Position the 3-in-1 Baby Explorer down into **MODE 2** by releasing the two sliding leg lock-switches.
- Slide the legs along the tracks until the 3-in-1 Baby Explorer is in the **MODE 2** position and you hear the legs snap into place.

ATTENTION: BOTH LEGS MUST BE PROPERLY SNAPPED INTO PLACE FOR PROPER STABILITY AND SUPPORT.


- Remove the dangling atom by releasing the lock switch located on the top of the main unit.
- Slide the mode switch to **MODE 2**.
- Be sure the wheels in the front of the walker are locked in the UP position.
- The 3-in-1 Baby Explorer is now lying flat so baby can crawl around it to play with the various activities.
- When the baby places the balls into the chutes, it will trigger music, sound effects, character phrases, and flashing lights.
- The faster the balls are placed in the chutes, the faster the sounds will layer on top of each other.

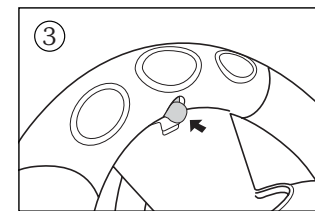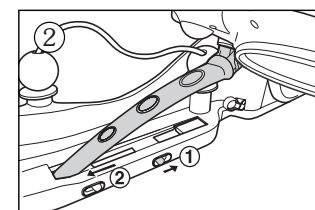

STAGE 3: Walker – for Toddler

When baby is ready to start walking he or she is ready for **STAGE 3**.

- Convert the 3-in-1 Baby Explorer into a walker by releasing the leg-lock switches and converting the unit back up into the same position as **STAGE 1**.
- Bring down the two wheels at the front of the walker by releasing the lock-switch on each wheel.
- Slide the mode switch to **MODE 3**.
- As baby walks along pushing the 3-in-1 Baby Explorer, it will trigger music, sound effects, character phrases, and flashing lights.
- The faster your baby pushes the walker, the faster the lights, sounds and music will play.

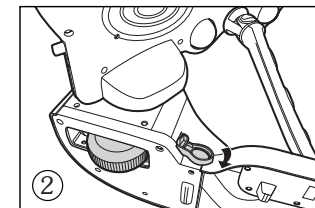

TOY SLEEP MODE:

If the toy is not played with for more than 12 seconds it will automatically shut-off to preserve battery life. Any play will re-activate the toy.

©2002 Sesame Workshop. "Sesame Street," "Sesame Workshop" and their logos are trademarks of Sesame Workshop. All rights reserved. Watch Sesame Street on PBS and 123 Sesame on Noggin.
Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.
PRINTED IN CHINA.
Manufactured for Fisher-Price. ©2002 Mattel, Inc. All Rights Reserved.
Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.
Packaging and address should be retained for future reference.
Mattel Canada Inc., Mississauga, Ontario L5R 3W2.
You may call us free at 1-800-665-6288.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.
Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.
Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.
Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.

Questions or Comments?
1-888-892-6123

Fisher-Price
ITEM NO. B2587