






 


3+



B2607-0920 G1

Miracle Moves™ Doll

INSTRUCTIONS CONTENTS

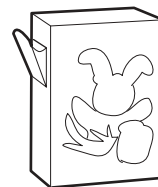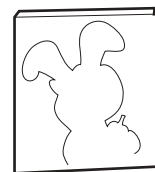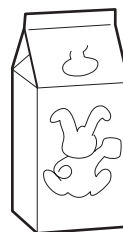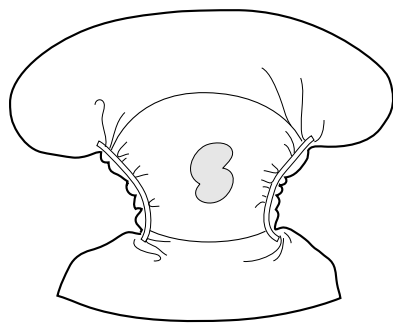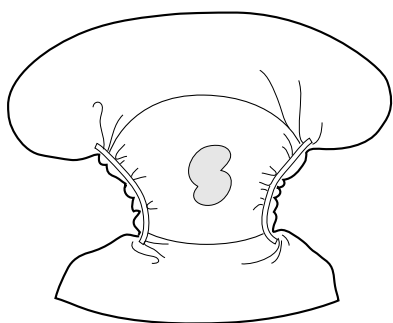

Requires 3 "AA" cell alkaline batteries (not included).

Colors and decorations may vary from those shown.

Please remove everything from the package and compare to the contents shown here.

If any items are missing, please contact your local Mattel, Inc. office listed below.

Keep these instructions for future reference as they contain important information.

© 2003 Mattel, Inc. El Segundo, CA 90245 U.S.A. All Rights Reserved. Helpline 1 800 524 TOYS.

INSTALL BATTERIES


Open both sets of fabric fasteners on back of doll. Unscrew battery cover with a Phillips screwdriver (not included) and set aside.

Insert three "AA" cell alkaline batteries as shown. Replace cover.

USE ONLY ALKALINE BATTERIES:

Toy may not function or operate with other types of batteries.

When the product does not respond or the volume decreases, change the batteries.

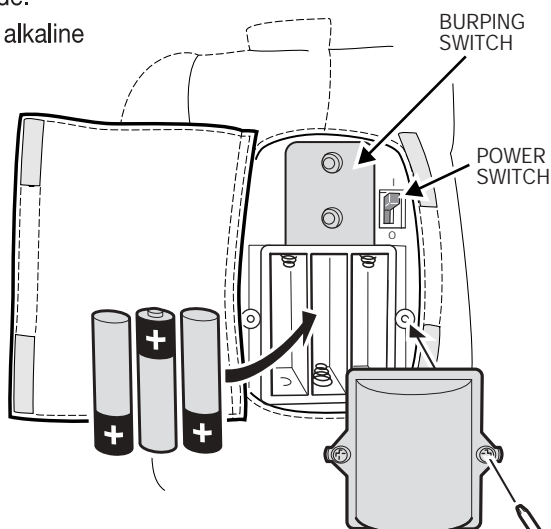

BATTERY SAFETY INFORMATION

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.
11. Do not dispose of in fire as batteries may explode or leak.

SKIN CARE HINTS

- If skin is dirty, clean with warm (85°-100° F / 29°-37° C) water and dish washing detergent or with household alcohol.
- After cleaning, allow to dry at least 2-5 minutes before use.
- Talc can be applied to smooth the surface. (Use only a very small portion.)

DO NOT do the following:


- Longtime exposure to direct sunlight.
- Apply excessive water to skin.
- Apply any type of ink.
- Apply nail polish.
- Clean with ammonia or any ammonia based detergents.
- Expose to high heat.
- Expose to sucrose-based or greasy food.

IMPORTANT NOTE: Please protect your baby's delicate skin from indentations, punctures or wrinkles. Keep her away from sharp objects, irregular surfaces and excessive heat. For instance, do not leave her out in the hot sun or inside a car on a hot day, and do not stuff her in a toy box.

TO PLAY



Water toys sometimes get messy. Protect play surface. After each use, drain, rinse, clean, and dry.

1 Move power switch to ON (I).

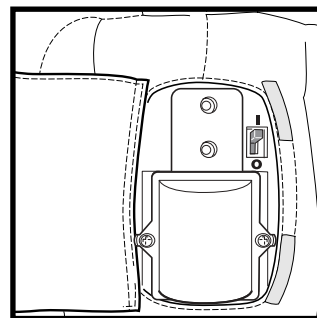

2 Put diaper on doll.

Make sure that diaper is attached to doll so that the change area makes contact with the sensor on doll's "bottom".

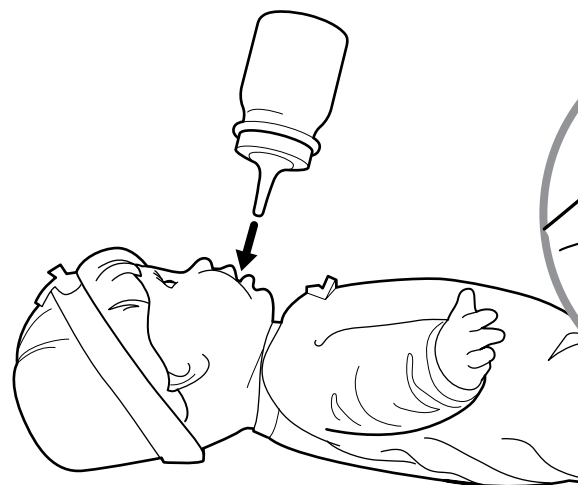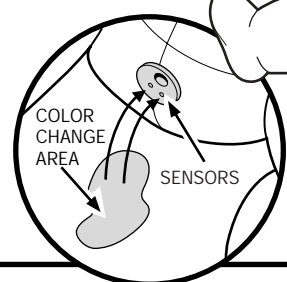

4 "Feed" doll.

Insert nipple all the way into doll's mouth. This will activate the feeding mechanism. "Feed" your doll with her bottle. Press the bottle into her mouth and squeeze the bottle. Do not overfeed, one bottle is enough.




6

Color change area. Open the doll and the water. Replace the color change area. Once the doll will "happy". Color change area. Exposure to sunlight.

TO PLAY




Water toys sometimes get messy. Protect play surfaces before use. After each use, drain, rinse, clean, and dry all items.

1 Move power switch to ON (I).

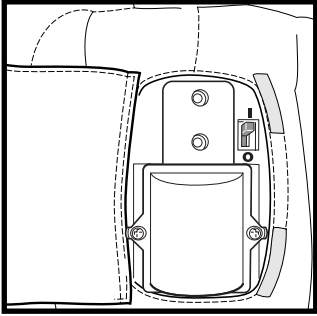

2 Put diaper on doll.


Make sure that diaper is securely attached to doll so that the color change area makes contact with sensor on doll's "bottom".

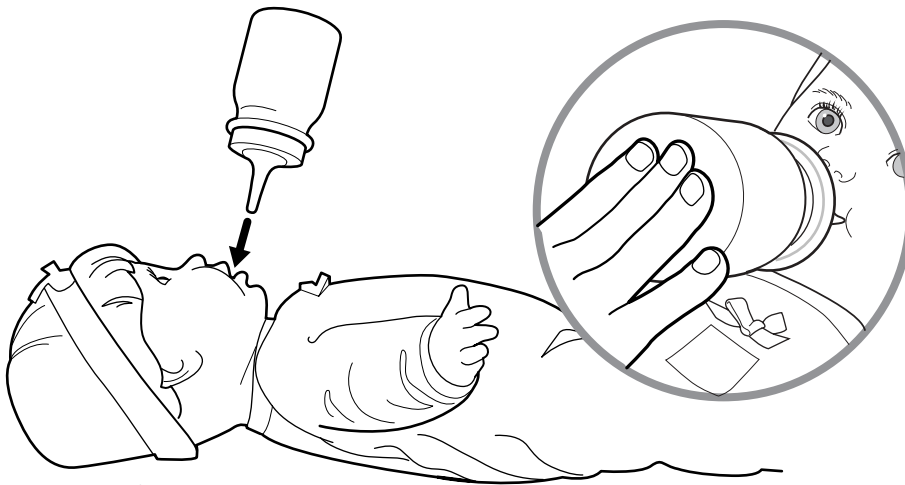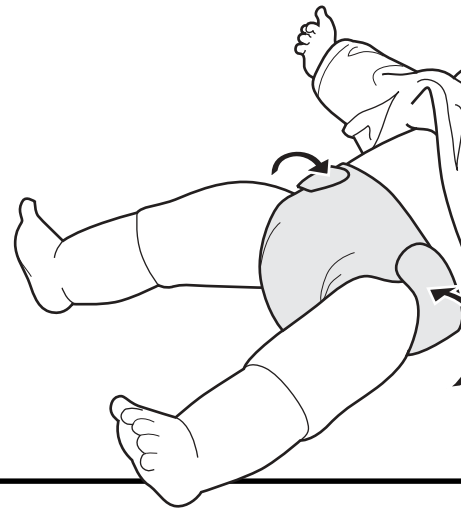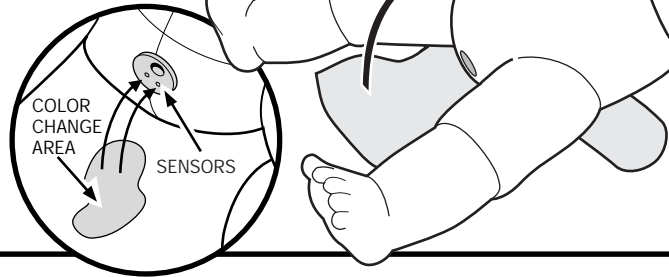

4 "Feed" doll.

Insert nipple all the way into doll's mouth in such a way that the tip goes into the hole located inside. This will activate sucking sounds.

"Feed" your doll with her bottle. Press bottle into her mouth and squeeze the bottle gently. Do not overfeed, one bottle is enough.

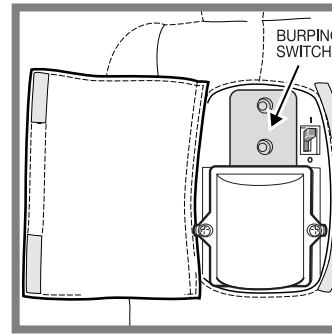

5 "Burp" doll.

When feeding time is over, you can burp your doll by placing her **upright** over you. Pat her repeatedly on her upper back (BURPING SWITCH) until she actually burps.

NOTE: After doll has been "fed", she will change her diaper when she is POSITIONED UPRIGHT.

Doll will fuss when she wets her diaper. It is time to change her diaper. See step 6.


6 Change diaper.

Color-change area on the diaper will change color when the doll is wet. Open romper and remove diaper. Dry doll and sensor with wipe. Set aside the wet diaper to allow it to air dry.

Replace the wet diaper with the other color change diaper that came with the doll. Doll may not "recognize" that it is wet with any other diaper.


Once the diaper is changed, "baby" will "know" that it is dry and will make happy giggling sounds.

Color change will last longer if you do not expose this toy to intense heat or direct sunlight for prolonged periods of time.

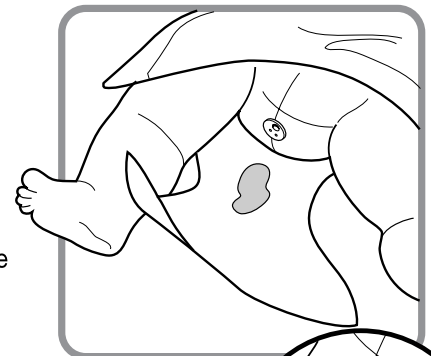

Color change area must make contact with sensors when diaper is replaced.

COLOR CHANGE AREA

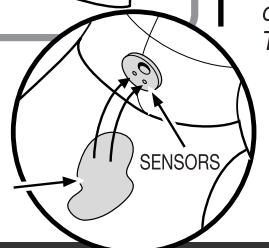



7

She'll know your doll is dry and any appropriate "sleep" sound. During the doll's "sleep" time, play with her "feeding" out.



faces before
ll items.

Securely
a color
ct with

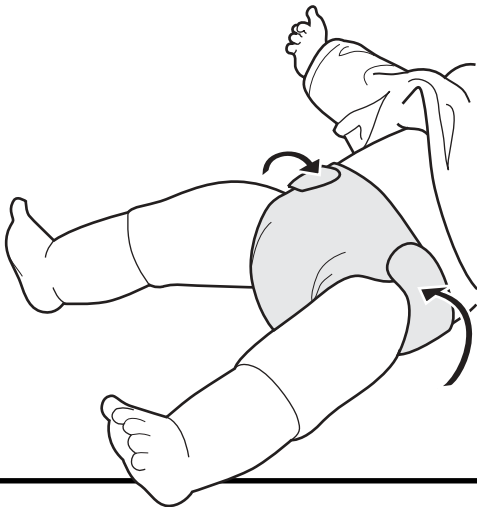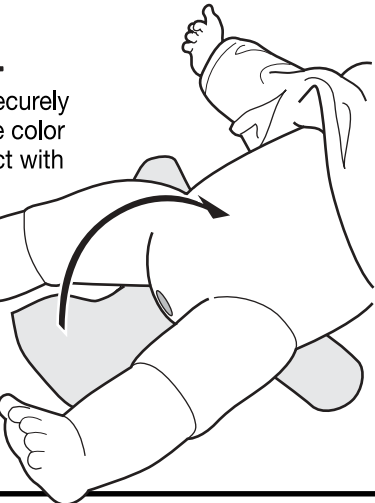


3 Fill doll's bottle with tap water.

Close tightly.
NO OTHER LIQUID is to be used aside from plain water.




in such a way that the tip goes
vate sucking sounds.
ottle
ently.

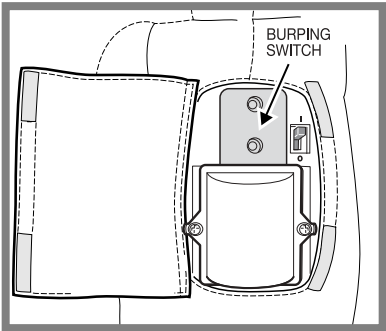


5 "Burp" doll.

When feeding time is over, you can "burp" the doll by placing her **upright** over your shoulder. Pat her repeatedly on her upper back (on the BURPING SWITCH) until she actually "burps"!
NOTE: After doll has been "fed", she will "wet" her diaper when she is POSITIONED UPRIGHT.
Doll will fuss when she wets her diaper. Then it is time to change her diaper. See step 6.

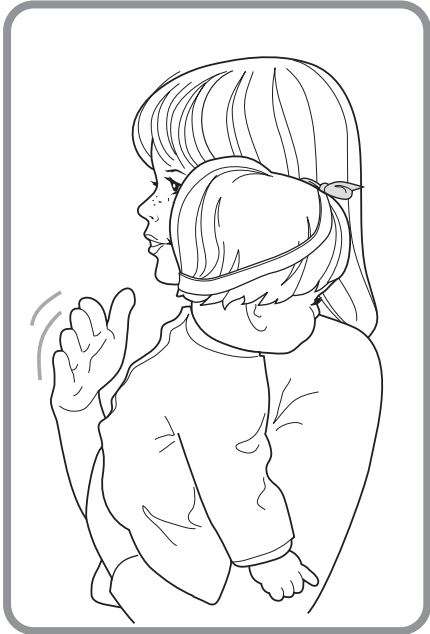


Change diaper.

change area on the diaper will
a color when the doll is wet.
romper and remove diaper. Dry
id sensor with wipe. Set aside
t diaper to allow it to air dry.
se the wet diaper with the other
change diaper that came with the
oll may not "recognize" that it is
th any other diaper.
he diaper is changed, "baby"
row" that it is dry and will make
giggling sounds.
change will last longer if you do not
this toy to intense heat or direct
t for prolonged periods of time.

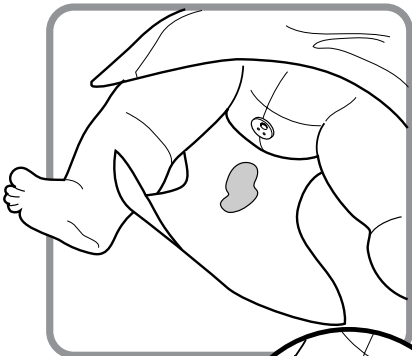

Color change area
must make contact
with sensors when
diaper is replaced.

COLOR CHANGE AREA

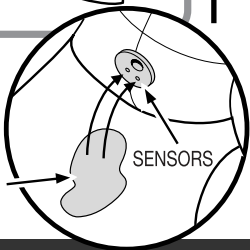

7 Lay your doll down.


She'll drift off to "sleep"! Place your doll upright to "wake" her. Doll will make random sounds and eye movements without any physical interaction for approximately 3 minutes. After this, it will go into mechanical "sleep" mode.

During the "sleep" mode, the doll may open her eyes partially. This is normal.

Placing the doll in a vertical position, from horizontal, or "feeding" the doll will bring it out of "sleep" mode.



NOTE: When play is finished, it is important that you turn the power switch to OFF (O) while the doll's eyes are OPEN. If you leave the doll ON (I), the doll will go into a "sleep" mode. After a few minutes in this mode, the doll will slightly open its eyes. This is normal.

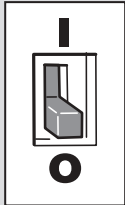

The World of Miracle Baby™

Fashions



47257




47258



47259

Accessories

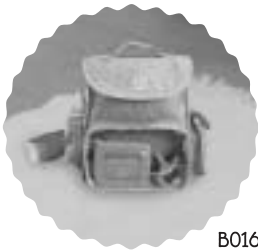


B0163



47260



B0168

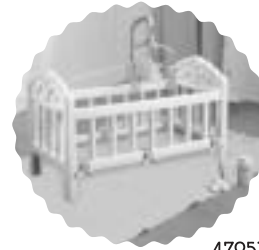

47953

Each sold separately and subject to availability.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

—This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Mattel Inc. 333 Continental Blvd., El Segundo, CA, (310) 252-2400

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If the device is so small that it is not practicable to place the statement on the product, it must be placed in a prominent location in the instruction manual, pamphlet, or the packaging supplied to the user.

Retain this address for future reference.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-665-6288.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe,

Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-TOYS.