

Fisher-Price®

www.fisher-price.com

“P” Pig
Oink! Oink!

Photo Fun
Learning™

B4358

Product features and decorations may vary from picture above.


Smart Screen Intelli-Table™

Assembly


- Please keep these instructions for future reference, as they contain important information.
- Adult assembly is required.
- Tool needed for battery installation:
Phillips screwdriver (not included).
- Turn the tabletop upside down on a soft surface.
- Insert and **“snap”** the legs into the slots in the tabletop.

Quick Hint

The legs can be easily removed. Simply press the tab and pull the leg out. Store the legs for future use.

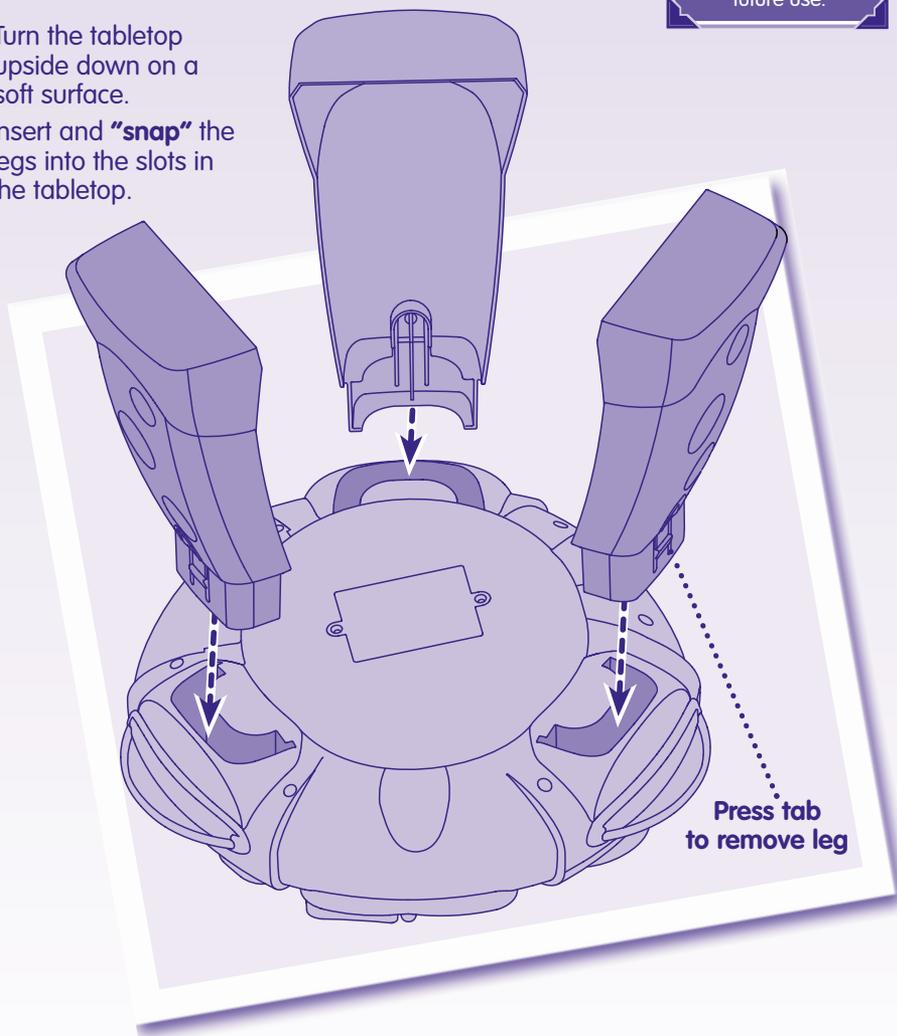


Battery Replacement

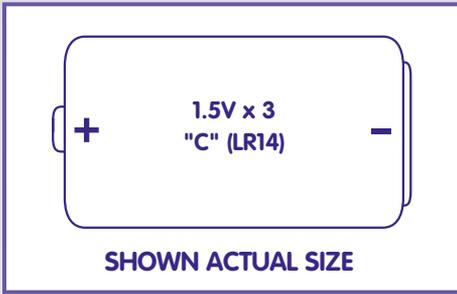

Note: We recommend replacing the batteries that came with this toy with new, **alkaline** batteries.

- This toy requires three "C" **alkaline** batteries (included).
- Turn the toy upside down on a soft surface. Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "C" (LR14) **alkaline** batteries.
- Remove the batteries and throw them away.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver.

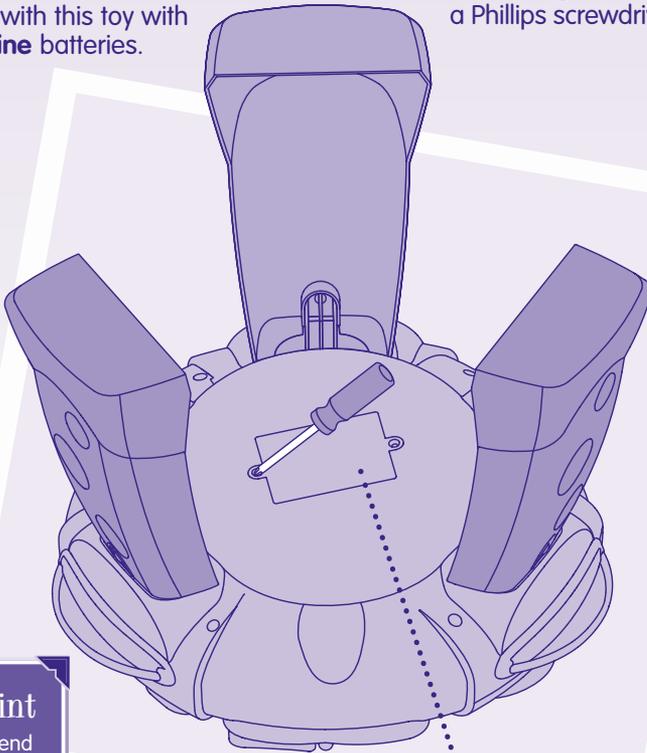

Quick Hint

When sounds, lights, or movement from/in this toy become faint or stop, it's time for an adult to change the batteries!

Quick Hint

We recommend the use of **alkaline** batteries for longer battery life!

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.

- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Product features and decorations may vary from picture above.

Welcome to Photo Fun Learning




Push or pull the throttle to move to a different object.
Now, spin, press and turn to learn the letter, name, color and sound of each object shown on the Smart Screen!

	Spin the Dial	Press the Horn	Turn the Palette
	Apple	"crunch"	a-apple red apple
	Ball	"boing"	b-ball green ball
	Car	"beep-beep"	c-car red car
	Dog	"woof-woof"	d-dog yellow dog
	Elephant	"trumpeting"	e-elephant grey elephant
	Frog	"ribbit"	f-frog green frog
	Grapes	"chomp, chomp"	g-grapes purple grapes
	Horse	"neigh"	h-horse brown horse
	Ice Cream	"slurp, slurp"	i-ice cream pink ice cream
	Juice	"gulp"	j-juice orange juice
	Kitten	"meow"	k-kitten white kitten

Musical Keys
Touch to play notes.

Phone
Press the keypad once for one ring; twice for two rings; three times for three rings, etc.

Shape Buttons
Turn the pages for different shape buttons. Press to hear the shape identified.

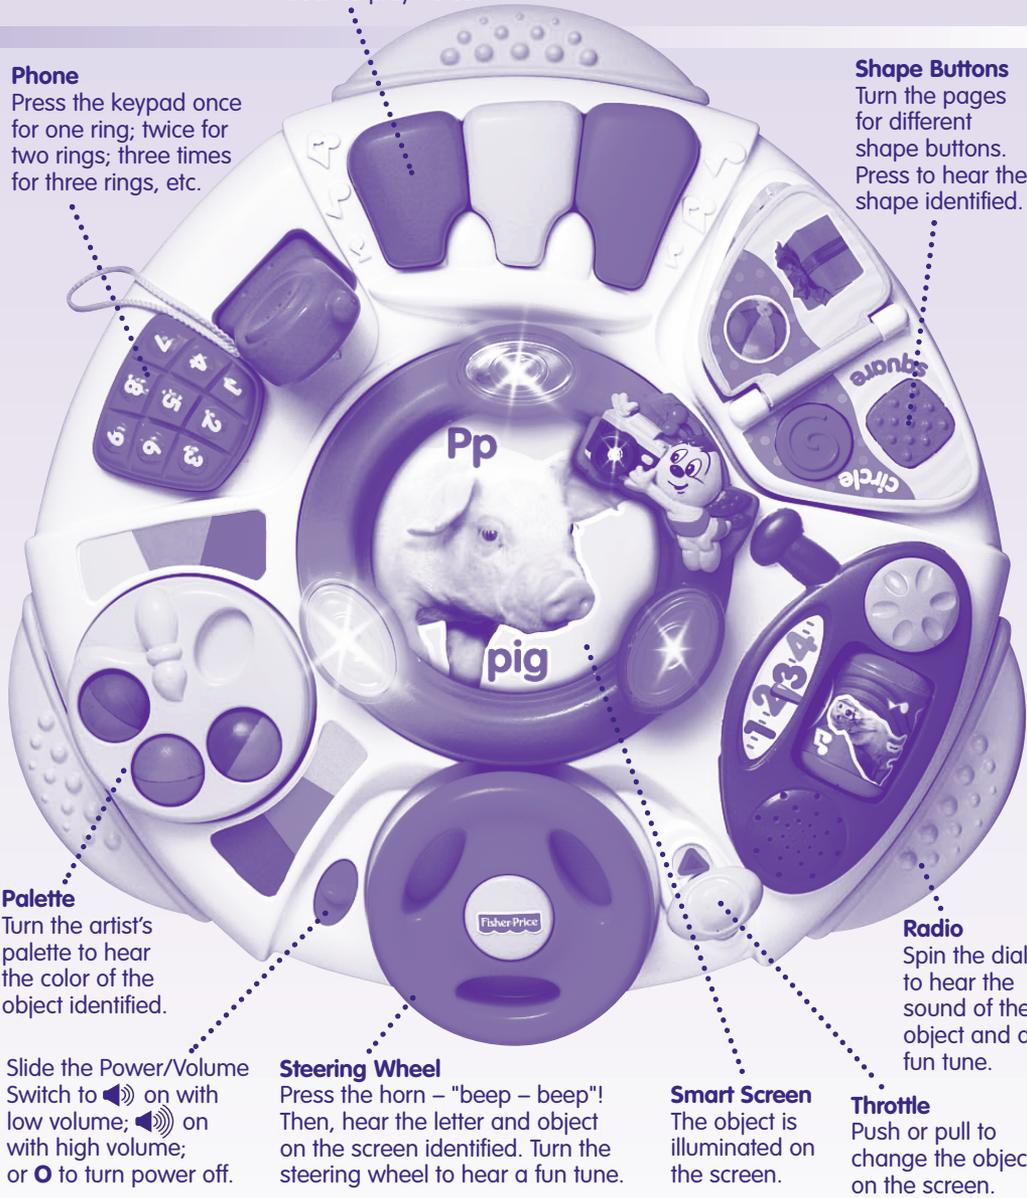

Palette
Turn the artist's palette to hear the color of the object identified.

Slide the Power/Volume Switch to on with low volume; on with high volume; or to turn power off.

Steering Wheel
Press the horn – "beep – beep"! Then, hear the letter and object on the screen identified. Turn the steering wheel to hear a fun tune.

Smart Screen
The object is illuminated on the screen.

Radio
Spin the dial to hear the sound of the object and a fun tune.

Throttle
Push or pull to change the object on the screen.

Important Note: Push the throttle to move images forward in the alphabet; pull the throttle to move images backward in the alphabet. When you are on A, you will not be able to push the throttle, you'll simply hear a "beep". When you reach Z, you will not be able to pull the throttle backward, you'll simply hear a "beep".

Product features and decorations may vary from picture above.

	Spin the Dial	Press the Horn	Turn the Palette	
	Lion	"roar"	l-lion	yellow lion
	Mouse	"squeak-squeak"	m-mouse	white mouse
	Nest	"chirp-chirp"	n-nest	brown nest
	Owl	"who-who"	o-owl	white owl
	Pig	"oink-oink"	p-pig	pink pig
	Quilt	"giggle-giggle"	q-quilt	yellow quilt
	Rattle	"shake-shake"	r-rattle	blue rattle
	Seal	"ar-ar"	s-seal	white seal
	Turtle	"dum-di-dum-di dum"	t-turtle	green turtle
	Umbrella	"rain"	u-umbrella	red umbrella
	Vacuum	"whirrrrr"	v-vacuum	green vacuum
	Whale	"splash"	w-whale	black whale
	Xylophone	"do-ray-mi-fa-so-la-ti-do"	x-xylophone	yellow xylophone
	Yo-Yo	"slide whistle"	y-yo-yo	purple yo-yo
	Zipper	"zzziip"	z-zipper	blue-zipper

Consumer Information

Care

- Wipe the toy with a clean damp cloth.
- Do not immerse this toy.
- This toy has no consumer serviceable parts. Please do not take this toy apart.
- Do not drop this toy on a hard surface.
- Keep this toy away from direct sunlight and excessive heat.
- Keep water, sand and dirt off this toy.

Questions?

We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052, U.S.A.

For other countries outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland. **Asia:** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that this product is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2003 Mattel, Inc. All Right Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China
B4358pr-0920

www.fisher-price.com