


## R©CKET PARK™

## **Playset**

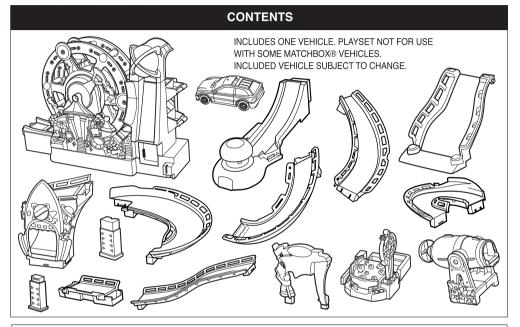

Please keep these instructions for future reference as they contain important information.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.


Consult the dealer or an experienced radio/TV technician for help. Mattel Inc.

333 Continental Blvd.

El Segundo

CA (310) 252-2400

NOTE: Changes or modifications not expressively approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

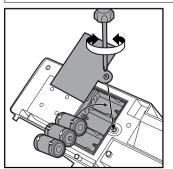


- · Use Phillips-head screwdriver (not included).
- · Requires 3 "C" (LR 14) Alkaline Batteries (not included).
- · For longer life, use only alkaline batteries.
- Replace batteries if the Ferris wheel moves slowly or if sounds distort or play slowly.


## Battery Safety Information


In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:


- · Non-rechargeable batteries are not to be recharged.
- · Rechargeable batteries are to be removed from the product before being charged (if designed to be removable)
- Rechargeable batteries are only to be charged under
- adult supervision (if designed to be removable). Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- · Do not mix old and new batteries.


- · Only batteries of the same or equivalent type as recommended are to be used.
- · Batteries are to be inserted with the correct polarity.
- · Exhausted batteries are to be
- removed from the product. · The supply terminals are not
- to be short-circuited.
- Dispose of batteries safely. · Do not dispose of this product in a fire. The batteries inside may explode or leak.

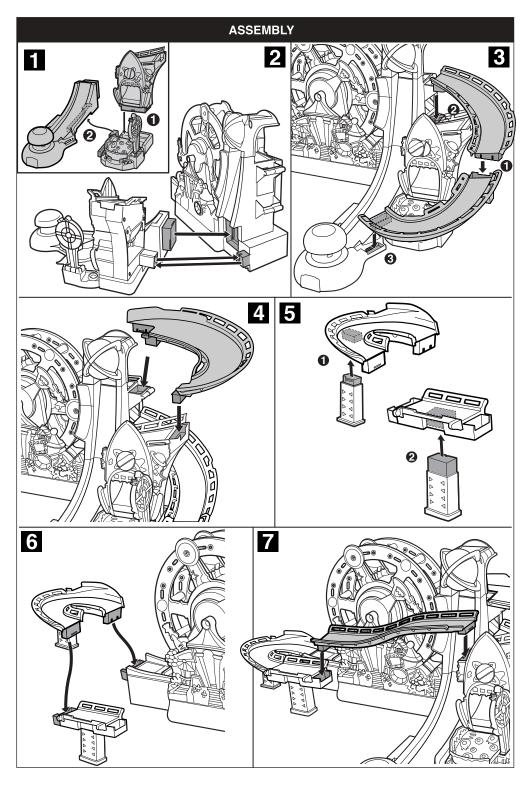

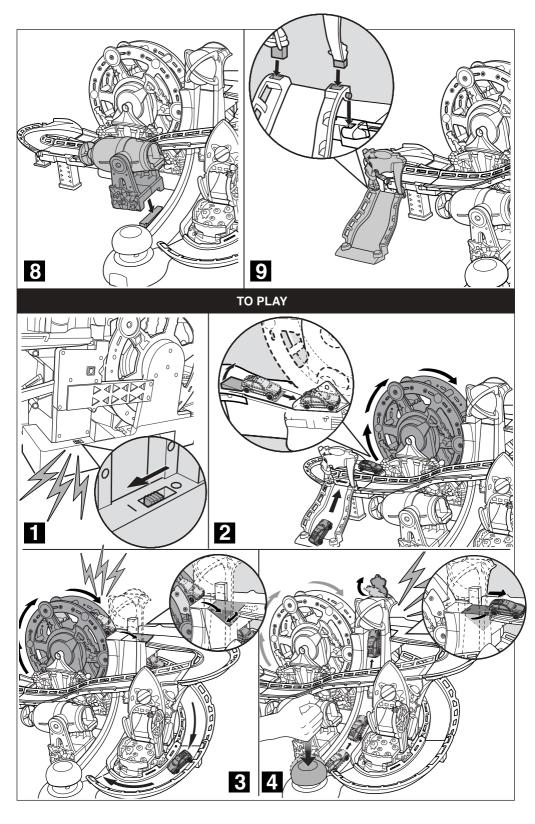

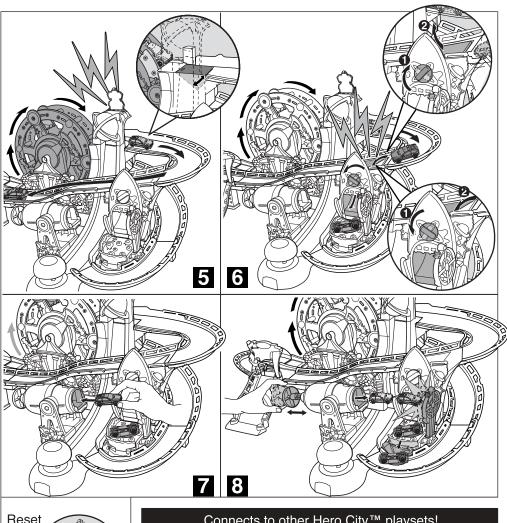

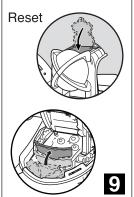

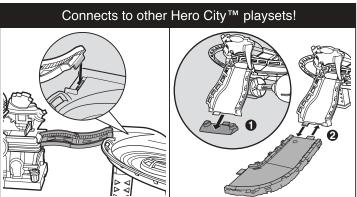

B4616-0920 B4616-9993-S1 H0717-0920 H0717-9993-S1



©2004 Mattel, Inc., Mt. Laurel, NJ 08054 U.S.A. **PRINTED IN CHINA.** All Rights Reserved. MATTEL, MATCHBOX and associated trademarks and trade dress are owned by Mattel, Inc. Retain this address for future reference: <u>Mattel U.K. Ltd.</u>, Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty Ltd., Richmond, Victoria 3121 - Consumer Advisory Service: 1300 135 312. Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel: 03-78803817, Fax: 03-78803867.