



# Magic Rattle™ Pooh

## INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

### BEFORE YOU BEGIN:

Please remove and discard the "Try Me" pull-tab from the bottom of the toy, located near the battery compartment. Once it is removed, there will no longer be an announcer's voice to prompt you.

### HOW TO PLAY

- To begin play, **press POOH's tummy to activate the doll.**
- Shake the rattle near POOH and he will wobble, speak, and sing.
- Stop shaking the rattle and POOH will stop.

### TOY SLEEP MODE:

- If the toy is not played with for more than **30 seconds**, POOH will prompt the child to continue playing.
- POOH will prompt the child two more times before shutting down to preserve battery life.
- **Press POOH's tummy to resume play.**

### NOTE TO PARENTS:

- The rattle is not intended as a teether.

**Fisher-Price®**

C0143  
Asst. C3623

© Disney

Based on the "Winnie the Pooh" works by A.A. Milne and E.H. Shepard.

Visit the Disney website at [www.Disney.com](http://www.Disney.com)

Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.

**PRINTED IN CHINA.**

Manufactured for Fisher-Price. ©2003 Mattel, Inc. All Rights Reserved.

Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

Packaging and address should be retained for future reference:

Mattel Canada Inc., Mississauga, Ontario L5R 3W2.

You may call us free at 1-800-665-6288.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria 3121 - Consumer Advisory Service 1300 135 312.

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Dieadarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5,

13th Floor, Menara Lien Hoe, Persiaran Tropican Golf Country Resort, 47410 PJ.

Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.