 


INSTRUCTIONS

Contents

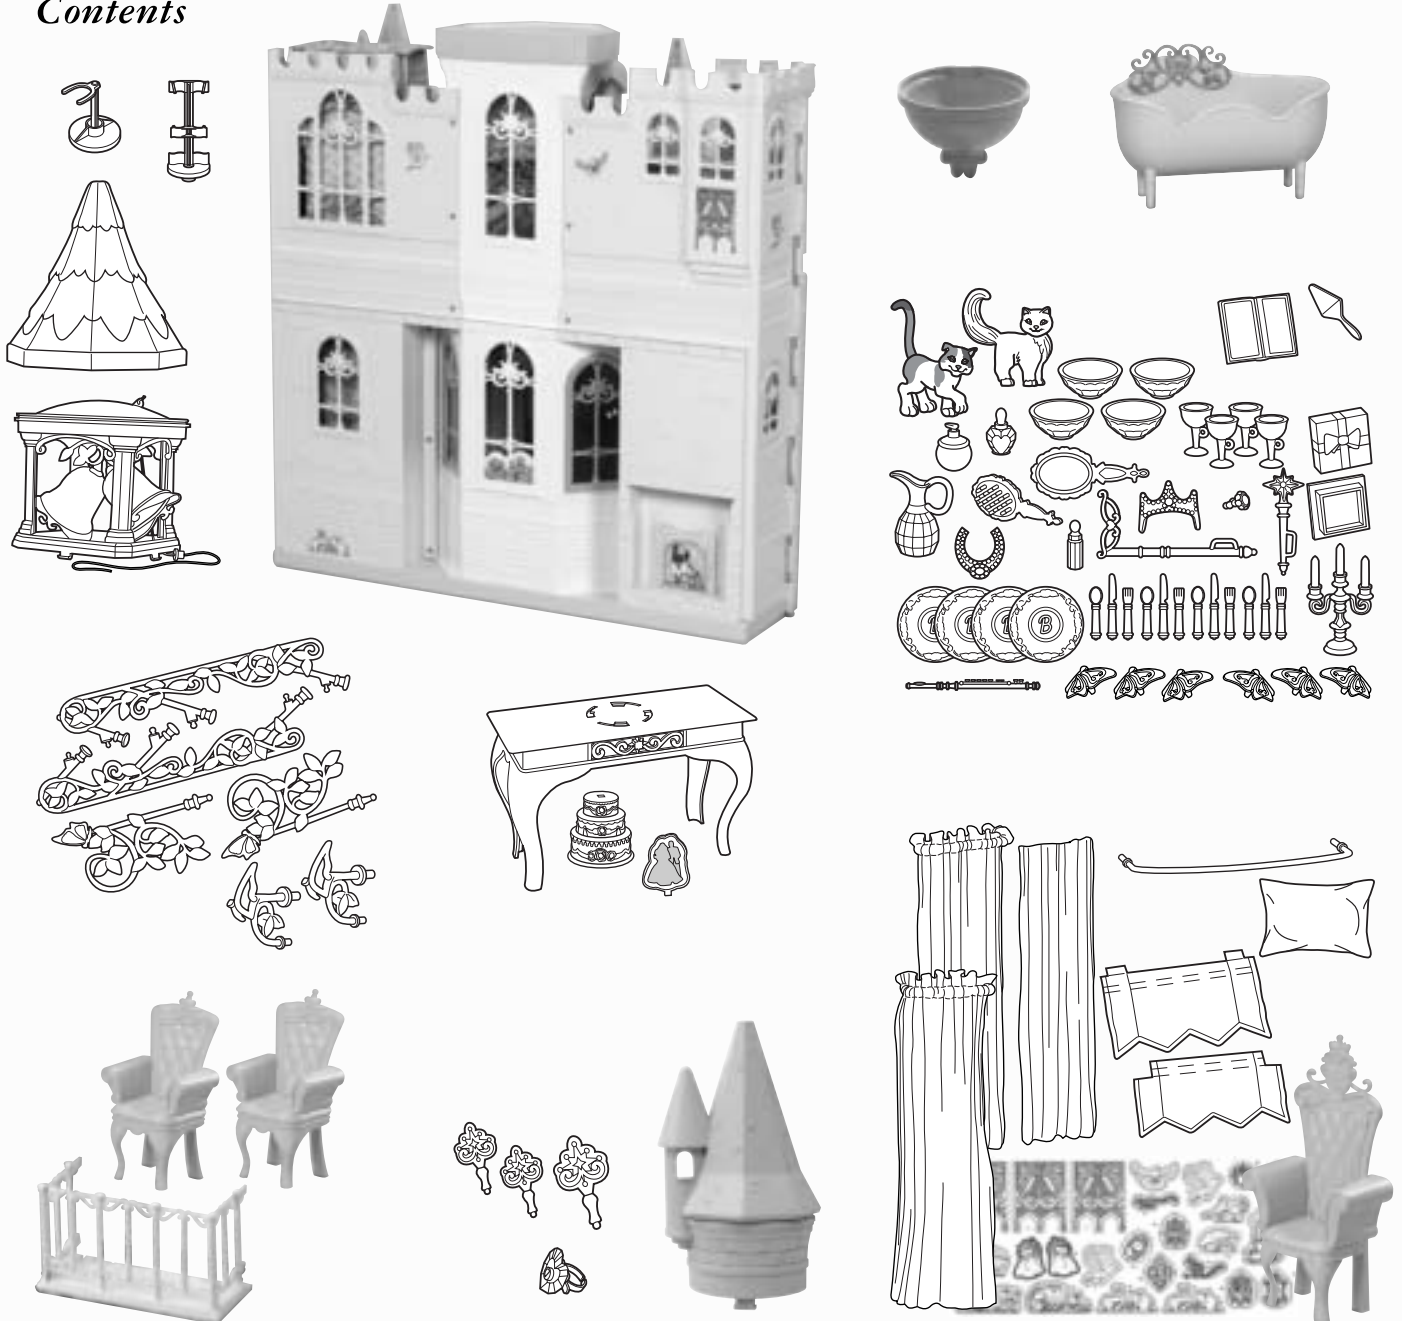

Please remove everything from the package and compare to the contents shown here.
 Keep these instructions for future reference as they contain important information.
 ADULT ASSEMBLY REQUIRED. Colours and decorations may vary from those shown.

Dolls sold separately, subject to availability. Requires 6 AAA alkaline batteries, not included. Dispose of batteries safely.

WARNING:
CHOKING HAZARD - Toy contains small balls and small parts.
 Not for children under 3 years.

© 2003 Mattel, Inc., El Segundo, CA 90245 U.S.A. All Rights Reserved. Tous droits réservés.



 
 
Install Batteries

Unscrew battery door screw(s) with Phillips screwdriver (not included), and remove door(s). Insert 6 AAA alkaline batteries, not included. For longer life, use only alkaline batteries. Replace door(s). Tighten screw(s). Replace batteries if sounds become garbled. Dispose of batteries safely

Battery Safety Information:

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used; they are only to be charged under adult supervision.

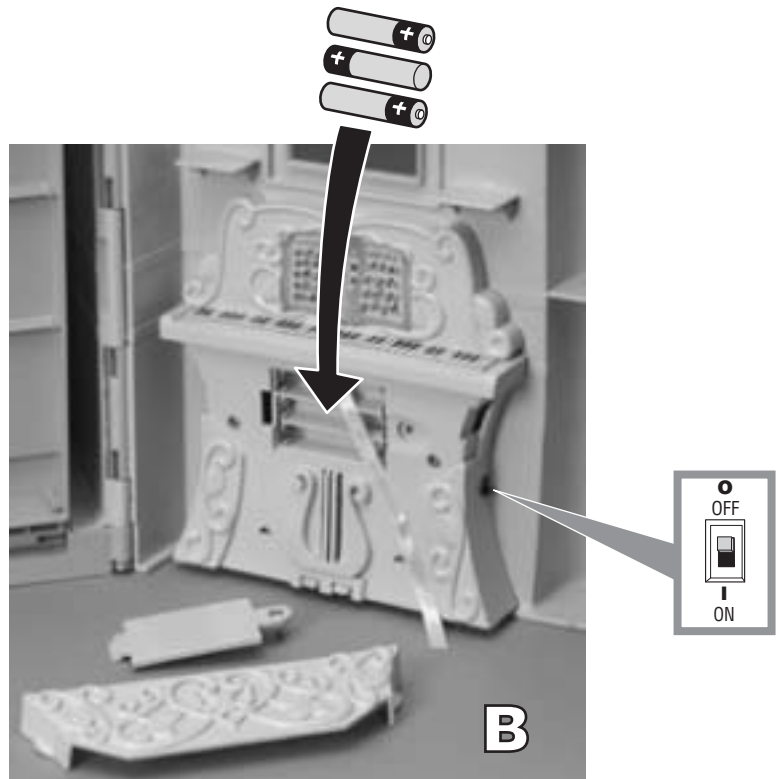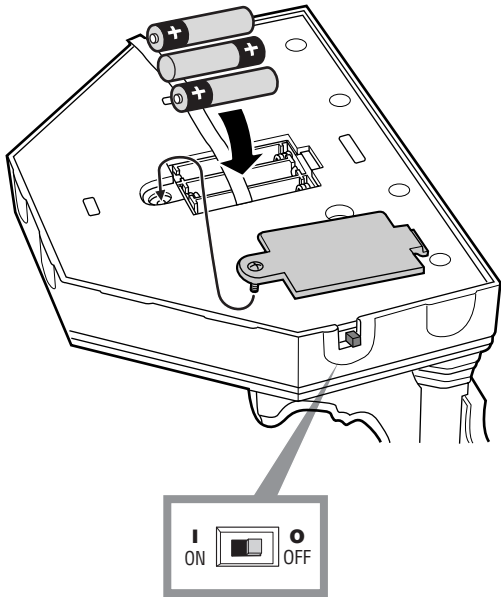


Assemble

Follow steps 1 to 33.

Attach labels by number as shown. ①




 BATTERY LOCATION



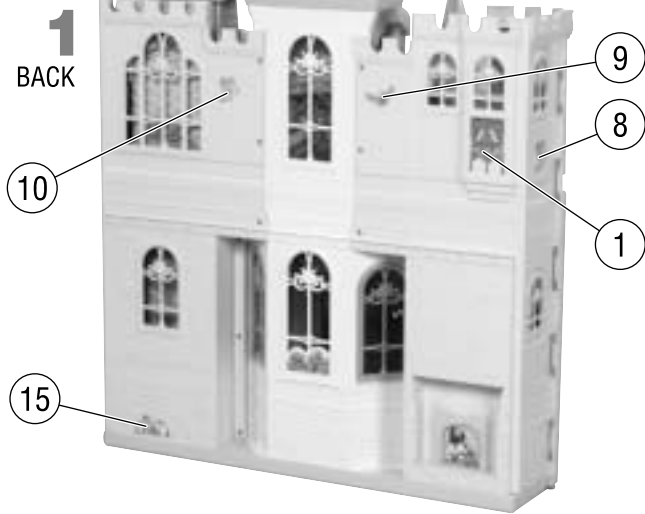




2

 
FRONT

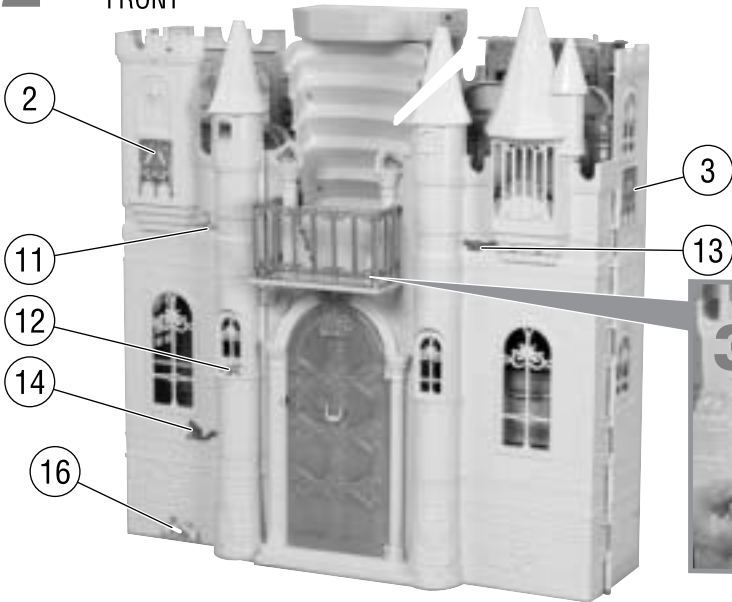

Open.

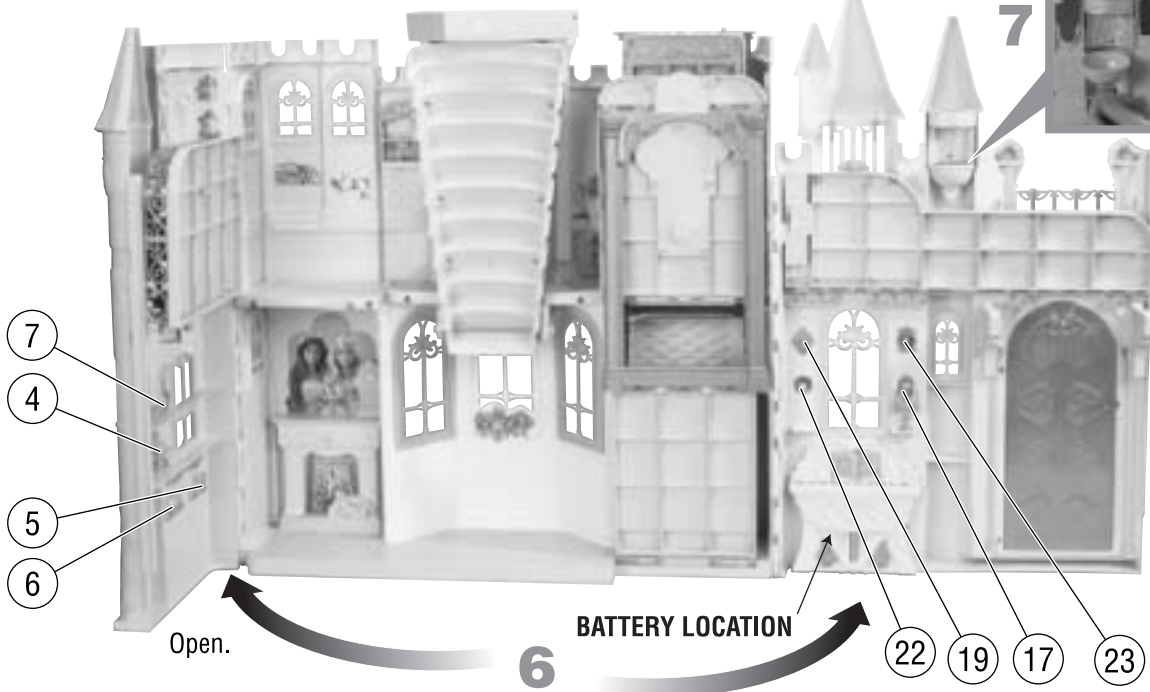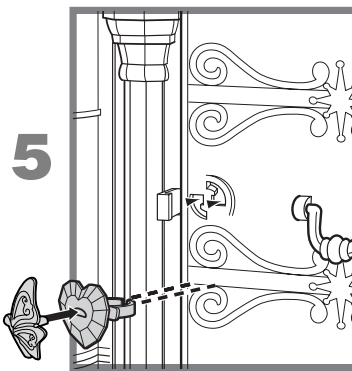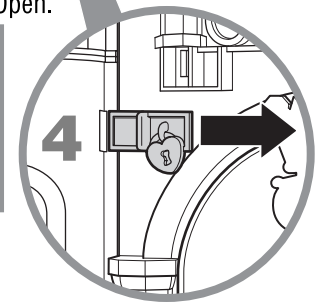   

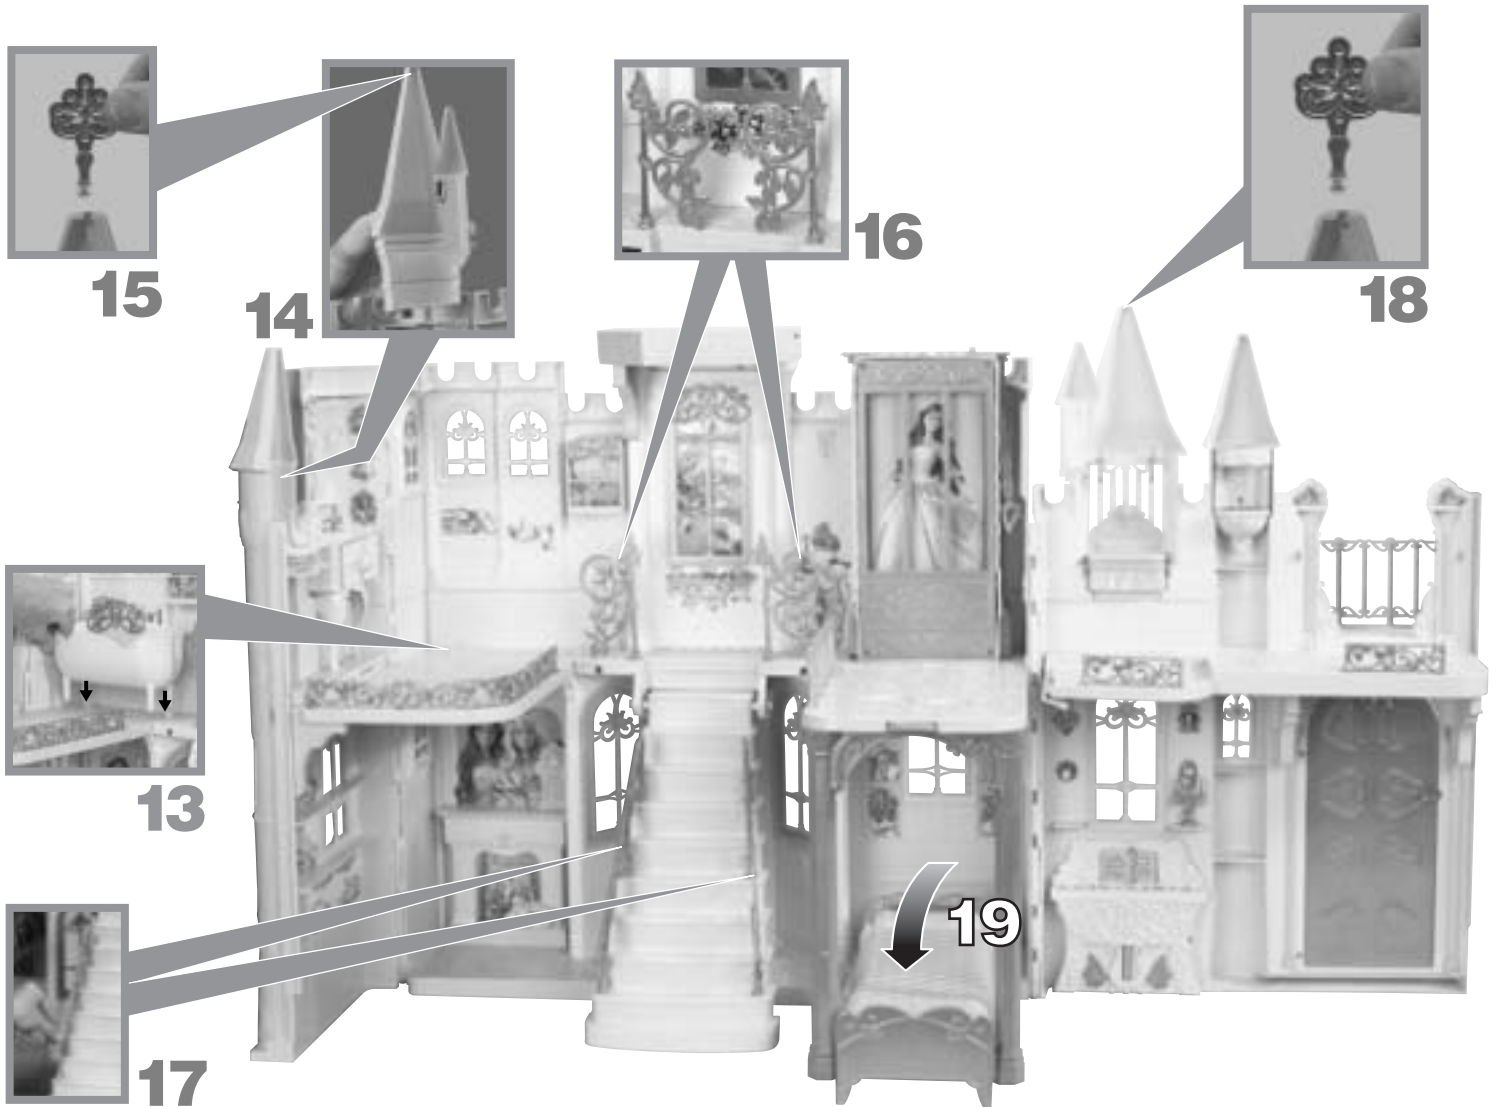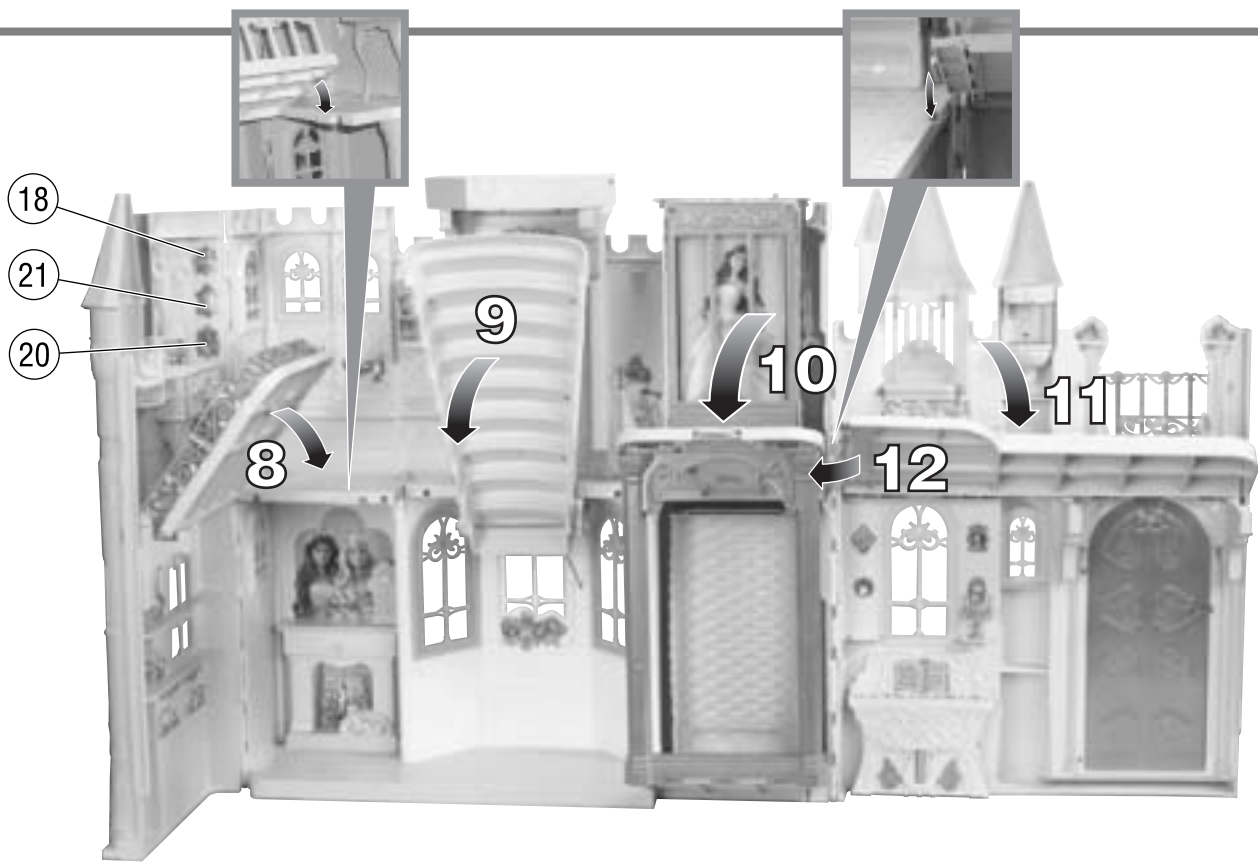  

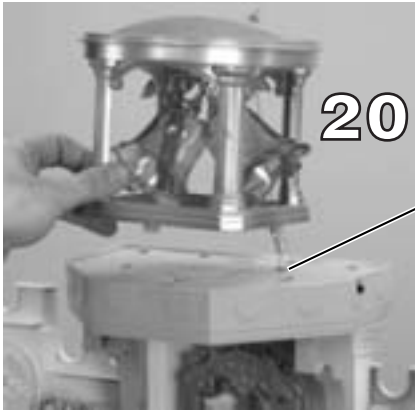 


20

Thread cord through hole. Snap columns into roof.

21











 
22

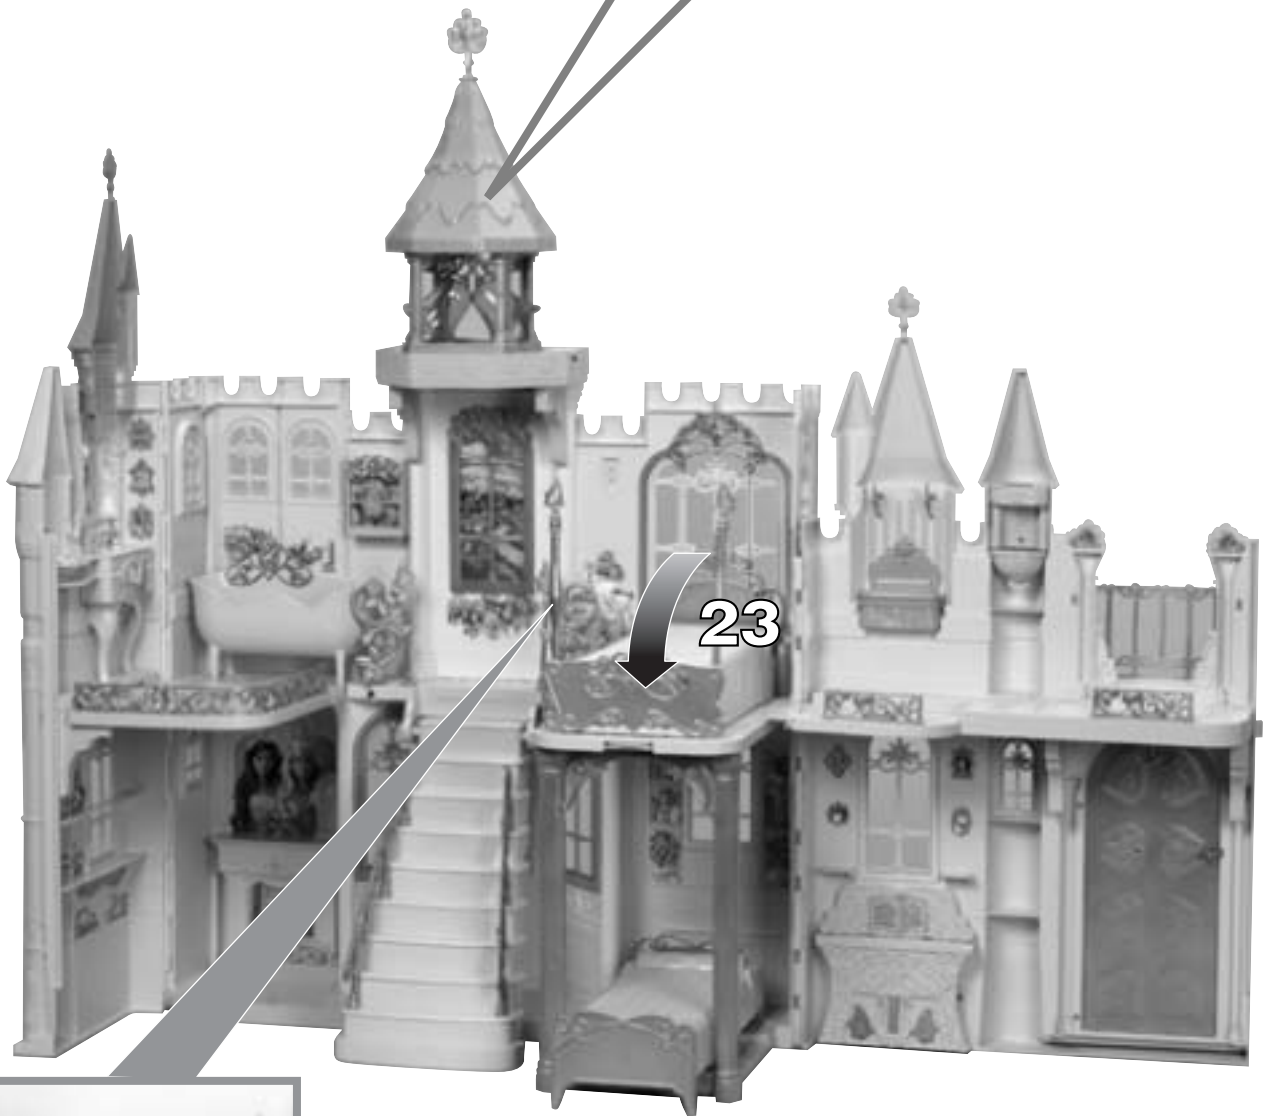

23



         
24

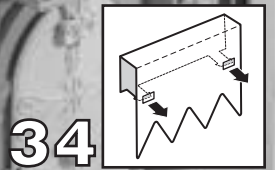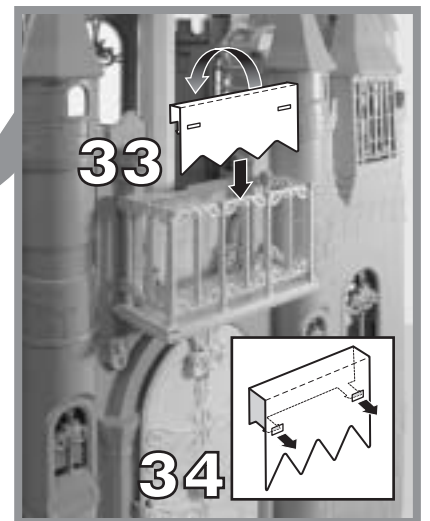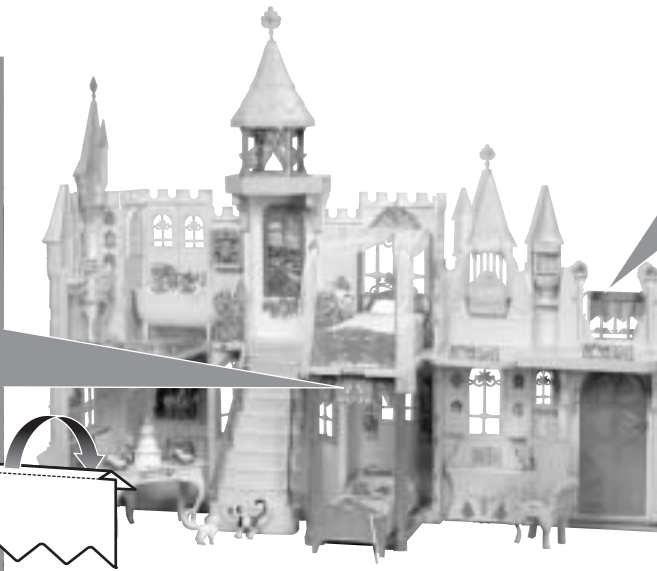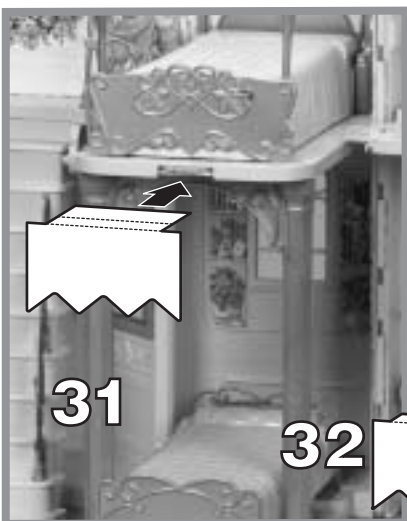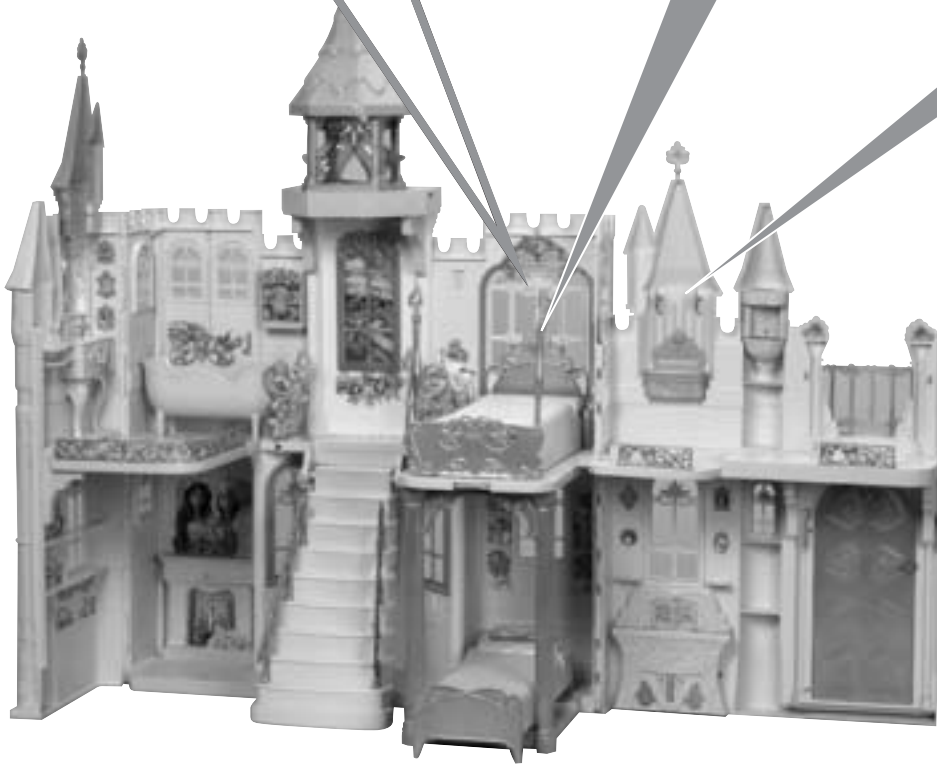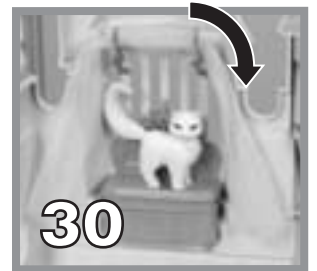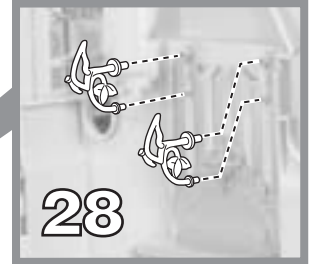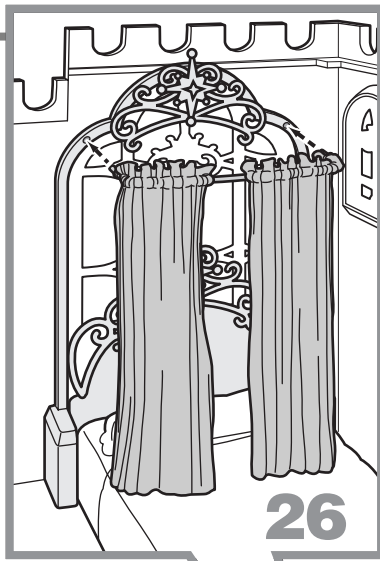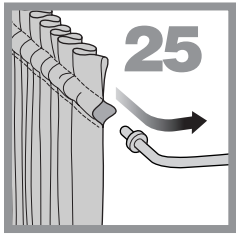





Play Time!

 BELL TOWER: Pull cord for music.

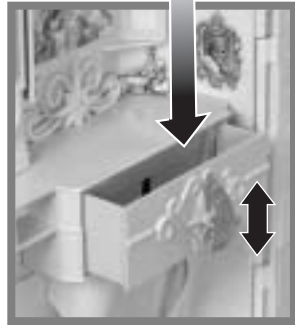


CABINET:
Press for music.

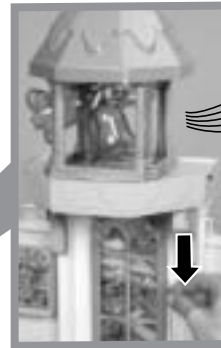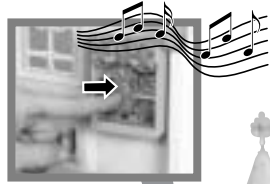  

DRAWER: Move up to reveal secret drawer.
Move down to release secret drawer.



 BATHTUB: Removable bathtub can be filled with water.

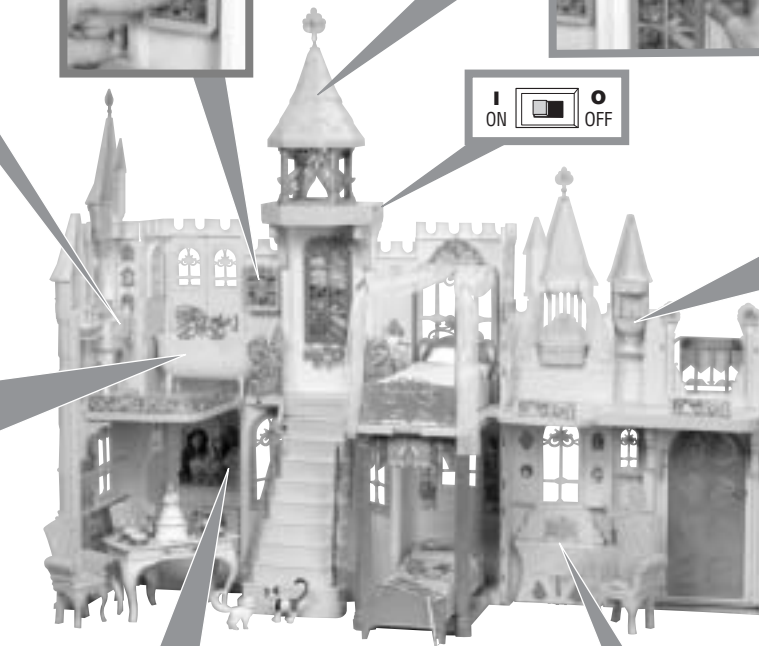

BIRD BATH: Removable bird bath can be filled with water.



MAGIC WAND: Hide behind clock.



 
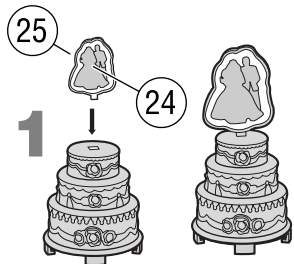 


TABLE: Hide the "present" under the cake.

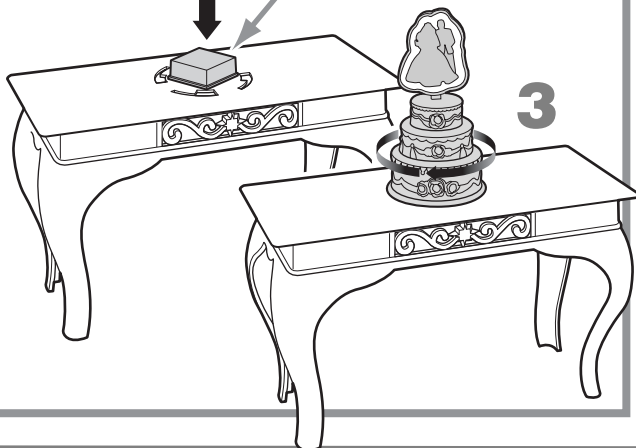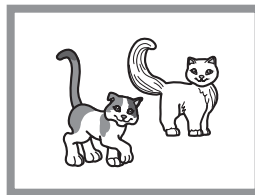 

ORGAN: Press for music.


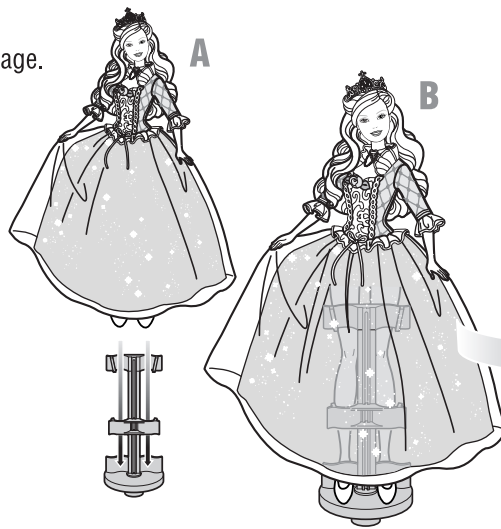 


Turn wheel to rotate figures.


Dolls and fashions not included.



  Open Door

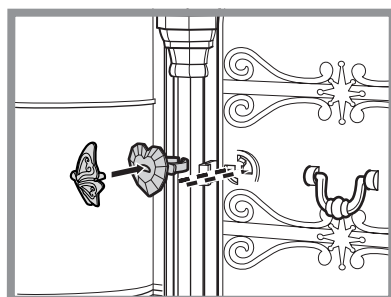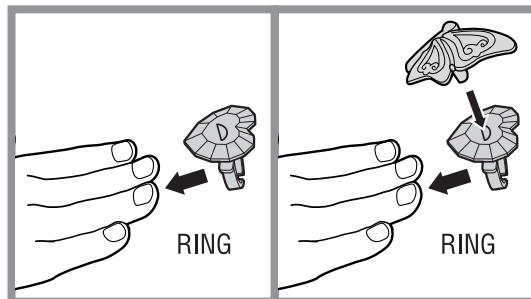










Insert ring in keyhole.

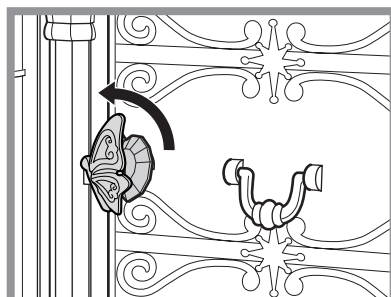 

Turn counter-clockwise to secure latch.



         Storage

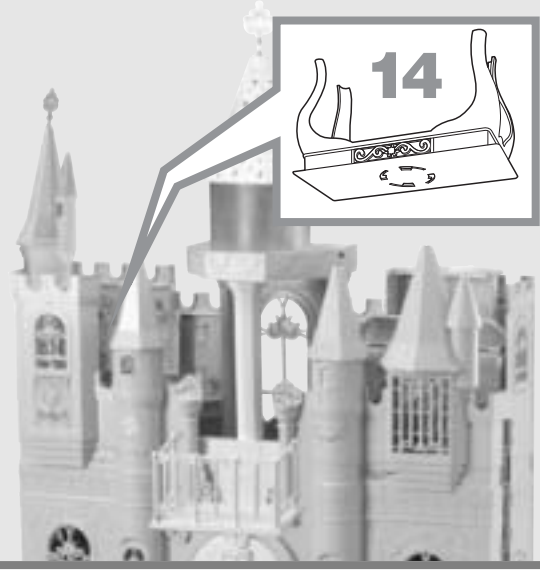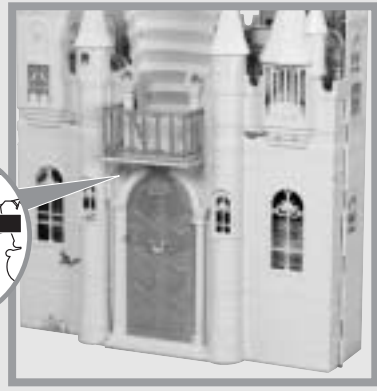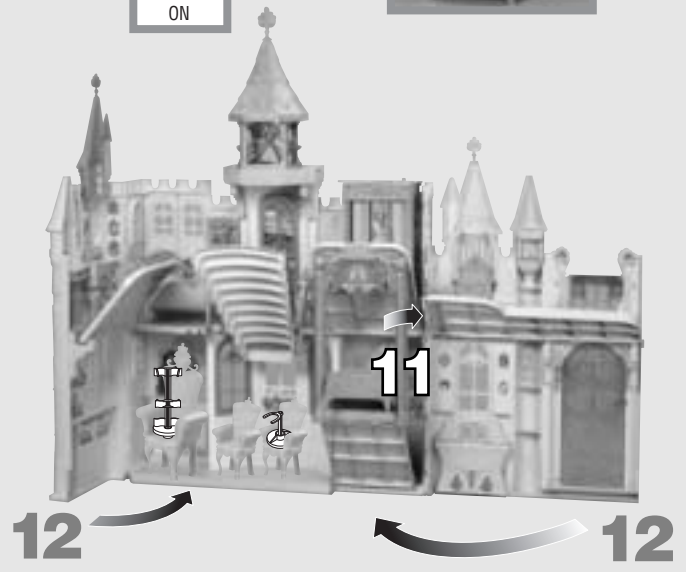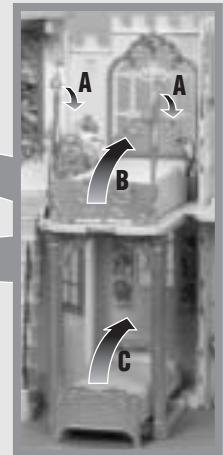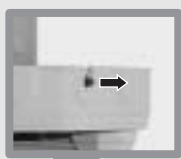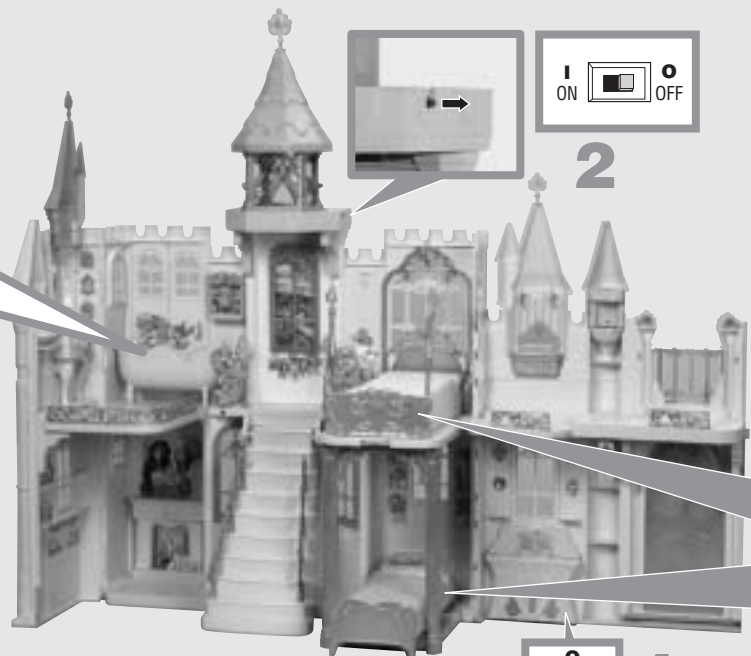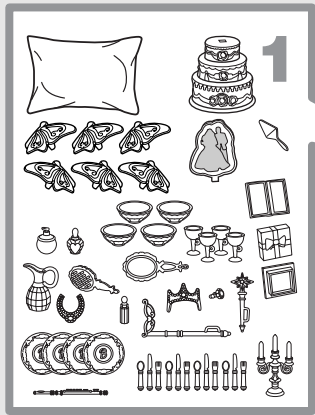



Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-665-6288.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran

Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.

Barbie[®]
com