

# JUICE BOX™

## PERSONAL MEDIA PLAYER OWNERS MANUAL


- FEATURES
- USING JUICEWARE™ CHIPS
- TO PLAY SEQUENCE
- FUNCTIONS
- TROUBLESHOOTING

- 1 JUICE BOX™ Personal media Player
- 1 JUICEWARE™ chip
- KEEP these instructions for future reference as they contain important information.
- Requires 3 "AA" alkaline batteries (not included).

© 2004 Mattel, Inc. All Rights Reserved.

H3904-0920

## FEATURES

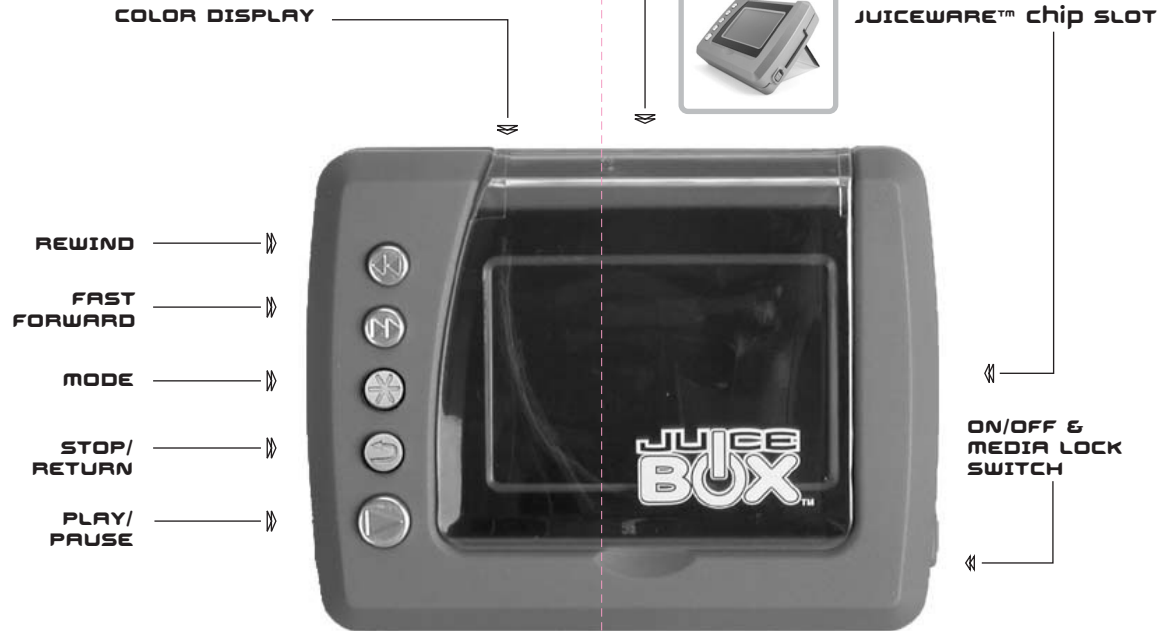

### STEREO HEADPHONE JACK

USE JUICE BOX™ HEADPHONES #H4443  
(headphones sold separately)

### VOLUME CONTROL

HOME AND CAR (AC) ADAPTER JACK  
FOR HOME:

USE JUICE BOX™ ADAPTER #H4446  
FOR AUTO: USE JUICE BOX™  
ADAPTER #H4447

(home/car adapters listed above are sold separately  
and are only available in the U.S.)




### INTERNAL SPEAKER

REQUIRES 3 "AA"  
ALKALINE  
BATTERIES  
(not included)



AFTER REMOVING THE UNIT FROM THE PACKAGE,

- Remove the label film from the outer flip-up screen.
- Remove the clear protective film from the screen.

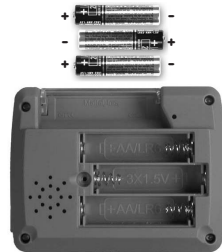

### BATTERY INSTALLATION/REPLACEMENT

Unscrew battery cover using a Phillips screwdriver (not included). Loosen the screw from the battery cover (screw stays attached to cover). Remove cover. Insert 3 "AA" alkaline batteries in the orientation shown. Replace cover and tighten screw. For longer life use only alkaline batteries. A parent or guardian should assist in all battery-changing operations.

- Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
- If product does not work properly or malfunctions, check battery installation.
- When the display becomes dim, difficult to see or the product functions erratically replace batteries.
- Remove batteries if product will not be used for an extended period of time.

PROTECTIVE FLIP SCREEN  
DOUBLES AS EASEL BACK



JUICEWARE™ chip SLOT

ON/OFF &  
MEDIA LOCK  
SWITCH

## USING JUICEWARE™ CHIPS

### PUTTING JUICEWARE™ CHIPS IN

Insert the Juiceware™ chip into the slot on the side of the Juice Box™ Personal Media Player, as shown. Gently push the Juiceware™ chip fully into the player. Slide the ON/OFF switch to the ON position.

- Your Juice Box™ Personal Media Player only works with Juiceware™ chips.

### REMOVING JUICEWARE™ CHIPS

To eject a Juiceware™ chip, slide the ON/OFF switch to the OFF position. Gently pull the Juiceware™ chip out of the Juice Box™ Personal Media Player.

- You cannot remove Juiceware™ chips while your Juice Box™ Personal Media Player is on.



## TO PLAY SEQUENCE

### MENU AT START UP

- To scroll up, select the REWIND button.
- To scroll down, select the FAST FORWARD button.
- To view the screen, select the PLAY button.
- To return to the previous screen, select the STOP/RETURN button.

### PLAY ALL: PLAYS COMPLETE JUICEWARE™ CHIP

- Select the PLAY button to play the episodes.
- Select the REWIND or FAST FORWARD button to move about the episode.
- Select the STOP/RETURN button to return to the previous screen.
- Select the PLAY button to pause an episode. Select the PLAY button again to resume the episode.

### EPISODE: LISTS ALL THE EPISODES ON THE JUICEWARE™ CHIP

- Select the REWIND or FAST FORWARD button to scroll up or down to choose the episode to watch.
- Select the PLAY button to play the episode.
- Select the STOP/RETURN button to return to the previous screen.
- Select the PLAY button to pause an episode. Select the PLAY button again to resume the episode.

### INFORMATION: ON SCREEN INSTRUCTIONS

- Select the PLAY button to review the User Instruction.
- Select the STOP/RETURN button to return to the previous screen.

### ABOUT: PRODUCT OWNERSHIP INFORMATION

- Select the PLAY button to review the Ownership Information.
- Select the REWIND or FAST FORWARD button to scroll up or down to review all the pages as needed.
- Select the STOP/RETURN button to return to the previous screen.

## FUNCTIONS

### REWIND BUTTON

- A single press on this button rewinds the video to the start of the previous chapter. Continued pressing on this button rewinds the video to the previous screens.

### FAST FORWARD BUTTON

- A single press on this button forwards the video to the start of the next chapter. Continued pressing on this button fast forwards the video.

### MODE

- A single press on this button adjusts the video brightness. A second press adjusts the video contrast. Use the REWIND button to decrease the value. Use the FAST FORWARD button to increase the value.

### STOP/RETURN

- A single press restarts the video.

### PLAY/PAUSE

- A single press pauses the video.
- A second press restarts the video.

### ADJUSTING BRIGHTNESS & CONTRAST

- Select the MODE button to adjust the brightness.
- Select the REWIND button to reduce the brightness.
- Select the FAST FORWARD button to increase the brightness.
- Select the MODE button a second time to adjust the contrast.
- Select the REWIND button to reduce the contrast.
- Select the FAST FORWARD button to increase the contrast.
- Select the STOP/RETURN button to return to the previous screen.

### SLEEP MODE

After 2 minutes, your Juice Box™ Personal Media Player will go into sleep mode to save power. To restart, your Juice Box™ Personal Media Player move the ON/OFF switch to the OFF position then turn back ON again.

## TROUBLESHOOTING

- If your Juice Box™ Personal Media Player locks up, reset it by turning it OFF then back on again.
- If the protective flip screen becomes detached, it can be reattached by snapping it back into place.
- Do not cover up the external speaker.
- Do not use your Juice Box™ Personal Media Player in direct sun light.
- Turn OFF your Juice Box™ Personal Media Player when not in use.
- Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset your Juice Box™ Personal Media Player by switching unit off and on again; or, removing and reinserting batteries, if necessary.
- If you use this product with a transformer, regularly examine for damage to the cord, plug, enclosure and other parts. In the event of any damage, do not use this product with the transformer.
- Turn OFF your Juice Box™ Personal Media Player before disconnecting the transformer.

## CONSUMER INFORMATION

Need assistance? Visit us online at [www.service.juicebox.com](http://www.service.juicebox.com)

- find answers and product information
- view and print instruction manuals



Or call toll-free at 1-888-892-2297, M-F 8AM - 6PM, ET.

## 2 YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option.

This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Valid only in U.S.A.

## FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Mattel, Inc.  
333 Continental Blvd.  
El Segundo, CA  
(310) 252-2400

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. • [Mattel U.K. Ltd.](http://Mattel.U.K.Ltd.), Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303. • [Mattel Australia Pty Ltd.](http://Mattel.Australia.Pty.Ltd.), Richmond, Victoria. 3121. • [Mattel East Asia Ltd.](http://Mattel.East.Asia.Ltd.), Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. • [Diimport & Diedarkan Oleh.](http://Diimport.&Diedarkan.Oleh.) [Mattel SEA Ptd Ltd.](http://Mattel.SEA.Ptd.Ltd.) (993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ.