

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Mattel Inc. 333 Continental Blvd. El Segundo, CA (310) 252-2400
NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

© 2006 Viacom International Inc. All Rights Reserved.
Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
PRINTED IN CHINA. Manufactured for Fisher-Price.
© 2006 Mattel, Inc. All Rights Reserved.
Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.
Packaging and address should be retained for future reference:
Mattel Canada Inc., Mississauga, Ontario L5R 3W2.
You may call us free at 1-888-892-6123.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.
Helpline 01628500303.
Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.
Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P)
Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ.
Tel:03-78803817, Fax:03-78803867.
Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A.

Questions?
service.fisher-price.com
In US and Canada
1-888-892-6123

K3047



Knows Your Name™ Dora Cell Phone

INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

BEFORE YOU BEGIN

- Please remove and discard the "Try Me" pull-tab from the back of the toy for normal play function. Once the TRY ME pull tab is removed, the toy will perform its full play pattern as described below.
- Be sure the ON/OFF switch is in the ON position. The ON/OFF switch is located on the back of the toy.
- Connect the Dora Knows Your Name Cell Phone to your computer using a Mini 5-Pin Type B USB cable such as those used with most digital cameras and camcorders (not included).
- Go to www.fisher-price/us/knowyourname/phone and follow the easy programming instructions to find your name online.

HOW TO PERSONALIZE YOUR SETTINGS

1. Connect the Dora Knows Your Name Cell Phone to your computer using a mini USB cable as shown. Use a Mini 5-Pin Type B USB cable such as those used with most digital cameras and camcorders (not included).



2. Go to www.fisher-price.com/us/knowyourname/phone and follow the easy programming prompts to find your name online.
3. When you have completed all the screens, click "download".

Now you are ready to play!

HOW TO PLAY

1. Press the RINGTONE button to choose one of 5 ringtones.
Just keep pressing until you hear the ringtone you like.
2. Press the TALK/MESSAGE button to call Dora and hear greetings from Dora & her friends!
3. Press the NUMBERS to hear Dora make phone sounds!
4. Press the OPERATOR button to hear the operator speak!



TALK/
MESSAGE

RINGTONE

NUMBERS

OPERATOR

NOTES TO CONSUMER:

- You will notice a reduction in volume after the product is removed from the package. This volume reduction is included for the safety of your child. This reduction in volume is not a defect.
- Under certain conditions, the toy can malfunction and lose memory due to static electricity. If this occurs, reprogram the toy by re-attaching your USB cable and performing another download.
- If the toy is not played with for more than 15 seconds it will automatically shut-off to preserve battery life. Press any button to resume play.
- You can change your names and settings at any time by reconnecting the toy to your computer, going back to the website, and performing another download.

Minimum System Requirements:

- USB – Version 1.1 or higher
- Hard drive space – 50 MB available
- Memory – 128 MB, 256 MB recommended
- CPU – 350 Mhz, 800 Mhz recommended
- Video Resolution – 800x600, 1024x768 recommended
- Video Color Depth – 256 colors or higher
- Operating System – Windows 2000, XP or higher
- Browsers:
 - Microsoft Internet Explorer 6.0 or higher with Adobe Flash Player 6 or higher
 - Netscape 7 or higher
 - Mozilla Firefox 1.0 or higher
 - Opera 6.0 or higher
- Internet – High speed connection recommended
- User input – keyboard & mouse

BATTERY INSTALLATION:


Unscrew and lift cover away from back of product.

Replace batteries as shown.

Batteries included are for demonstration purposes only.

For longer life use only alkaline batteries.

Requires 3 “AAA” (LR03) batteries.

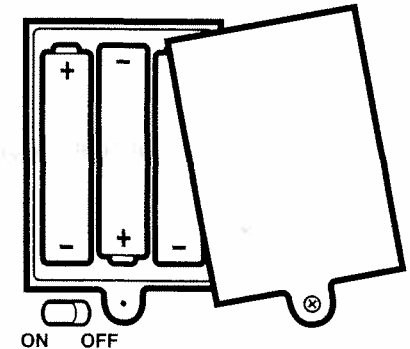

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this toy in a fire. The batteries inside may explode or leak.