

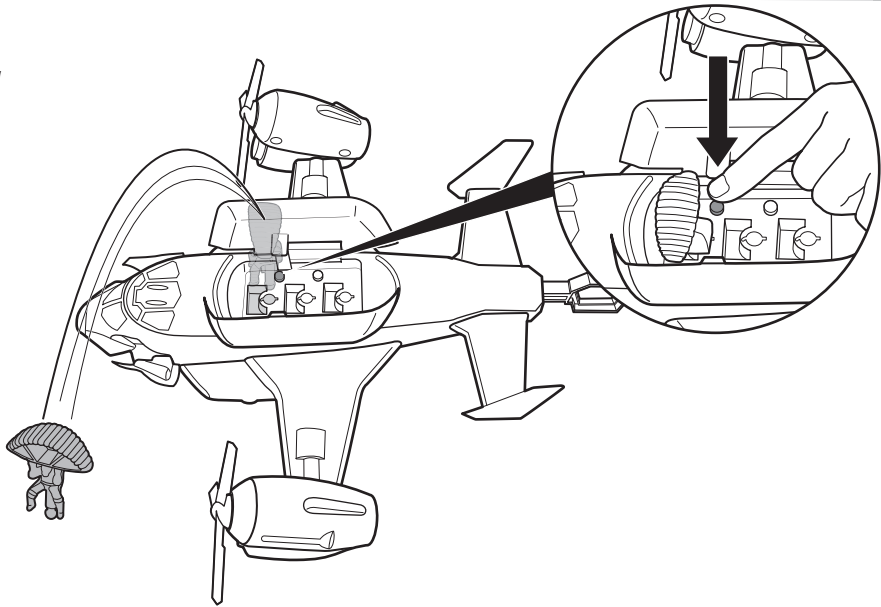


3.

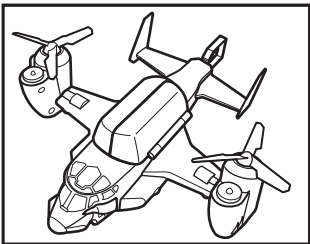

Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point-blank range.


RESET

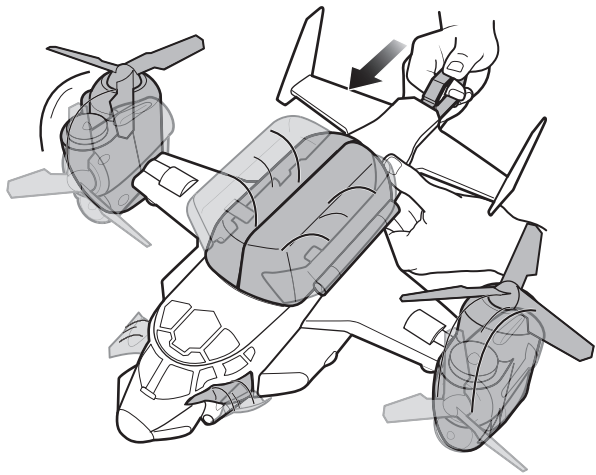

MATCHBOX® PARACHUTE RESCUE™ INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

CONTENTS / 3+

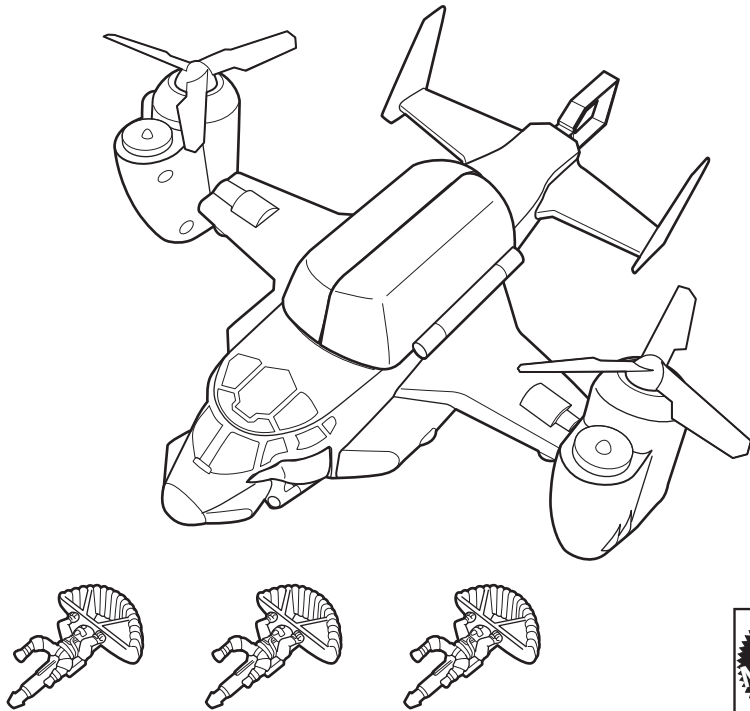


Asst. X1049
X1053-0920




©2011 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121 Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.SERVICE.MATTEL.COM

SET UP


1.

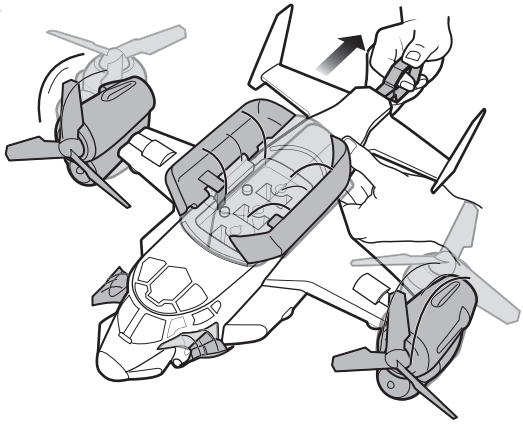



Bottom view

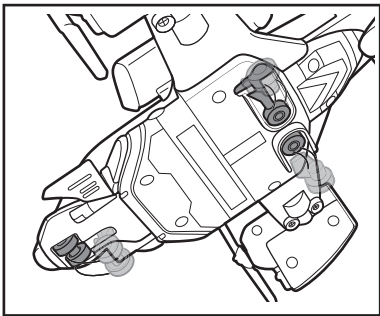

2.

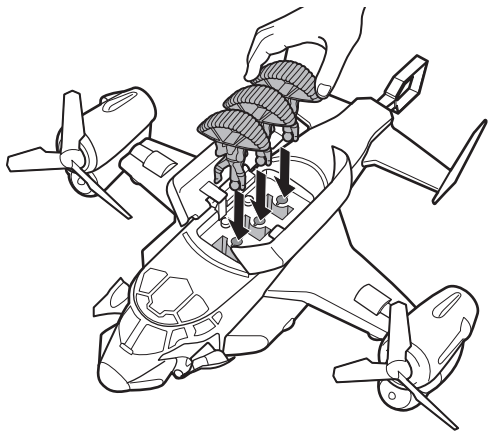


3.

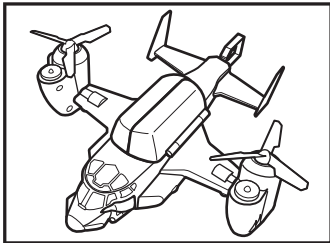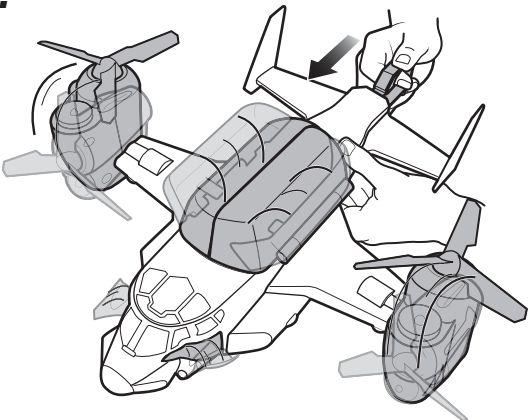


TO PLAY

1.

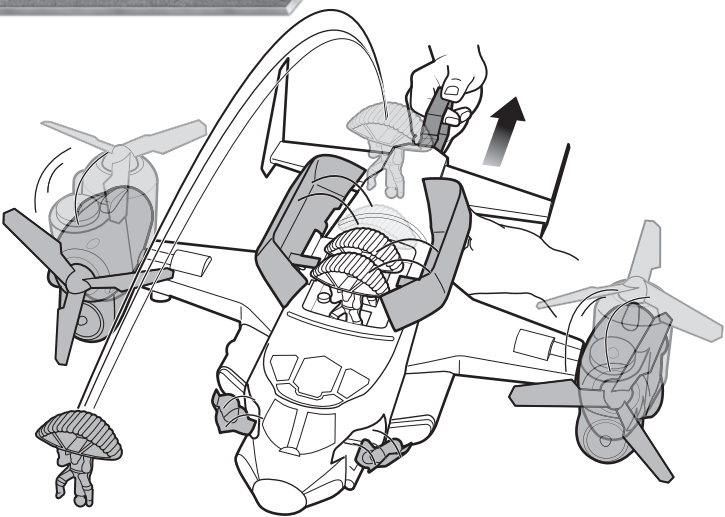

2.

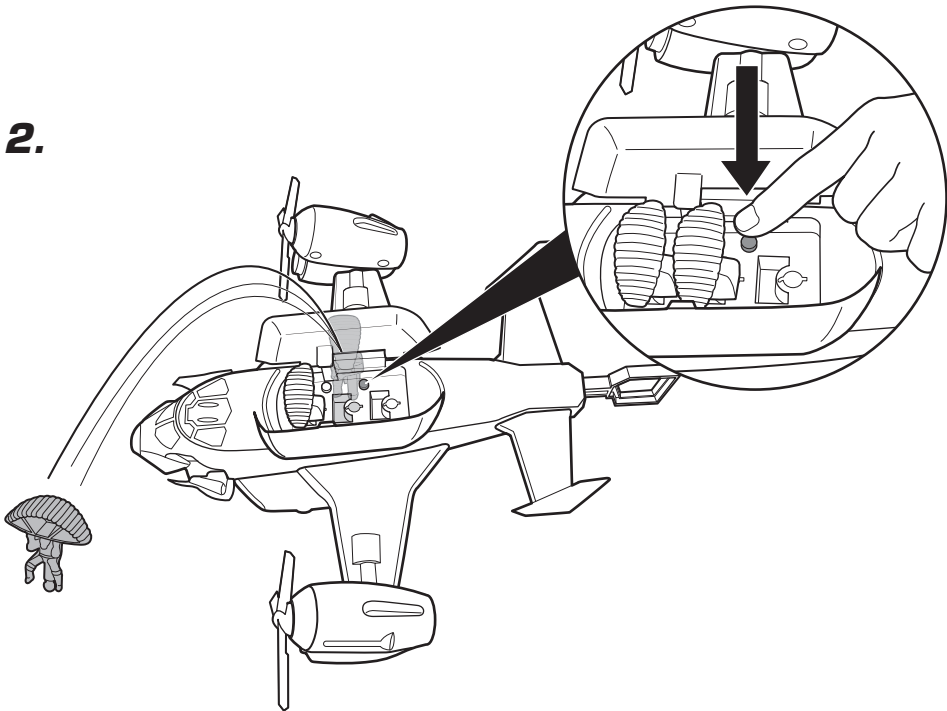

Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point-blank range.