

Fisher-Price® Trikes Recall

There has been a recall announcement for this product.

Mattel is recalling the Fisher-Price® Kawasaki Dora the Explorer Tough Trike toddler tricycles. This trike is intended for children 2 to 5 years of age. The Fisher-Price® Kawasaki Dora the Explorer Tough Trike includes a pretend key that is located about 3 inches (7 ½ centimeters) in front of the seat and protrudes at least 5/8 inches (1 ½ centimeters) above the trike's body.

A child can strike, sit or fall on the protruding plastic ignition key resulting in serious injury

This recall does not include Lights and Sounds Trikes; Rock, Roll 'n Ride Trike; Grow-With-Me Trikes; Action Sounds Trike; Push 'n Pedal Trike. These Trikes do not have a key feature in front of the seat. Any Fisher-Price® Trike with a key located on the handle bars is not affected by this recall.

Use this online guide to determine if the product you own is affected by this recall. Please have your product near you as you continue.

The model number is K6672 and is located under the seat in the storage compartment.



K6672 Nick Jr. Dora the Explorer Tough Trike

If you do not own the Nick Jr. Dora the Explorer Tough Trike shown in the image above, you are **not** affected by this recall and you can continue to enjoy your trike.

If you own the Nick Jr. Dora the Explorer Tough Trike shown in the images above or you are not sure if you own the Nick Jr. Dora the Explorer Tough Trike shown in the image above, please locate the key on your Fisher-Price® Trike.



If the key on your trike is located anywhere other than about 3 inches (7 ½ centimeters) in front of the seat you are **not affected** by this recall and you can continue to enjoy your trike.

If the key on your trike is located about 3 inches (7 ½ centimeters) in front of the seat and protrudes at least 5/8 inches (1 ½ centimeters) above the trike frame, please look at the shape of the key.



If your trike's key is a flattened D-shaped key shown in the image you are **not affected** by this recall and you can continue to enjoy your trike



If your trike's key is a Disc-shaped key shown in the image you **are affected** by this recall.

Please discontinue using the Trike(s) immediately and contact Mattel.



If your trike's key is a D-shaped key shown in the image you **are affected** by this recall.

Please discontinue using the Trike(s) immediately and contact Mattel.

If your product is affected by the recall or if you have any questions in relation to this recall, please contact Mattel on infoaust@mattel.com or at 1300 135 312

Open hours:

Australia Mon – Fri EST 8am – 5pm

NZ: Mon - Fri 10am – 7pm

Australia Sat EST 8am – 3pm

NZ: Sat 11am – 7pm

Our greatest concern has always rested with the safety of the children who play with our toys, which is why we have responded promptly in an effort to maintain the trust of the families that have allowed us to be part of their lives.