 


Barbie®



Instructions

CONTENTS:

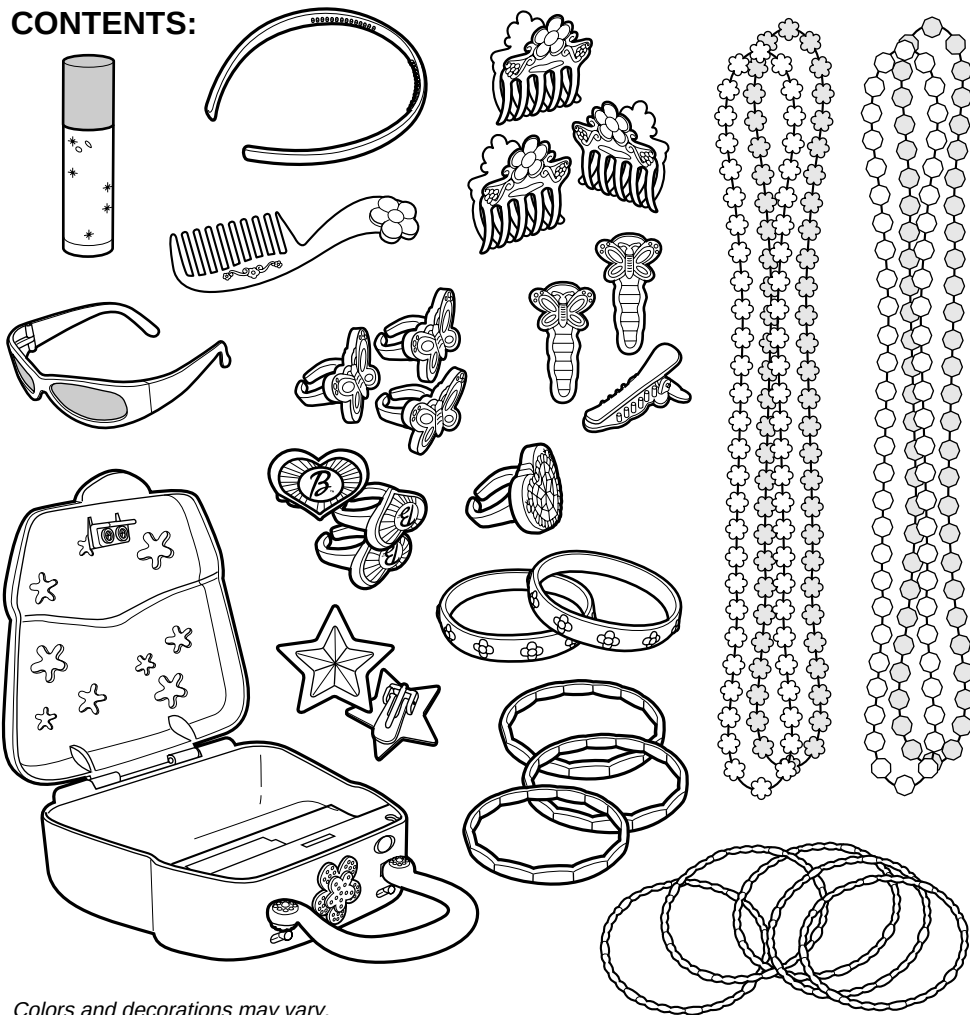

Colors and decorations may vary.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-TOYS.

 
Requires 3 "AA" alkaline batteries (*not included*).

Keep these instructions for future reference as they contain important information.



26918-0920 G1

BEFORE STARTING: INSTALL BATTERIES (SEE INSTRUCTIONS ON BACK PAGE), THEN PLACE ALL FASHION ACCESSORIES INTO THE PURSE AND CLOSE THE COVER.

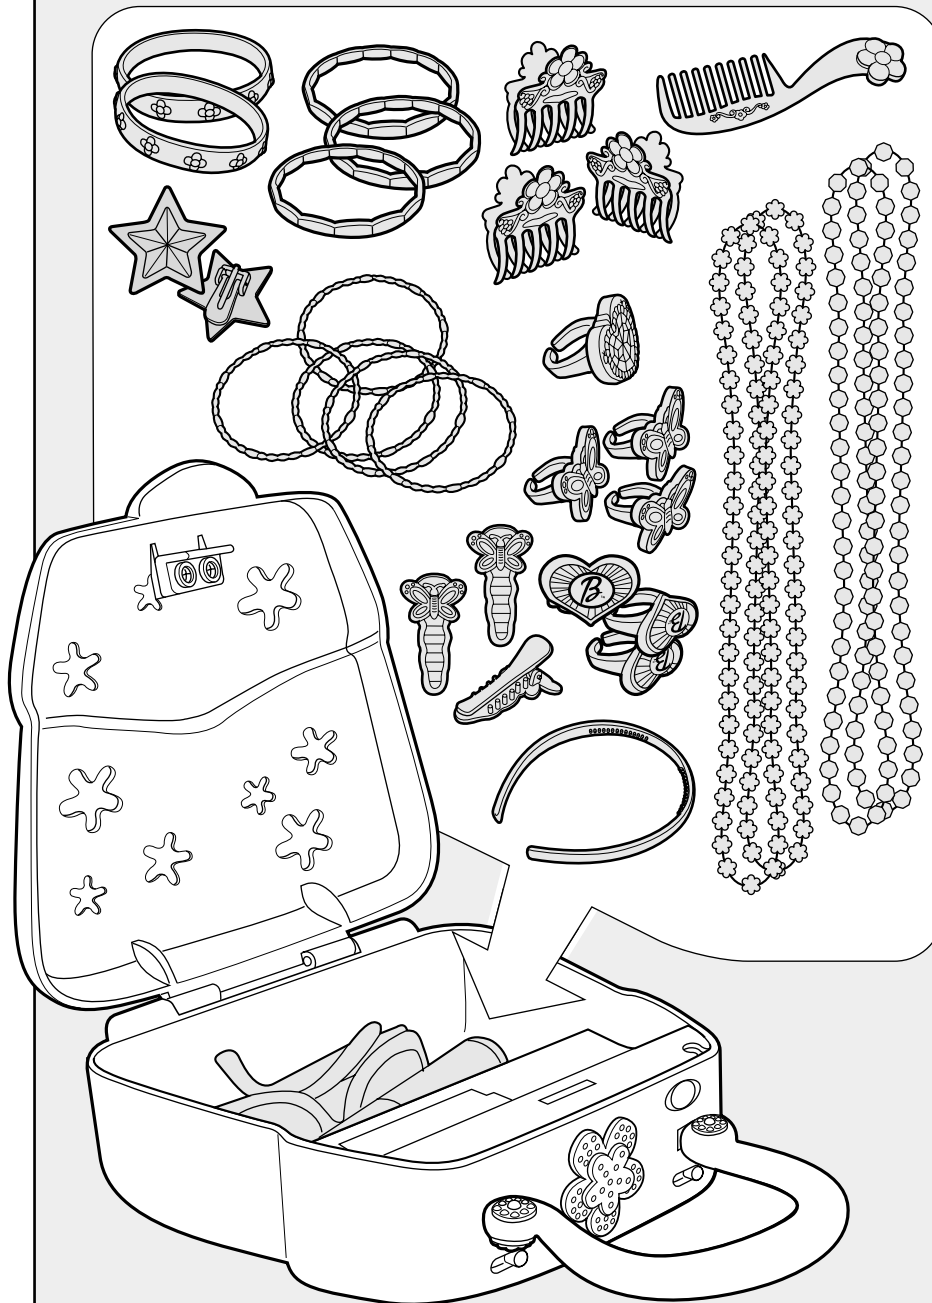

Object of Game

Quickly find the accessory called out, put it on and close the purse before time runs out. The more accessories you have, the more chances you have to win the ultimate beauty makeover.

1. Select number of Players

For 2 to 3 players slide "mode" switch to "2 - 3".
For four or more players slide to "4+".

2. Turn Game On

Turn the power switch to ON, "I".

3. Play

Start game by pressing the play "▶" button. When Barbie® says "**Ready, set, go!**" the player holding the purse will be prompted to find an accessory, put it on, and then close the purse before time is up. The clock counts down. The player must have removed the accessory and closed the purse before time is up. If a player chooses the wrong accessory, they must put it back!

After Barbie® says "**Pass the purse!**" pass it to the next player. Barbie® says "**Ready, set, go!**" and the next player is prompted to find an accessory.

If a player runs out of time before closing the purse, the buzzer will sound and the player will not be able to get an accessory. Barbie® will then say "**Close the purse and pass it!**" and the game will continue. You will start with less time as the game progresses.

 
 
Game will automatically shut off if not played with for a while.

Fashion Emergency!

At any time during the game, a "**Fashion Emergency**" may be called. The person holding the purse at that time (or everybody, if so directed) will follow the directions from Barbie®. For example, you may be prompted to give up an accessory, take an accessory from another player or trade accessories. You have 1 minute to complete the task or game will shut "off". You can press play button to continue the game. If the game does shut "off", return all accessories to purse and start a new game. After a pause, Barbie® will say "**Press the play button!**" and play will continue.


The Winner

When the game is completed (about 14 items collected in 2 to 3 players mode or 28 items in 4 or more players mode) Barbie® will call out the winning accessory. The player wearing that particular accessory is the winner and the Fashion Queen! All players must place all the accessories on the winner – the Fashion Queen!

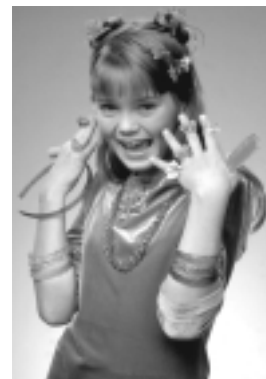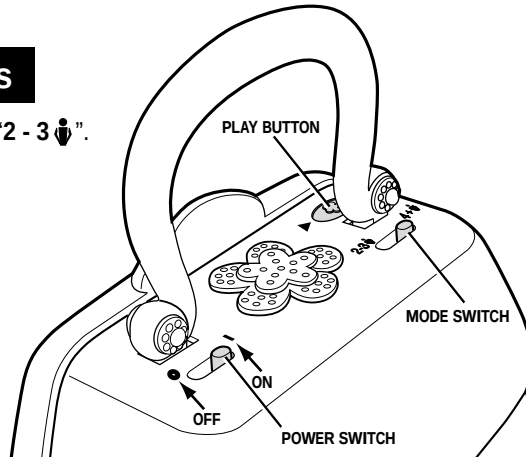

Install Batteries

 Using Phillips screwdriver (*not included*), unscrew door and lift off. Install 3 "AA" alkaline batteries as shown. Replace door.

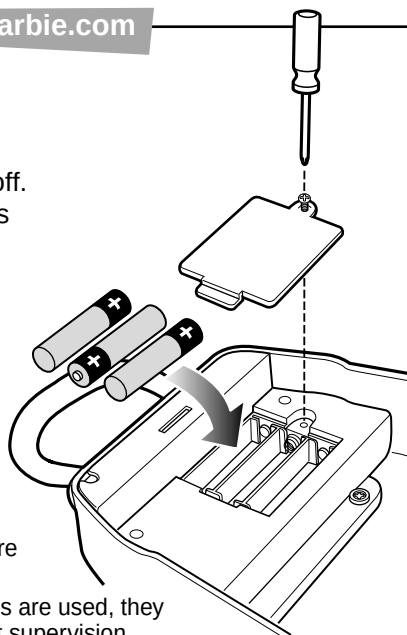

BATTERY SAFETY INFORMATION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.

TROUBLE SHOOTING:

1. Replace batteries if sounds become distorted.
2. If the game malfunctions, switch power to off, "0" then to on, "I".

TWO YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Adjustment Center, 15930 E. Valley Boulevard, City of Industry, California 91744 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse, or abuse. **Valid only in U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Send only the product to the address above. Send all correspondence to Consumer Affairs, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday – Friday, 8:00 a.m. – 5:00 p.m. PST; 11:00 a.m. – 8:00 p.m. EST.



WARNING:

CHOKING HAZARD – Small parts.
Not for children under 3 years.

MATTEL TOYS



YOU CAN TELL IT'S MATTEL! CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday, 8:00 a.m.-5:00 p.m. PST; 11:00 a.m.-8:00 p.m. EST. Outside U.S.A., see telephone directory for Mattel listing. Consumer Affairs, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 USA

1 (800) 524-TOYS



CONFORMS TO THE SAFETY
REQUIREMENTS OF ASTM F963.

We are dedicated to quality products.