



CAUTION: Surfaces may become hot and cause burns if electronics get wet. Do not operate vehicle through water or snow.

32854-0920G1

HARLEY-DAVIDSON®



**TYCO® R/C
CONSUMER AFFAIRS
WE CARE!**

If you have questions about this vehicle,
DO NOT RETURN IT TO THE STORE!
Call Toll-Free 1-888-557-TYCO (1-888-557-8926) for EXPERT
technical help and **RAPID** parts and service assistance.

www.tycorc.com

OWNER'S MANUAL

Please read thoroughly before operating your vehicle. Keep these instructions for future reference: they contain important information.

I. CONTENTS

- 6.0V JET TURBO® HARLEY-DAVIDSON® Vehicle
- Transmitter
- Display Stand (store vehicle on stand when not in use)

FEATURES



- Full-function Transmitter
- 27 MHz or 49MHz
- Range up to 65'/20m

VEHICLE

- 1 Powerful Mabuchi Motor
- 2 ON/OFF Switch
- 3 Battery Compartment
- 4 Battery Release Button
- 5 Functional Suspension (front)
- 6 Functional Suspension (rear)
- 7 Breakaway Rider Figure
- 8 Side Stabilizers (one each side)

TRANSMITTER

- 1 Left stick (controls forward, "turbo" mode and braking)
- 2 Right stick (controls steering)
- 3 Antenna
- 4 Power-On Indicator Light

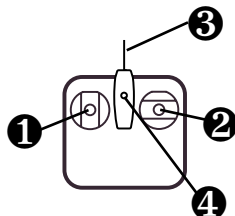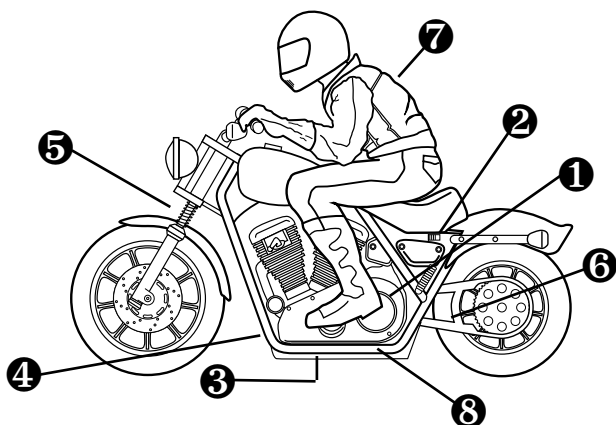

MATTEL WHEELS®

II. QUICK START










Please read this Owner's Manual thoroughly.

1. Start with a full charge.
2. Turn vehicle switch ON. Activate transmitter to run and control your vehicle.

3. When you're done driving, turn vehicle switch OFF. Remove all batteries for storage.

III. OPERATING YOUR VEHICLE

- | | |
|---|--|
| <ol style="list-style-type: none"> 1 FORWARD 2 FORWARD "TURBO" 3 BRAKING 4 WIDE LEFT TURN | <ol style="list-style-type: none"> 5 SHARP LEFT TURN 6 WIDE RIGHT TURN 7 SHARP RIGHT TURN |
|---|--|

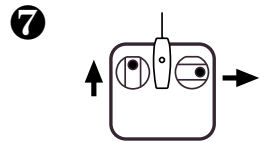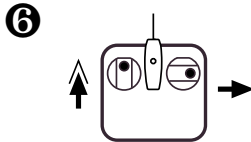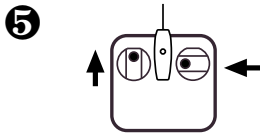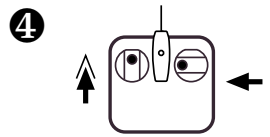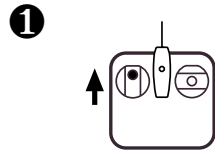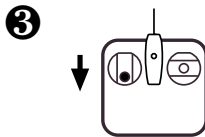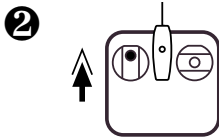

IV. SPECIAL DRIVING CONTROLS & FEATURES

1 STANDING START

Set your vehicle on the ground, leaning on one of its side stabilizers. Push the left stick forward to drive straight ahead.

2 LAUNCH-START

Hold your vehicle steady on the ground (keeping your fingers clear of the wheel hubs). Gently guide your vehicle forward while pushing the left stick forward.

3 "SCREECHING" STOP

While driving forward, quickly jam the left stick back. Your vehicle will brake to a quick stop with one of its side stabilizers on the ground.

4 GLIDE-STOP

While driving forward, release the sticks. Your vehicle will glide to a stop with one of its side stabilizers on the ground.

5 TURNING CIRCLE


Your vehicle's "normal" turning circle is about 30°/9m. For tighter circles, try

steering in the direction of the turn while "pulsing" the left stick forward. (This may take a little practice!)



6 BREAKAWAY RIDER FIGURE

Don't operate your vehicle without the breakaway rider figure attached: the vehicle won't balance properly without it. The figure is designed to break away on impact. To reattach the figure, snap the figure into the seat, then rotate into upright position as shown.



1

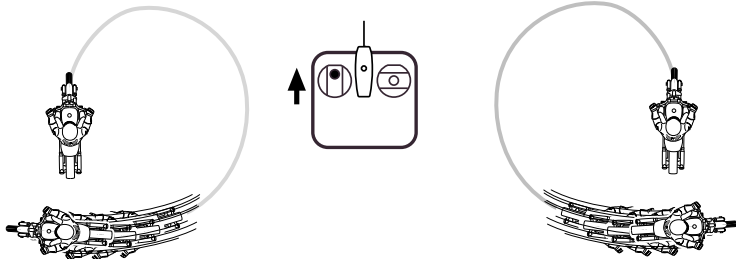



2

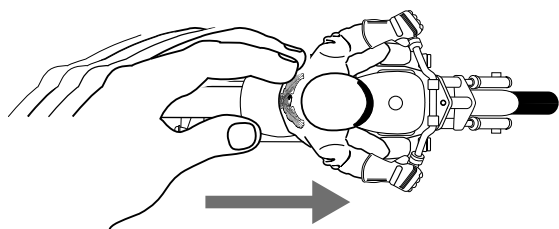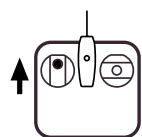


3

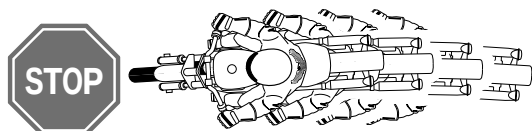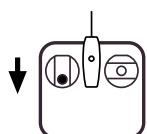


4

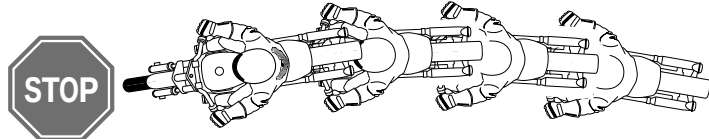 


5

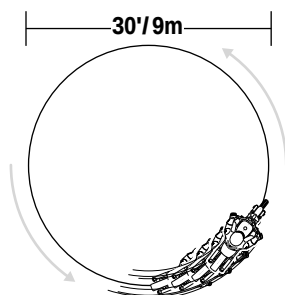

6

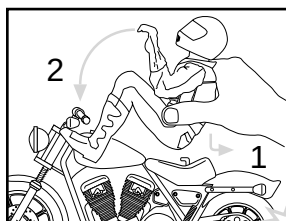

NOTE: vehicle antenna extends up through rider figure.

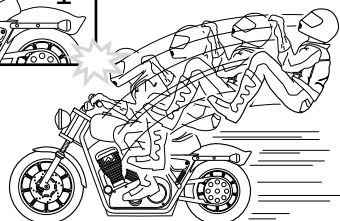

V. QUICK TIPS


- 1 When your vehicle starts to lose power, it may lose functions or performance. It's time for a recharge. Your vehicle's running time may change depending on your driving style.
- 2 Radio interference can make your vehicle run badly. Interference can

be caused by other R/C vehicles running on the same frequency; electrical wires; large buildings; or CB radios. Try to stay away from these!

- 3 Point your transmitter antenna up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.

- 4 Don't drive your vehicle in sand or through water or snow. After driving, remove any water from your vehicle, wipe with a towel and allow to dry completely.
- 5 Don't store your vehicle near heat or in direct sunlight. Always turn switches OFF and remove all batteries for storage.


1

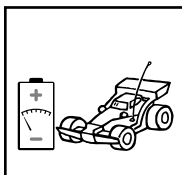

2




3

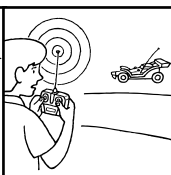

4



5

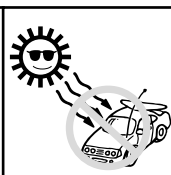

VI. POWER SYSTEM

(Batteries and Charger Not Included)

FOR DETAILED INFORMATION REGARDING VEHICLE BATTERY CHARGING AND SAFETY, PLEASE FOLLOW THE SPECIFIC INSTRUCTIONS THAT CAME WITH YOUR BATTERY PACK AND CHARGER.

Your vehicle will not operate without a


6.0V rechargeable NiCd battery pack and charger. For best results, use only a TYCO® R/C battery pack and charger. To install the battery pack in this vehicle, please refer to Section VII, "Battery Installation."

Your vehicle is compatible with both the TYCO® R/C Flash Charge™ battery pack and charger AND the TYCO® R/C

6.0V Jet Turbo® battery pack and charger. The Flash Charge™ power system charges 8 TIMES FASTER than conventional chargers...and less charge time means MORE driving time!

PICK UP AN EXTRA BATTERY!

Charge additional battery packs ahead of time for longer non-stop action!

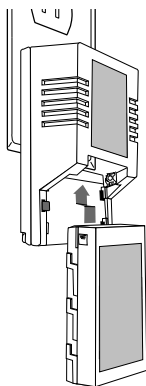

ALSO AVAILABLE

**30 MINUTE
FLASH
CHARGE™**



THIS PRODUCT USES A NICKEL-CADMIUM RECHARGEABLE BATTERY PACK. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY. FOR FURTHER INFORMATION REGARDING BATTERIES OR THEIR DISPOSAL PLEASE CALL 1-888-557-TYCO.

IMPORTANT DISPOSABLE BATTERY INFORMATION

- ✓ Insure that battery polarity is correct.
- ✓ Use only batteries of the type recommended (or equivalent).
- ✓ Do not mix old and new batteries.
- ✓ Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

- ✓ Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period.
- ✓ For best performance use alkaline batteries (where disposable batteries are called for). Battery life may vary depending on battery brand.
- ✓ Do not recharge non-rechargeable batteries.
- ✓ Do not short-circuit terminals.
- ✓ Remove rechargeable batteries

- before recharging. Recharge batteries only under adult supervision.
- ✓ Dispose of batteries safely.

VII. BATTERY INSTALLATION

VEHICLE

- 1 Hold the battery pack upright with contacts as shown. Push the battery pack straight up into the vehicle's battery compartment from below, making sure the battery pack clicks securely into place.
- 2 To remove the battery pack, hold the vehicle upright on a table or other surface. Press the battery release button to release the battery pack.

Estimated run time for this vehicle:
approximately 30 minutes

TRANSMITTER



- 1 Install one 9-volt battery with polarity (+/-) as shown inside battery compartment.
- 2 The 9-volt transmitter battery will last much longer than the run time of the rechargeable NiCd battery pack.

VIII. SAFETY INFORMATION

Adults, this toy is recommended for children 5 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child.

SAFETY TIPS

- DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from the tires, wheel hubs and socket while the vehicle is switched ON or the transmitter is in operation.
- If this toy is being operated in the presence of young children, adult supervision is recommended.
- To avoid accidental operation, remove all batteries when not in use.
- DO NOT operate your vehicle on streets! They are for real cars.

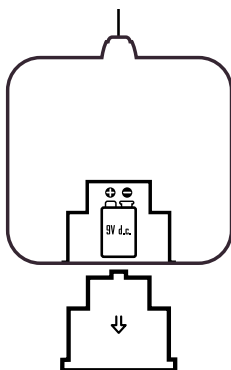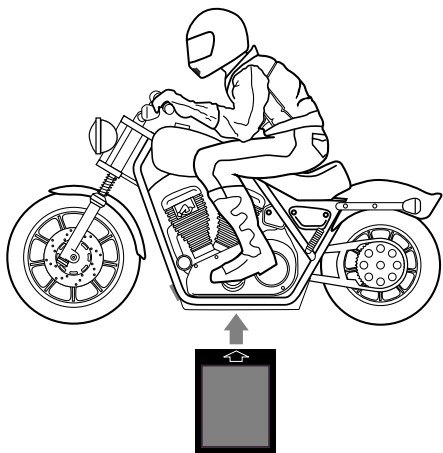



SYMPTOM	PROBABLE CAUSE	CORRECTION
Vehicle runs slowly or will not run.	- Loose battery connection or vehicle switch not ON. - Weak or uncharged rechargeable battery. - Weak transmitter battery.	- Check battery connector and vehicle switch. - Charge battery or replace. - Replace with fresh alkaline battery.
Erratic operation or only short range possible.	Radio interference likely.	- Change location (see point 2 – Quick Tips) - Hold transmitter above waist level, with antenna not touching other objects (see point 3 – Quick Tips)
Short battery life.	Battery not fully charged.	Recharge NiCd battery pack. For maximum running time, make sure you give your battery pack a full charge.
Vehicle doesn't work after going through water or snow.	Water in the electronics area.	- Vehicle will take several hours to dry. Allow to dry completely overnight before trying again. - Operate your vehicle in a dry area. Avoid driving in water and snow.

© 2000 Mattel, Inc., Mt. Laurel, NJ 08054 U.S.A.

PRINTED IN CHINA. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

Retain this address for future reference: Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Mattel Australia Pty., Ltd., Richmond, Victoria 3121 - Consumer Advisory Service: 1800 800 812 (valid only in Australia). Mattel East Asia Limited, 930 Ocean Centre, Harbour City, HK, China.

Produced under license from Harley-Davidson Motor Company. Harley-Davidson, Softail, Harley, Fat Boy, and the Bar & Shield are registered trademarks of H-D Michigan, Inc.

COMPLIANCE WITH FCC REGULATIONS

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
 - (2) THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.
- This device generates and uses radio frequency energy and if not used properly may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC, which are designed to provide reasonable protection against such interference.



CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.