

Harry Potter™

INSTRUCTIONS

For ages 8
and over

HOGWART'S SCHOOL PLAYSET

Requires 3 "AA" alkaline
batteries (not included).



⚠ WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.

Contents:

- **MOTORIZED PLAYSET**
- **6 FIGURES**


Please remove everything from the package and compare to the contents shown here.
If any items are missing, please call 1-800-524-TOYS.

Keep these instructions for future reference as they contain important information.




50703-0920

TO PLAY

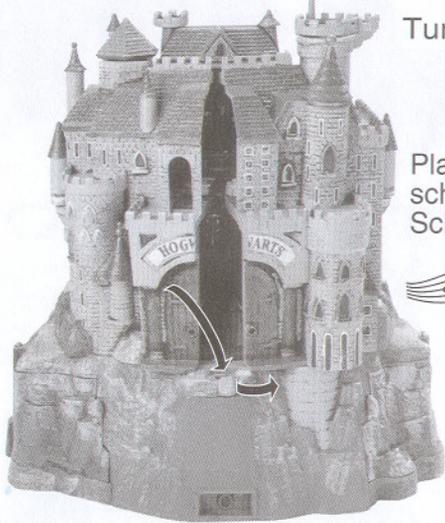


Turn on main switch at rear of castle.

Place Harry into slot in front of school and move rock to the right. School magically opens.

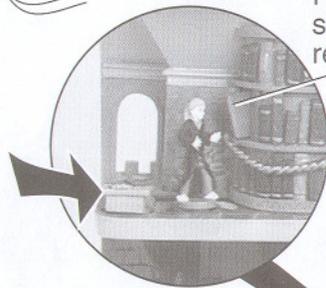

Place figure into the library slot; move table to right to release the screaming book.

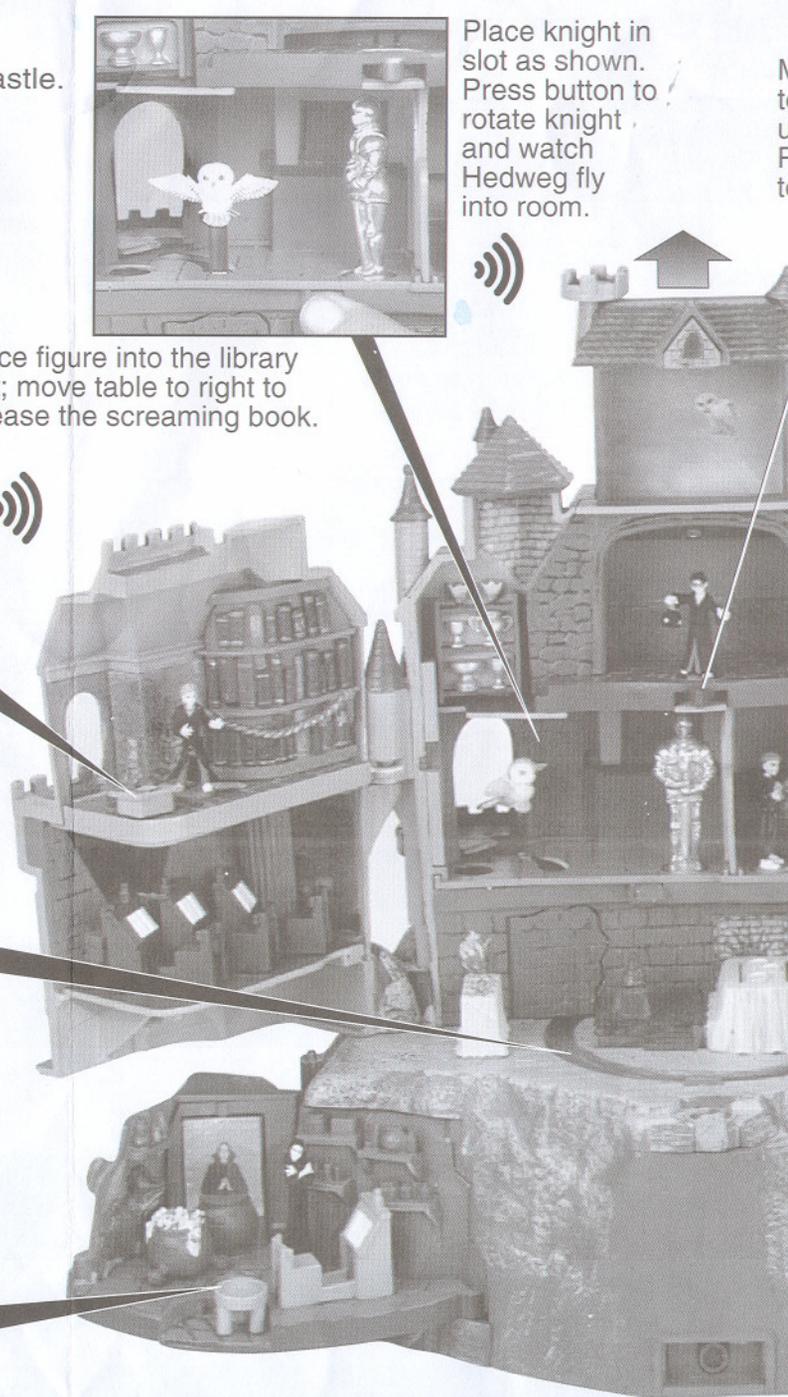


Place knight in slot as shown. Press button to rotate knight and watch Hedweg fly into room.




Place Harry onto the hallway. He will circle through the "Great Hall" and as he passes the table, food will "magically" appear.

NOTE: Both doors must be shut to close up the school. Move rock to the left to turn off the power.

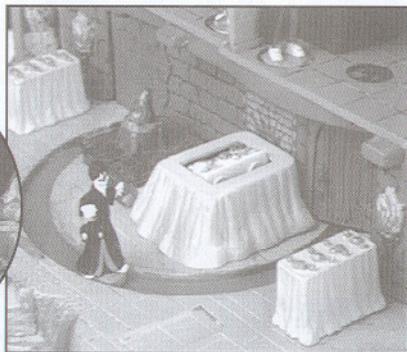

Place Harry onto stool in front of cauldron and move stool to the right to make potion "boil" over.

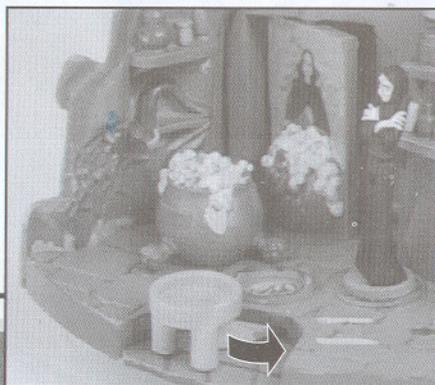

Light in
shown.
button to
light
ch
fly
n.

Move lever
to left to pop
up the owlry.
Push down
to close.



Place figure in slot
at left and the troll
in the center slot.
Press button to
club the troll.




BUTTON



DRAWBRIDGE
DOOR

REAR
DOOR

STORAGE BIN

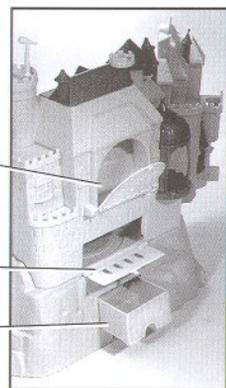

Rear of school features a fold down
drawbridge door, a secret storage
bin and a door to view Harry pass
through the hall or to recover him if
he gets stuck.


Place Harry in slot in front of door
and any other figure in slot left of
table. Move table to the left to
make Harry invisible.




FEATHER



Place figure in slot
and move broom to
the right to levitate
the feather.

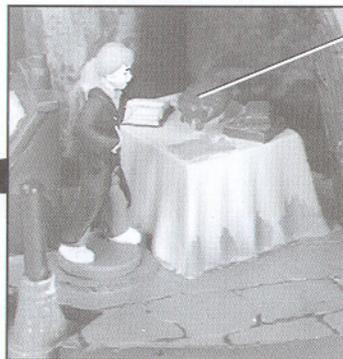

INSTALL/REPLACE BATTERIES

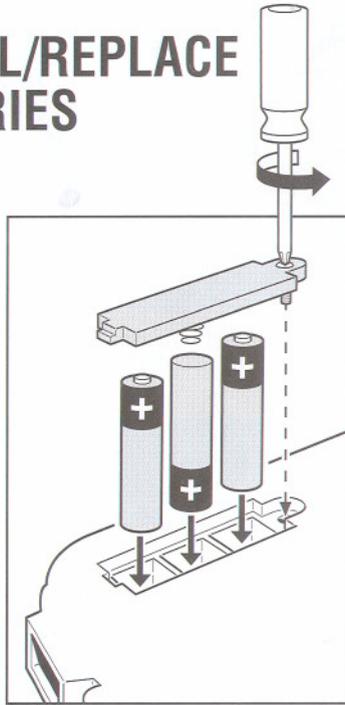

Remove battery cover with a Phillips screwdriver (not included) and set aside. Insert three "AA" alkaline batteries (not included) as shown and replace battery cover.

USE ONLY ALKALINE BATTERIES:
Toy may not function or operate with other types of batteries.

If there is no sound, turn main switch OFF then ON to check before replacing batteries.

Hogwarts School electronic playset can be connected to activate all the other playsets.
(Sold separately, subject to availability.)

TOP VIEW

FORBIDDEN
CORRIDOR

PLATFORM
9 - 3/4

HAGRID'S
HUT

BATTERY SAFETY INFORMATION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely. Do not dispose of in a fire as the batteries may explode or leak.
11. Products with non-replaceable batteries are not to be disposed of in a fire as the batteries inside may explode or leak. Dispose of batteries safely.

2-YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). **Valid only in U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012 U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

CONSUMER INFORMATION

MATTY MATTEL™ toys



YOU CAN TELL IT'S MATTEL!™ Call us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1(800)524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.



HARRY POTTER, characters, names and related indicia are trademarks of Warner Bros. © 2001.

WB Shield:™ & © 2001 Warner Bros.

Used under license.

s01

2001 Mattel, Inc., El Segundo, CA 90245 U.S.A. All Rights Reserved.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.
Mattel Australia Pty. Ltd., Richmond, Victoria 3121.

Consumer Advisory Service 1800 800 812 (valid only in Australia).

Mattel East Asia Limited, 930 Ocean Centre, Harbour City, HK, China.