 


Barbie®
Doll



INSTRUCTIONS

CONTENTS

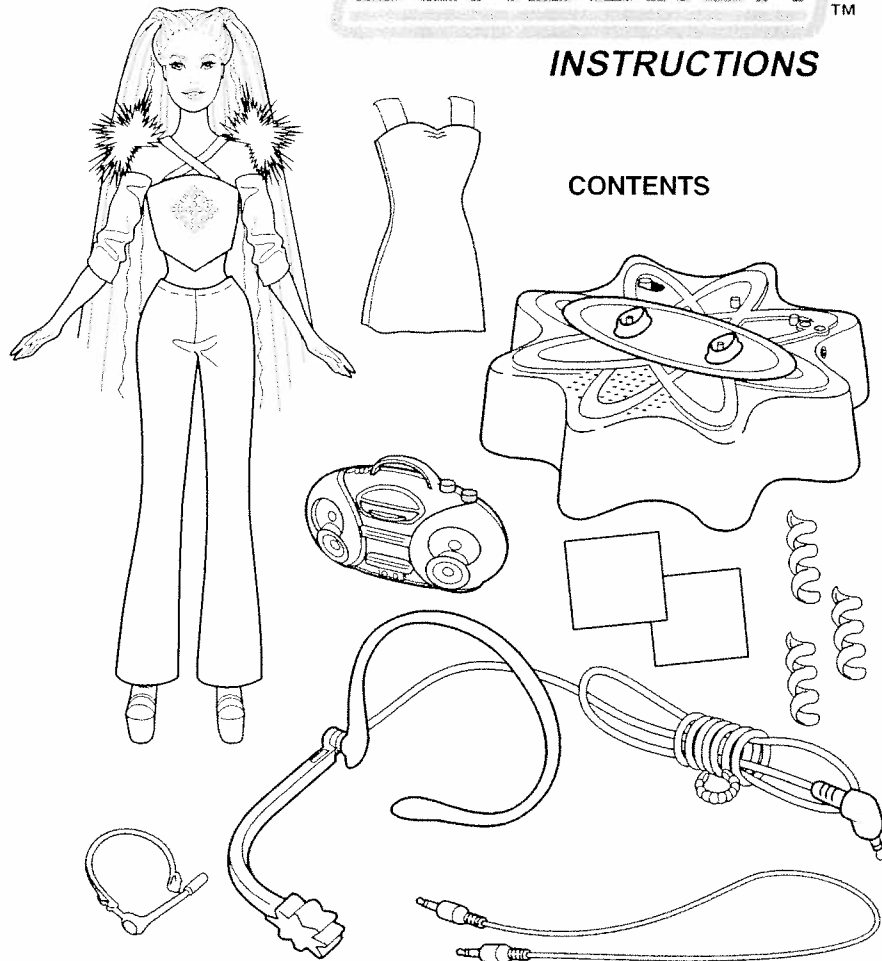

Colors and decorations may vary from those shown.
Requires 3 "C" alkaline batteries, not included.

Please remove everything from the package and compare to the contents shown here.

 
If any items are missing, please call 1-800-524-TOYS.



55630-0920

Keep these instructions for future reference as they contain important information.

©2002 Mattel, Inc. El Segundo, CA 90245 U.S.A. All Rights Reserved.

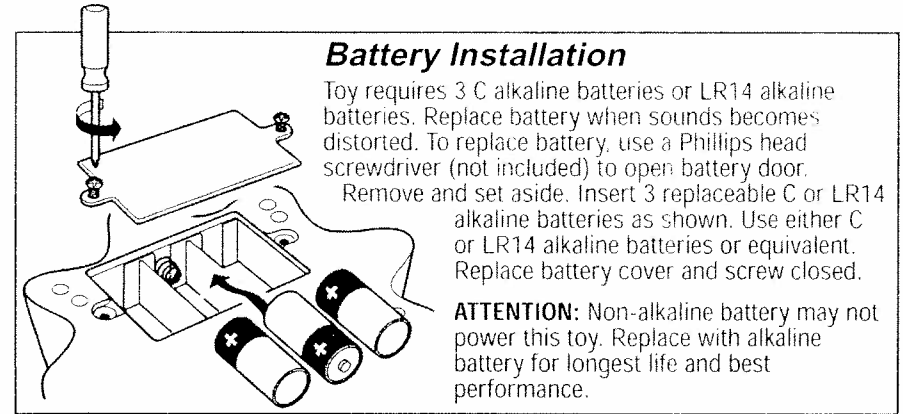

Battery Installation

Toy requires 3 C alkaline batteries or LR14 alkaline batteries. Replace battery when sounds becomes distorted. To replace battery, use a Phillips head screwdriver (not included) to open battery door.

Remove and set aside. Insert 3 replaceable C or LR14 alkaline batteries as shown. Use either C or LR14 alkaline batteries or equivalent. Replace battery cover and screw closed.

ATTENTION: Non-alkaline battery may not power this toy. Replace with alkaline battery for longest life and best performance.

BATTERY SAFETY INFORMATION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old and new batteries
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.
11. Do not dispose of in fire as batteries may explode or leak.

TWO YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012 U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday – Friday, 8:00 a.m. – 6:00 p.m. EST. Outside U.S.A., see telephone directory for Mattel listing.

CONSUMER INFORMATION

MATTY MATTEL™ TOYS



YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m. - 6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1 (800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.

 
⚠ WARNING:

CHOKING HAZARD – Small parts.
Not for children under 3 years.


Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

You and your doll are pop stars!

1. Place doll on to stage, with the shoe holes on the posts. Pose your doll.

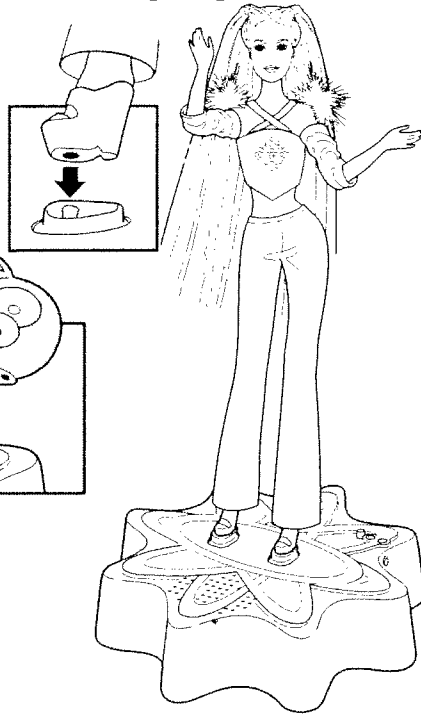

 2. Boom box goes on stage onto pegs on right back side.

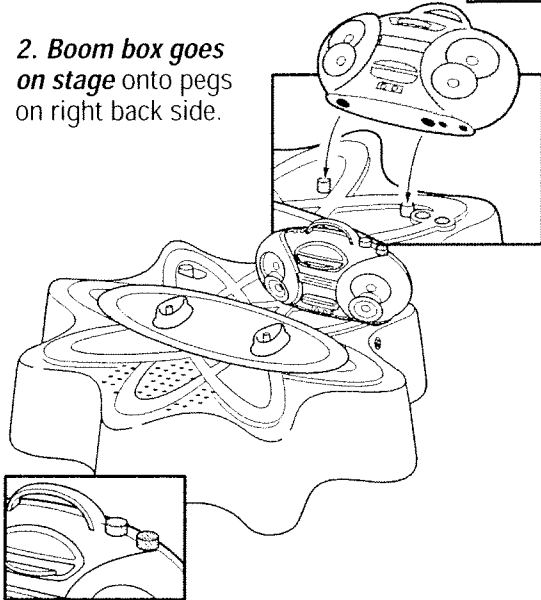

Doll dances along with music.

 
3. Boom box buttons activate the doll and the music.

Push the button #1 one time to play the music. The doll dances.

Push the button #1 two times and the music pauses.

Push the button #2 to change the song selection (2 songs are included).

Buttons on stage also work in case the boom box is lost. The boom box does not play music by itself.

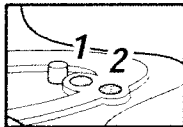

On/Off/Volume:

Left position is off

Middle position is *low volume*

Right position is *high volume*



Plug in your own music, too!

 
The *auxiliary cord* plugs into bottom hole on the stage and into your own music player.

This allows you to use songs other than what is included with toy.

Sing with your doll and hear your voice too.

The child sized head set plugs into top hole on stage side.

You put on head set and you can sing along with song. Your voice comes of the speaker along with your doll's voice.

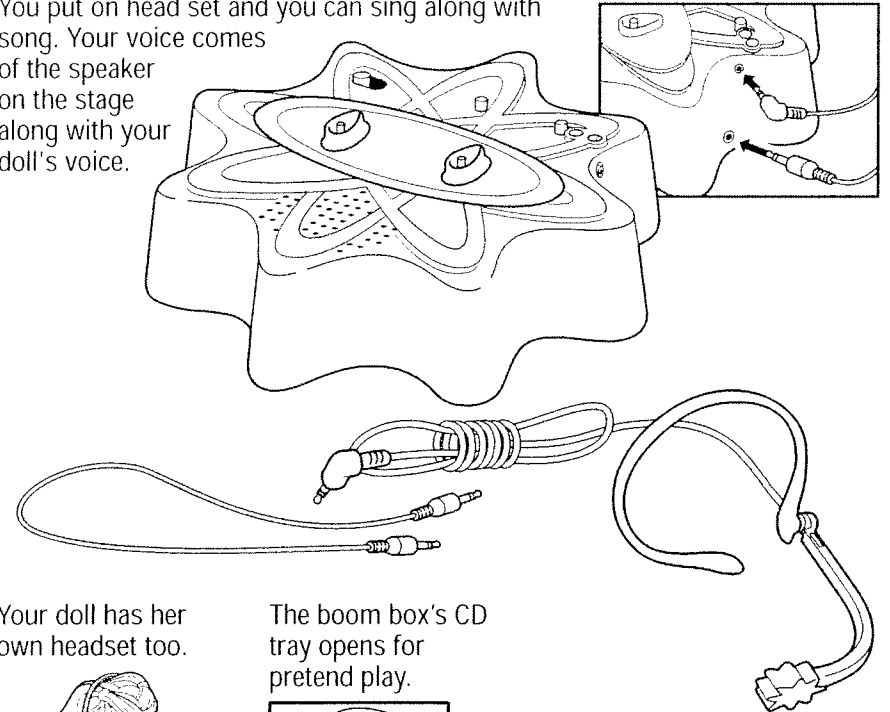

Your doll has her own headset too.



The boom box's CD tray opens for pretend play.

