


Before playing with Tickle-Me-Elmo™ please read this

Upon first removing Elmo from his package he will only be able to do some of his funny actions.


- A. To make him do all the things he was designed to do, first turn Elmo over on his belly.
- B. Pull off and throw away the attached tag from Elmo's back as shown . . .
Now he's ready to have fun with.

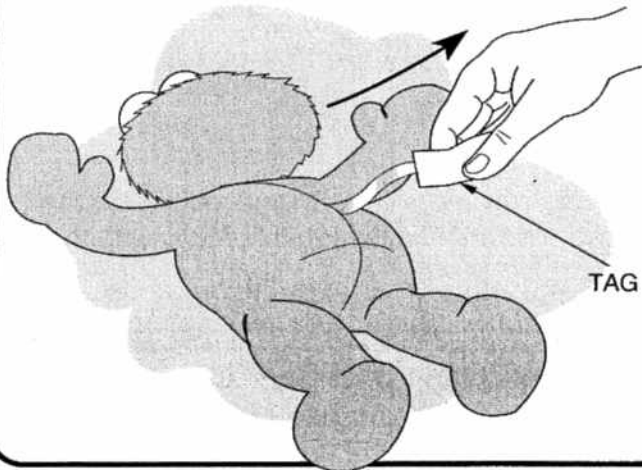

How to play with Tickle-Me-Elmo™

It's easy to have fun with Elmo™ . . . just do the following.


1. Tickle Elmo's belly once to make him giggle and talk.
2. Tickle his belly a second time to make him laugh harder and talk.
3. Tickle Elmo's belly a third time and watch him shake and laugh like crazy.

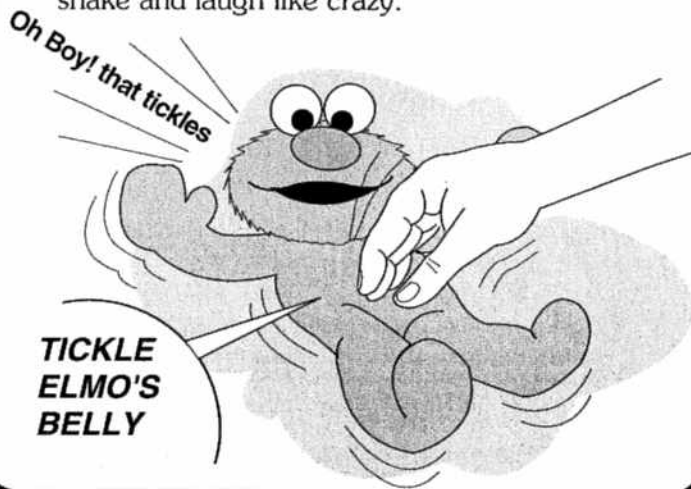

How to install the Batteries


Sooner or later the batteries that originally came with Elmo are going to run down and require replacing. To replace the batteries carefully read the following instructions, step by step.

Step 1

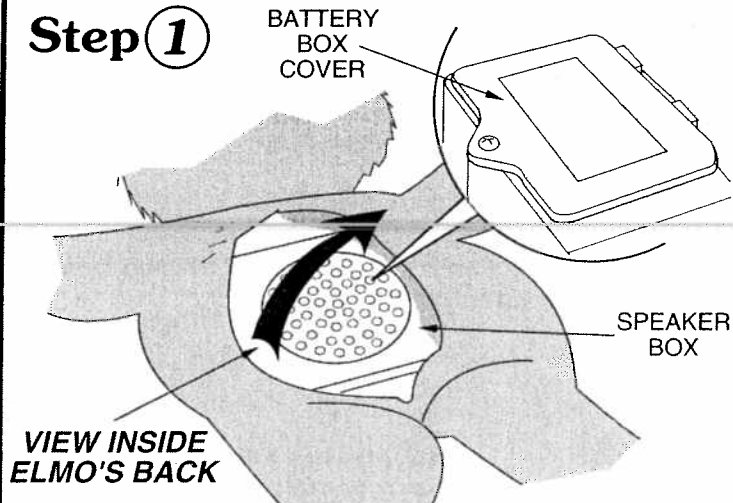

- A. Open the Velcro strip on Elmo's back to expose the speaker box (with holes).
- B. Leave the speaker box inside Elmo and turn the box in the direction of the arrow until the battery box cover is facing you. See the inset picture.


Step 2

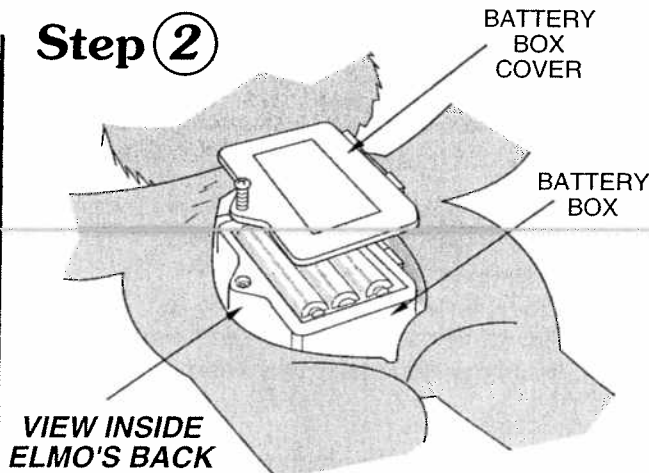

- A. Unscrew the battery cover using a Phillips screwdriver (not included) and remove.


How to install the Batteries (cont'd)

Step 3

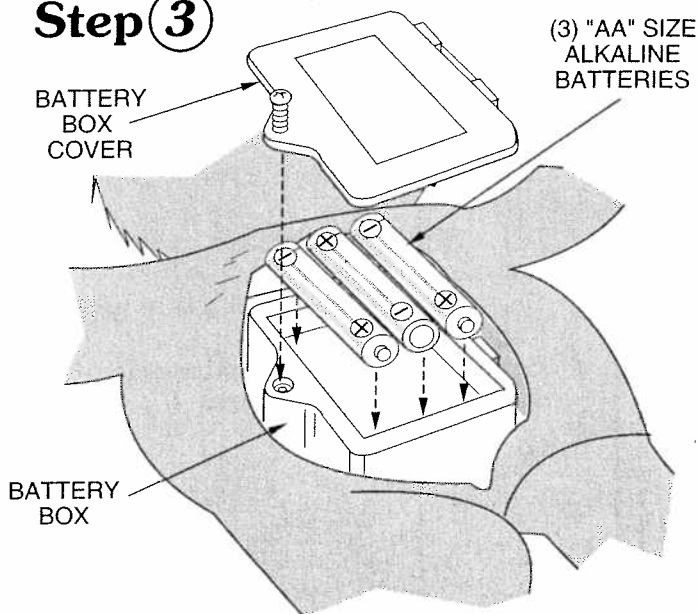

- A. Insert (3) new "AA" size "alkaline" type batteries as shown, carefully noting the direction of the (+) and (-) symbols on the batteries.
- B. Screw the battery cover back on the battery box.

Step 4

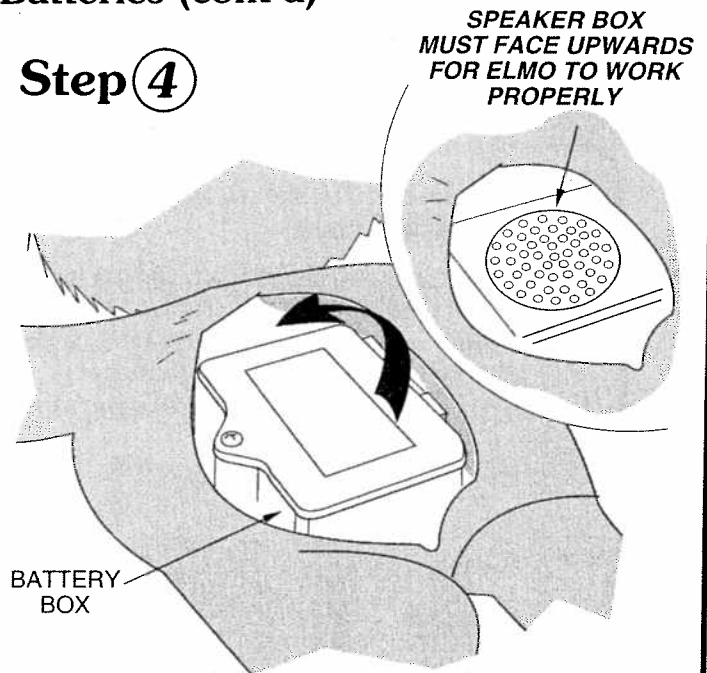

- A. Turn the battery box in the direction of the arrow as shown, until the speaker box, with the holes, is facing upwards.
- B. Then close the Velcro strip to seal Elmo's back.

• ELMO's TROUBLE SHOOTING TIPS •

- If Elmo does not respond when you press his belly check to see if the batteries are installed properly as explained earlier in the instructions.
- Also try replacing batteries with (3) new "AA" size "alkaline" type batteries.
- If Elmo continues to shake after the laughing has stopped, the batteries probably need replacing.
- Elmo automatically shuts his power off when he's not being played with; so he won't drain his batteries when not in use.
- After replacing batteries make sure the speaker box, with holes, is turned to face upwards.


Special Operating Tips:

- If you do not tickle Elmo within approximately 5 seconds after not playing with him, he will reset himself and start doing his actions from the beginning again, Actions 1-2-3.
- If you keep tickling Elmo during the 3rd action he will repeat the 3rd action three times, then automatically reset himself back to the first action.

BATTERY SAFETY INFORMATION

- Battery installation or replacement by adult only.
- Use only batteries recommended
- Insert batteries correctly.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not attempt to burn batteries.
- Dispose of batteries safely and correctly.
- Remove batteries if the toy will not be used for a long period of time.

Should this product cause local electrical interference, we recommend moving it away from other equipment.

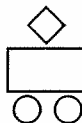

DC \equiv
3 X 1.5V
780mA 3.51W

THIS TOY HAS BEEN TYPE TESTED TO THE ELECTRICAL SAFETY STANDARD HD271. DO NOT USE RECHARGEABLE BATTERIES.

© 1995 Children's Television Workshop. Sesame Street Muppets.
© 1995 Jim Henson Productions, Inc. All rights reserved.
Sesame Street and the Sesame Street sign are trademarks of CTW.

© 1995 TYCO PRESCHOOL TOYS, INC.
200 Fifth Avenue, New York, N.Y. 10010.
All rights reserved.

TYCO[®]