

**Fisher-Price®**

# Calming Vibrations Monitor



**Model Number: 71644**

For proper set-up and use, please read these instructions.

Please keep this instruction sheet for future reference,  
as it contains important information.

Transmitter is electrically powered.

Crib soother is powered by three "D" **alkaline** batteries (not included).

Remote control receiver is powered by the AC adaptor (included, plugs  
into standard household outlets 120V AC). Remote control receiver  
also runs on battery power (9V **alkaline** battery - not included).

Adult assembly is required.

Tool needed for assembly: Phillips screwdriver.

Discover what's possible™... [www.fisher-price.com](http://www.fisher-price.com)

# IMPORTANT!



 
## CAUTION

This product cannot replace responsible adult supervision.

- This product is not intended to be used as a medical monitor and its use should **not** replace adult supervision.
- Test sound reception of remote control receiver before first-time use and whenever you change location of transmitter.
- To prevent entanglement:
  - Never place transmitter in a crib or playpen. Keep transmitter and remote control receiver out of baby's reach.
  - Never use extension cords with the AC adaptor.
- Never use transmitter, crib soother or remote control receiver near water (ie.: bathtub, sink, laundry tub or wet basement, etc.).
- Always use transmitter, crib soother and remote control receiver where there is adequate ventilation. To prevent overheating, keep transmitter, crib soother and remote control receiver away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.
- Never attempt to modify this product.

# Calming Vibrations Monitor

Listen and respond to baby with calming vibrations and sounds.

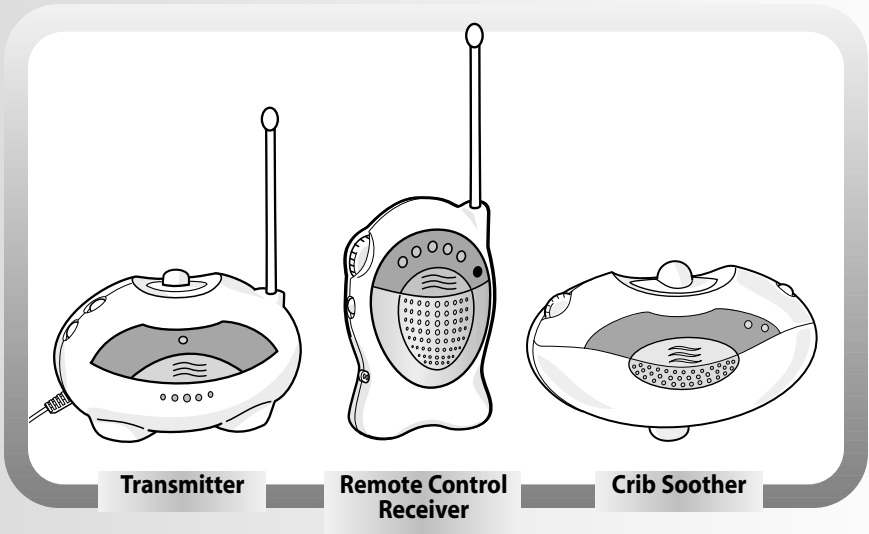

## Transmitter

Place in baby's room or play area to transmit sounds to the remote control receiver. Transmitter operates on AC current.

## Remote Control Receiver

Listen and respond to baby from anywhere around the home. Remote control receiver operates using the AC adaptor (included) or battery power.

## Crib Soother

Attach to baby's crib and select calming vibrations, sea shore sounds or both! Activate by pressing the soother button on the remote control receiver, transmitter or the crib soother. Requires three "D" (LR20) **alkaline** batteries for operation.

# Consumer Information

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than return this product to the store. Usually, we can solve the problem over the telephone or send you replacement parts.

Please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, between 8 AM - 6 PM EST, Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or write to:  
Fisher-Price® Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

If you have any questions about this product:

**In Canada**, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

 
**In Great Britain, telephone 01628 500302.**

**In Australia**, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

# Assembly

## CAUTION

This package contains small parts  
in its unassembled state.  
Adult assembly is required.

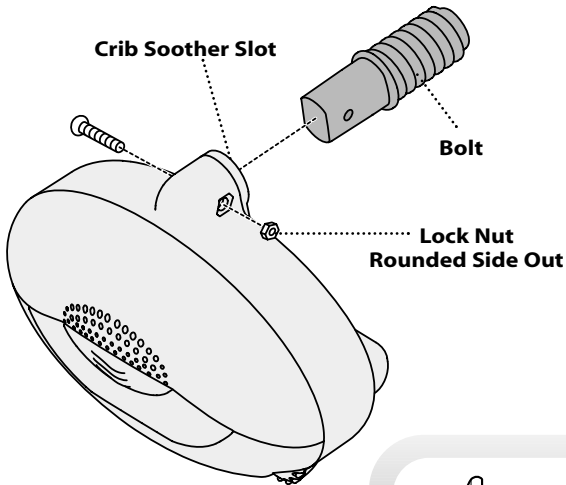

- Fit the bolt into the slot on the back of the crib soother.
- Insert the screw into the hole in the crib soother, as shown.
- Fit the lock nut, **rounded side out**, into the hexagonal opening on the crib soother, as shown.
- Tighten the screw with a Phillips screwdriver. Do not over-tighten.



M4 x 1" Screw




Rounded Side  
M4 Lock Nut

**BOTH SHOWN ACTUAL SIZE**

 
# Remote Control Receiver Battery Installation (Optional)

The remote control receiver operates using the enclosed AC adaptor or battery power.

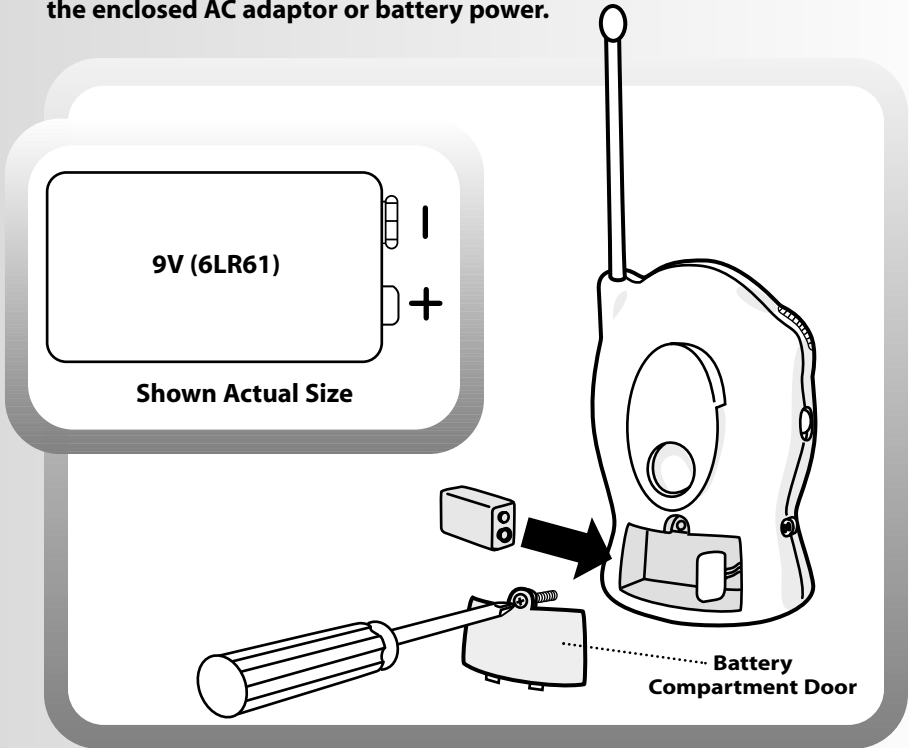


- Locate the battery compartment door on the back of the remote control receiver.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Lift to remove the battery compartment door.
- Snap the terminals of a fresh, 9V **alkaline** battery into the remote control receiver connectors.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

# Crib Soother Battery Installation

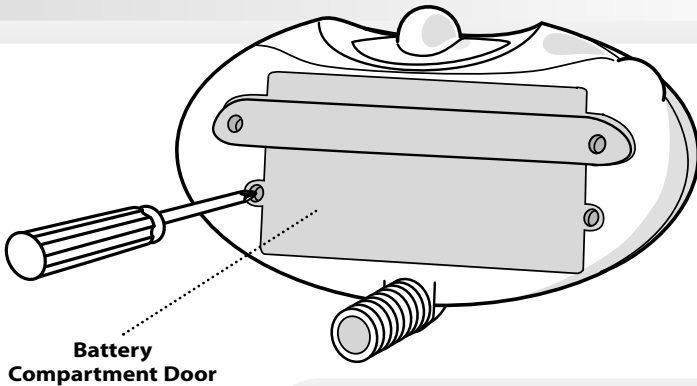 

 - Locate the battery compartment door on the back of the crib soother.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Lift to remove the battery compartment door.
- Insert three “D” **alkaline** batteries as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

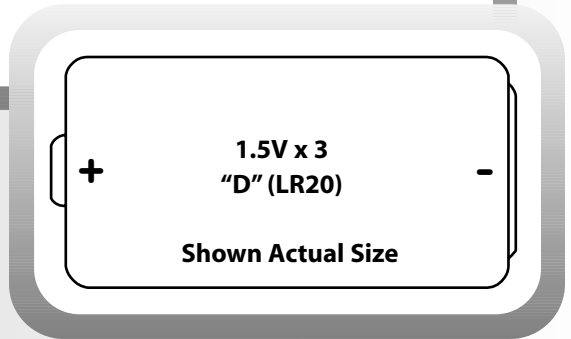

**Hint:** When battery power is too low, vibrations/sounds may not shut off or may not function properly as described in these instructions. Remove and replace **all three batteries** with three, **new “D” (LR20) alkaline** batteries.



# Battery Tips

  - Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage this product. Dispose of batteries safely.
- Do not dispose of the batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the “Battery Installation” instructions are to be used.
- If a removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- We recommend the use of **alkaline** batteries for longer battery life.




# Testing Sound Reception

**Test transmitter transmission and remote control receiver reception.**

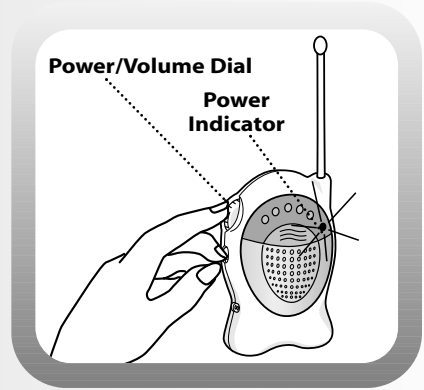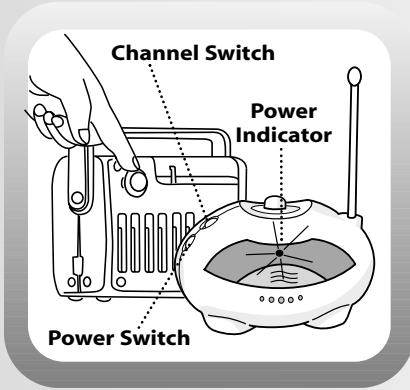

Set the channel switch on the transmitter to the same channel as the remote control receiver. Place the transmitter in the room in which you intend to use it. Slide power switch on. Turn on a radio.

 Place the remote control receiver in the room in which you intend to use it. Rotate the power/volume dial to turn power on. Adjust the remote control receiver location.

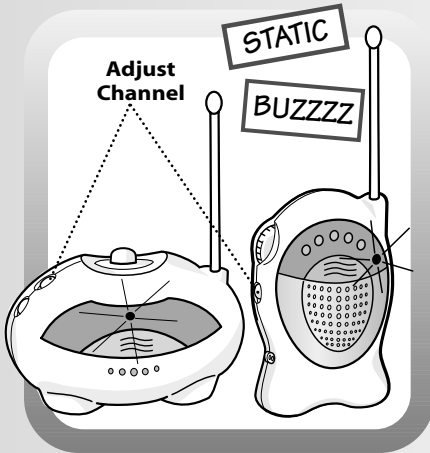


- Variable light display lights when sound is received by remote control receiver:
  - One or two dots light for shallow sounds.
  - Three or more dots light for louder sounds.
- If you experience interference (buzzing or static, etc.) while using one channel setting, switch **both** units to other channel. Selecting a channel is usually a one time adjustment.

**Hint:** All five dots in remote control receiver variable light display light:

- If you turn remote control receiver power on before transmitter power. You will also hear static noise. Turn volume down and turn transmitter power on.
- If the remote control receiver is too far away from the transmitter. Move the remote control receiver closer to the transmitter.
- If loud sounds are transmitting.

# Attach Crib Soother to Crib Rail

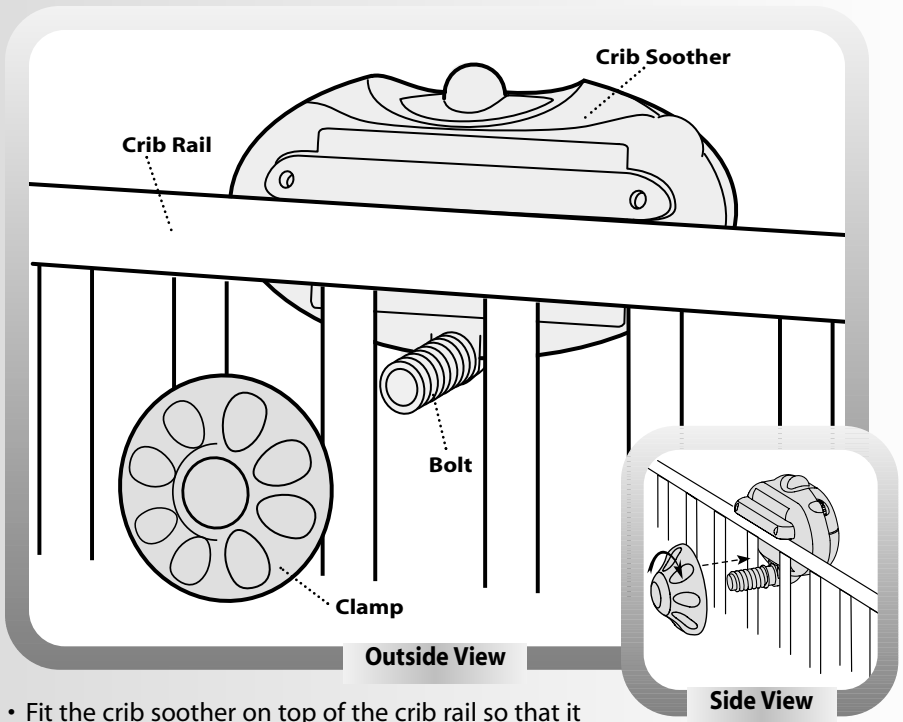 


- Fit the crib soother on top of the crib rail so that it faces baby.

**Hint:** The speaker is located on the front of the crib soother. For best sound reception, we recommend placing the crib soother so that the speaker faces baby.

- Fit the clamp to the end of the bolt on the crib soother.
- Turn the clamp to secure the crib soother to the crib rail.
- Rock the crib soother back and forth to be sure it is secure on the crib rail. If it is not secure, tighten the clamp again!

# Setup & Use


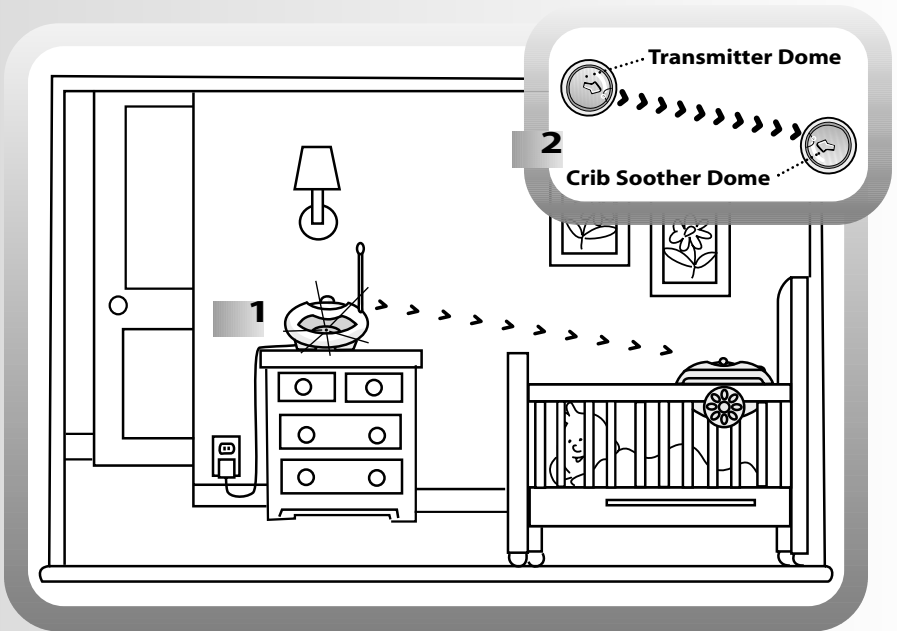 


- 1** Place the transmitter in the same room with the baby. Point the transmitter microphone directly toward the crib or play area. The transmitter and the crib soother should be no more than 15 feet from each other.
- 2** Align the arrow on the transmitter dome with the arrow on the crib soother dome.

**IMPORTANT!** For best performance between the transmitter and the crib soother, avoid using in areas of bright light.



  
**Hint:** For best results, the path between the transmitter dome and the crib soother dome should be in a direct line and free of obstacles.

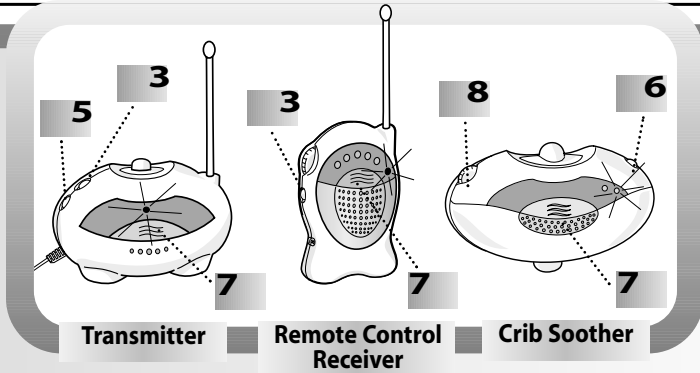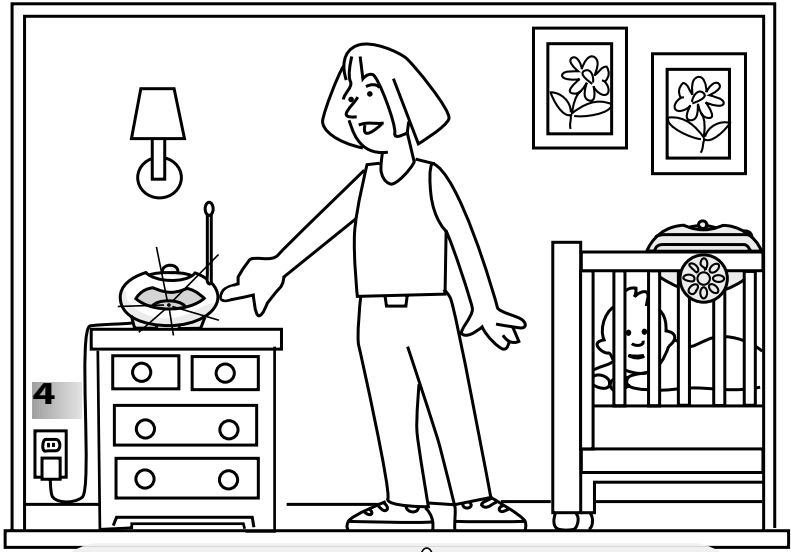
# Setup & Use



**IMPORTANT!** Test sound reception of this monitor before first time use and whenever you change location of transmitter (see page 9).

# Setup & Use

 
 
- 3** Set the transmitter channel switch to the **same** channel as the remote control receiver.
- 4** Unwrap and fully extend the transmitter power cord for best transmission. Insert the power cord plug into the wall outlet.
- 5** Slide the transmitter power switch on. The power indicator lights.
- 6** Choose a setting on the crib soother:
  -  Vibrations Only
  -  Vibrations and Sea Shore Sounds
  -  Sea Shore Sounds Only
  - Off

After choosing a setting you will see a blinking red light on the front of the crib soother. The crib soother can receive a signal from the transmitter or remote control receiver for up to eight hours. After eight hours, the blinking red light turns off, and you will need to slide the mode switch on the crib soother off  and then to the desired setting.

- 7** There is a soothing button on the crib soother, transmitter and the remote control receiver. Press any of the buttons to activate your selection on the crib soother. The crib soother turns on for about 10 minutes (the green light on the front of the crib soother turns on) and then automatically shuts off (the green light on the front of the crib soother also turns off). If you'd like to immediately turn off crib soother, press any of the soothing buttons again.
- 8** Rotate the volume dial on the crib soother to adjust volume.

**Hint:** If you do not want to turn the crib soother on after making a selection, **do not** press any of the soothing buttons.

# Setup & Use

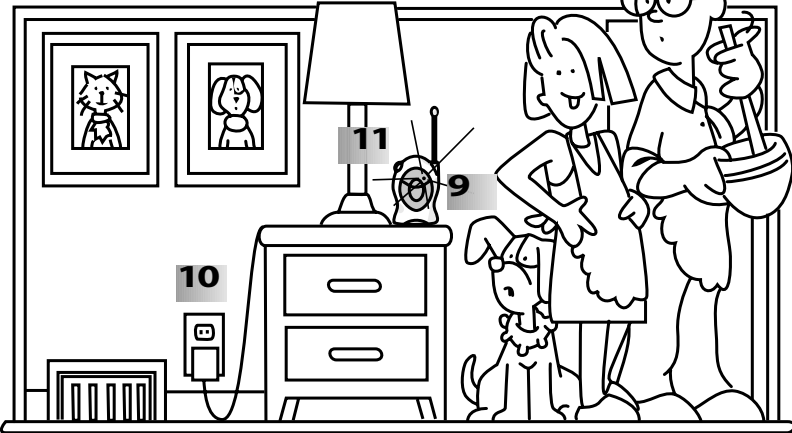
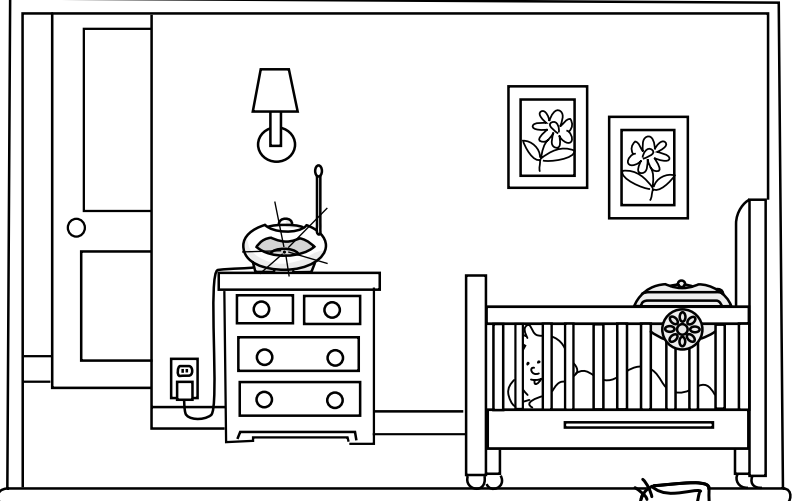


# Setup & Use

- 9 Place the remote control receiver where you will see or hear it.
- 10 Unwrap and fully extend the AC adaptor cord for best reception. Insert the AC adaptor jack into the remote control receiver socket and plug into the wall outlet.  
**Note:** To use a 9V **alkaline** battery as a power source, refer to “Remote Control Receiver Battery Installation” instructions on page 6.
- 11 Rotate the remote control receiver power/volume dial to turn the power on. The power indicator lights. Rotate the power/volume dial to adjust volume.

**Note:** AC adaptor is 120 VAC, 60Hz, 5W input; 9 VDC 200mA output; center positive polarity; plug OD is 5.5 mm, plug ID is 1.5 mm.

  
# Setup & Use

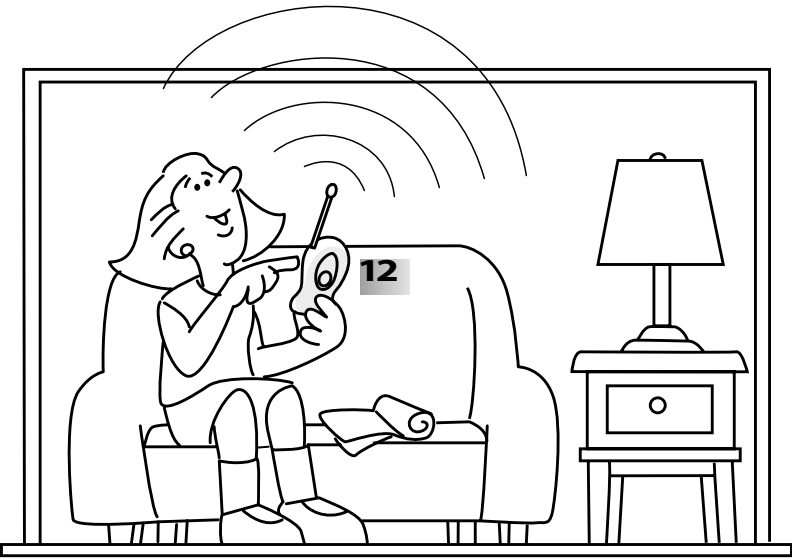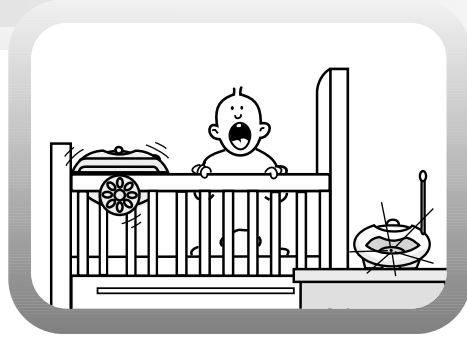

- 12** To soothe baby, press **and hold** the soothing button on the remote control receiver **for about two seconds**. The green light on the front of the crib soother turns on and baby enjoys vibrations/sounds.
- The crib soother will turn off after approximately 10 minutes and the green light turns off. To turn it back on, simply press **and hold** the soothing button on the remote control receiver **for about two seconds**.



# Setup & Use

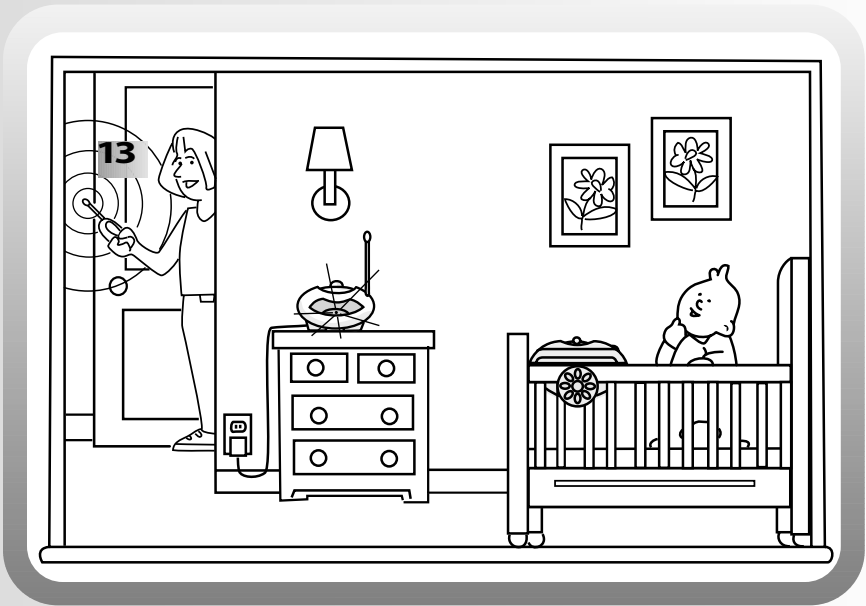 

**13** To turn the crib soother off, press **and hold** the soothing button on the remote control receiver for about two seconds.

**IMPORTANT!** It takes a few seconds for the crib soother to receive a signal from the remote control receiver. Be sure to press **and hold** the soothing button on the remote control receiver **for about two seconds**.

## **Hints:**

- The remote control receiver does not need to be in direct line with the crib soother to activate it. You can respond to baby from anywhere around the home.
- You can press any of the soothing buttons (transmitter, crib soother or remote control receiver) to turn the crib soother off.

# Problems & Solutions



# Problems & Solutions

## PROBLEMS

- 1** Transmitter power indicator not lit.
- 2** You hear static or buzzing from remote control receiver.
- 3** Transmitter power indicator not lit.
- 4** Transmitter power indicator not lit.
- 5** Transmitter power indicator not lit.
- 6** You hear static or buzzing and all five dots lit on remote control receiver.

## SOLUTIONS

- 1** Turn transmitter power on. Power indicator lights.
- 2** Make sure channel switches on both transmitter and remote control receiver are set to same channel.
- 3** Make sure light switch that controls power flow to wall outlet is on.
- 4** Check transmitter power cord plug-to-outlet connection.
- 5** Power is off because circuit breaker for baby's room is off. Make sure house fuses and circuit breakers are on.
- 6** Check all five solutions above. Any one or more of these solutions should solve the problem.

**Hint:** *It is normal to hear a "pulsing" noise from the remote control receiver, especially when the volume is turned all the way up.*

**IMPORTANT!** If, after checking all of these solutions, you believe that your transmitter power cord or AC adaptor is damaged, please call Fisher-Price® at **1-800-432-5437**.

# Problems & Solutions



## PROBLEM

You can hear conversations or sounds from other homes.



 
## SOLUTION

There is signal interference due to other nursery monitors on same channel or cordless telephone use. Change channel switches on both transmitter and remote control receiver to eliminate source of interference.

### Hints:

- Do not use more than one transmitter and one receiver at same time in same household.
- Always remember that you are using public airwaves when using your monitor. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.

# Problems & Solutions

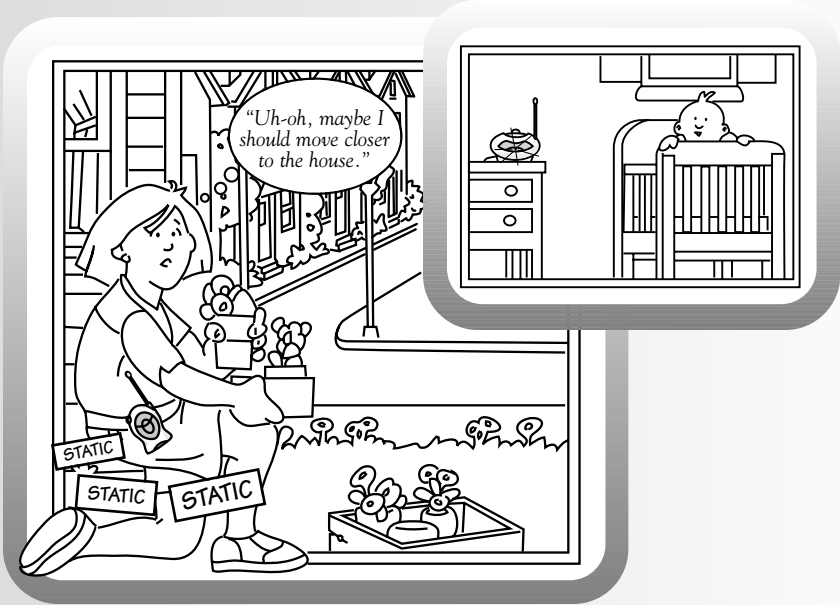

## PROBLEM

You hear static or buzzing because remote control receiver is out of range of transmitter.

## SOLUTION

Move remote control receiver closer to transmitter.

**Note:** Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference.

**Hint:** If you cannot hear your child and all five dots do not light, your remote control receiver battery is weak. Replace the remote control receiver battery with a fresh, 9V **alkaline** battery or use the AC adaptor for power source.

# Care

Excess dirt in the transmitter and the remote control receiver microphone will hamper transmission of sound. Clean outer surface of the transmitter, soother and remote control receiver with a cloth lightly dampened with a mild cleaning solution. Never immerse the transmitter, soother, remote control receiver or the AC adaptor.

## FCC Note (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Calming Vibrations Monitor

Model Number: 71644

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Calming Vibrations Monitor

Consumer Relations Department

636 Girard Avenue

East Aurora, New York 14052

## One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Calming Vibrations Monitor is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase. Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc., will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.



Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.  
©2002 Mattel, Inc. All Rights Reserved.  
® and ™ designate U.S. trademarks of Mattel, Inc.

**Printed in China**

71644pr-0920