 


Fisher-Price®

Instructions

R/C Racer™

- Please read these instructions carefully and keep them for future reference.

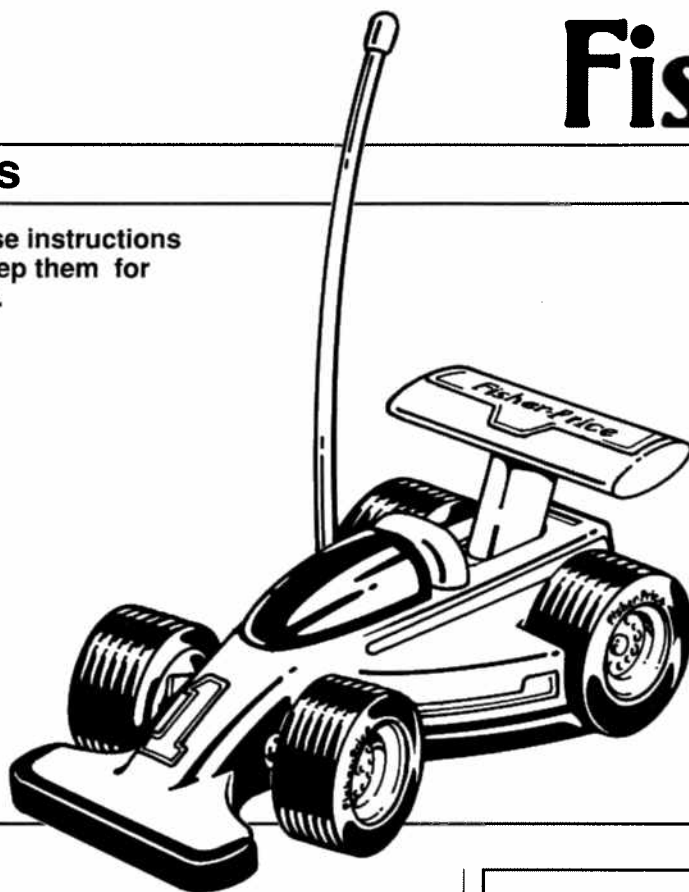


Batteries:

- The car uses four AA alkaline batteries and the transmitter uses one 9-volt alkaline battery.
- The 9-volt transmitter battery has a longer life than the AA car batteries. You may need to change the AA batteries in the car more often than the transmitter battery.

Note: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.



Battery Installation:

- Be sure to insert the batteries correctly.
- Use only fresh alkaline batteries.
- Remove the batteries if the toy is stored for a long period of time.

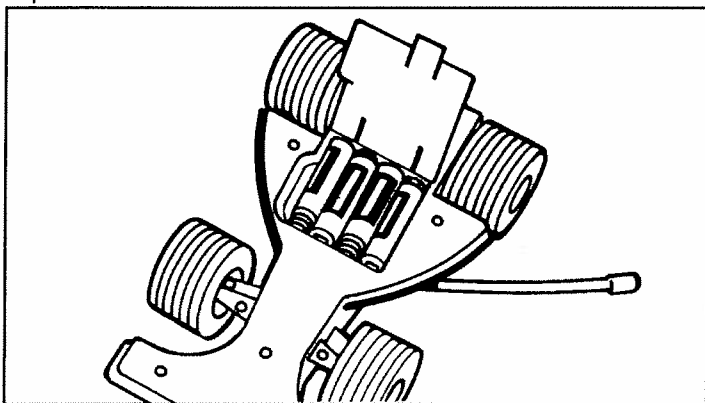

Car Batteries:

- Unfasten the screw in the car's battery door.
- Push the door in the direction of the arrow. Lift up the door.
- Install four AA alkaline batteries in the car as indicated inside battery compartment.
- Close the door and tighten the screw.

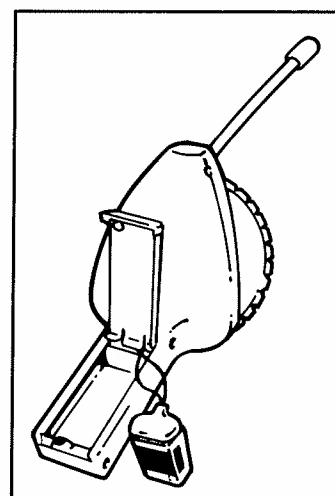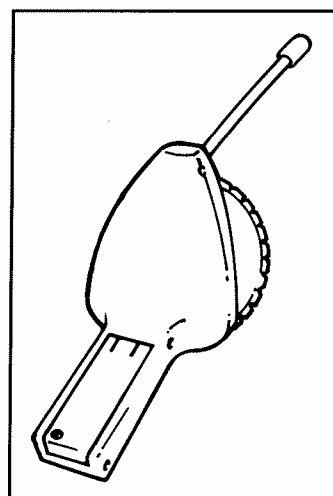


Transmitter Battery:

- Unfasten the screw in the transmitter's battery door.
- Push the door in the direction of the arrow. Lift up the door.
- Install one 9 volt battery in the transmitter.
- Close the door and tighten the screw.

If you have any problems with this product, please call Fisher-Price Consumer Affairs, toll free at 1-800-432-KIDS (1-800-432-5437) between 8 AM and 6 PM Eastern time, Monday through Friday, or write to:

Fisher Price, Inc.
Attn: Consumer Affairs
636 Girard Avenue
East Aurora, New York 14052

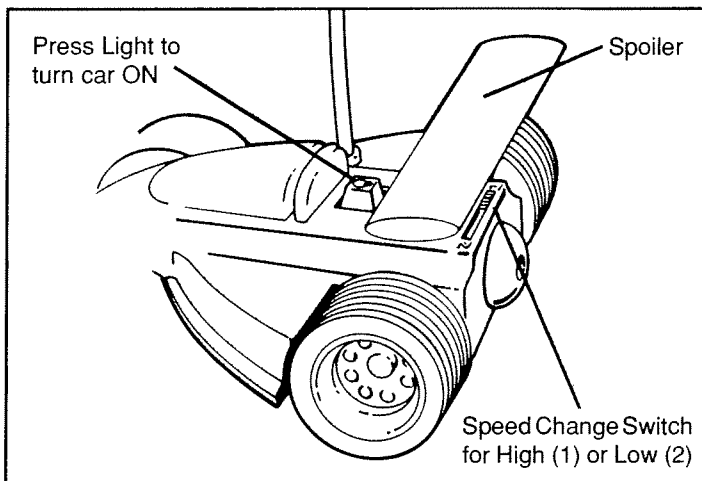


Operating the Car:

Press the ON switch on the car. The light should come on.


- If the switch light doesn't stay on, the batteries are low.
- If the switch doesn't light at all, the batteries are dead.
- Use the Speed Change Switch on the car for High (1) or Low (2) speeds.
- The car will power down automatically approximately 3-5 minutes after receiving last signal from transmitter. Use the spoiler for carrying the car, not the antenna.

Note: If the car goes too far from the transmitter, the signal will become weak and the car will not work properly.

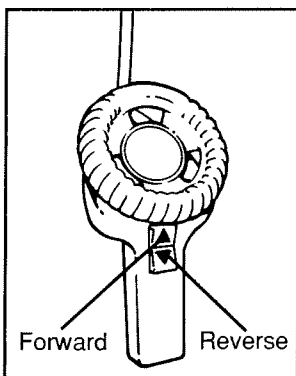

Signalling from the Transmitter:

- Push the top arrow for FORWARD. Release it to stop.
- Push the lower arrow for REVERSE. Release it to stop.
- Turn the wheel for LEFT, RIGHT, or CENTER.

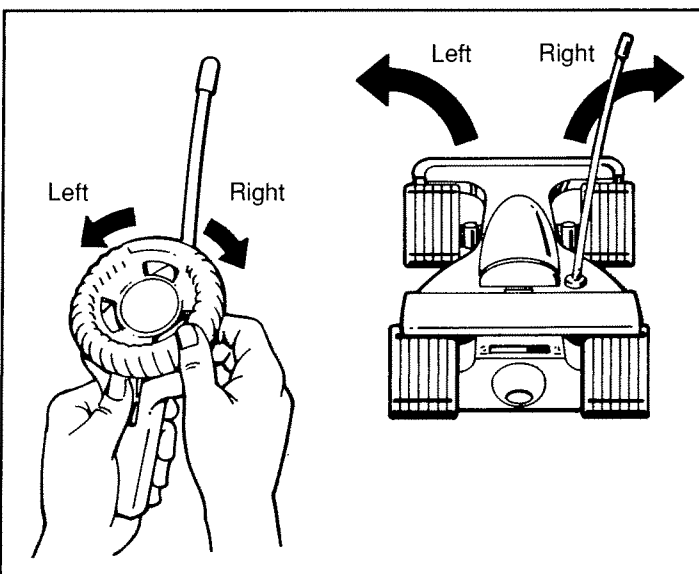

Tips and Hints:

- Do not hold either unit by the antenna.
- Never operate the car on streets.
- Do not store either unit near heat or in direct sunlight.
- Operate the car in a dry open area; avoid sand and water.
- Do not leave either unit outside overnight.
- If moisture does get inside the car or transmitter remove batteries and allow the car and/or transmitter to dry several hours before using.
- Remove batteries if unit is not being used for a long period of time.

Trouble Shooter Guide

CONDITION	PROBABLE CAUSE	CORRECTION
Car goes slowly Poor steering control	• Weak AA car battery	• Replace car batteries with fresh AA alkalines
Poor steering control	• Weak 9 volt transmitter battery	• Replace 9 volt battery
No power	• Dead battery • Incorrect placement of batteries • Dirty battery contacts	• Replace battery • Check +/- polarity battery position • Clean terminals
Car runs erratically	• Probably interference (see note below)	• Change location

Note on "Interference"

Radio interference can occur if more than one radio controlled car is operating on the same frequency. Radio interference can also occur near high voltage electrical wires, reinforced concrete buildings or trucks with CB radios.

TWO (2) YEAR LIMITED WARRANTY

Fisher-Price, Inc. (636 Girard Avenue, East Aurora, New York 14052) warrants that R/C Racer™ is free from all defects in material and workmanship when used under normal conditions for a period of two (2) years from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to the Fisher-Price Product Service Department at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.