

---

*Picture  
what your  
kids can do  
with the new*  
**PXL2000**



**Fisher-Price  
Electronics**

---

# PXL 2000™

*The First  
Video  
Camcorder  
System  
Created Just  
For Kids!*

## Easy to Use



1. Load audio cassette.



2. Press record button.




3. Take aim and shoot.

### Easy to Play Back

No VCR required...  
connects directly to the  
mini TV included.\*

\*See product instructions  
for details.

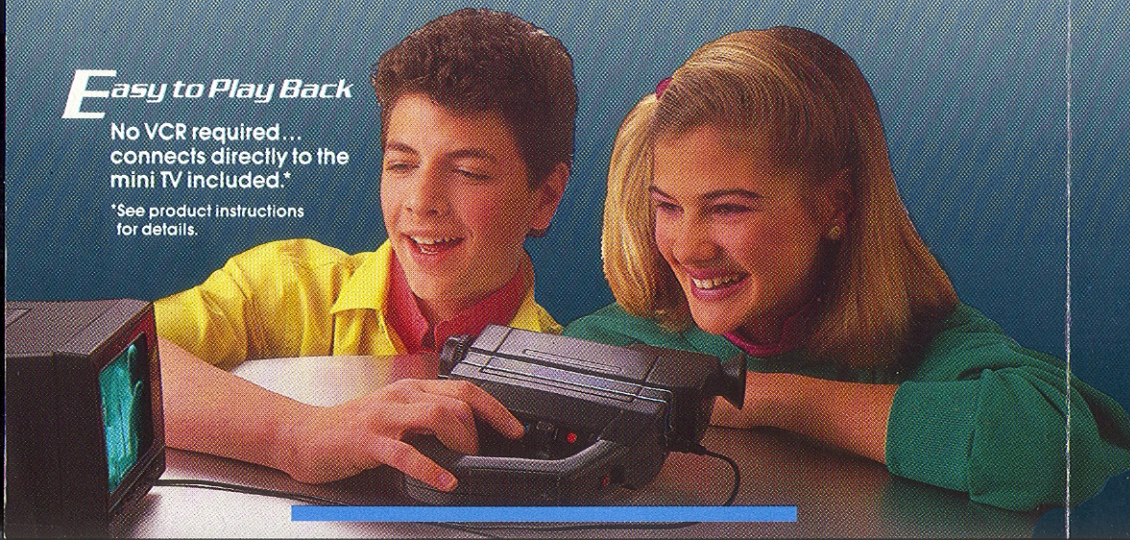

## ...Fun to Use



Music videos



Sports action



Fun with family

### Introducing Pixelvision

This technological breakthrough records a unique black and white dot matrix image with sound on a standard high-bias audio cassette. Pixelvision offers real video camcorder action at a fraction of the cost of an adult camcorder!

*The possibilities  
are unlimited.*



# PXL 2000™

A Revolution in Video Technology



**Mini T.V.  
included**

### 3305 Deluxe Camcorder System

Includes: PXL 2000 Camcorder, 4.5" black & white TV with A.C. adaptor, TV hook-up accessories, One high bias cassette tape, Mini bipod stand, 6 AA Duracell® batteries, Instruction booklet



**3320**  
Carrying Case



**3321**  
Action Strap



**3325**  
Tape Twin Pack

©1987 Fisher-Price  
Division of The Quaker  
Oats Company  
East Aurora, NY 14052  
Printed in U.S.A.  
Product specifications  
subject to change

# Fisher-Price Electronics

**FOR BEST RESULTS WHEN FILMING;  
FOLLOW THESE GUIDELINES.**

1. Have light source behind you.
2. Turn filter to LO if indoors.
3. Avoid low-light situations;  
picture quality will be greatly reduced.
4. Turn filter to HI if very bright.
5. Get as close as possible to your subject.
6. Avoid aiming camcorder at bright light.
7. Flashing red light indicates low batteries.
8. Constant red light indicates improper lighting level.
9. Move camcorder slowly.

**1-800-262-PXL2**