



Fisher-Price®



Sparkling Symphony™ Rock & Play Piano™



Model Number 73547

Please keep this instruction sheet for future reference,
as it contains important information.

Requires three "AA" batteries (included)

Adult assembly is required.

Tools required for assembly and battery replacement:

Phillips screwdriver (not included)

Discover what's possible™... www.fisher-price.com

Parts

WARNING

This product contains small parts in its unassembled state.
Adult assembly is required.




Handles


Keyboard




Seat Top

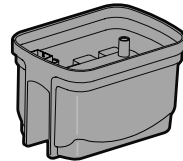


Seat Bottom

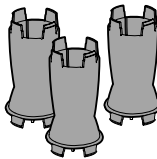


3 Legs

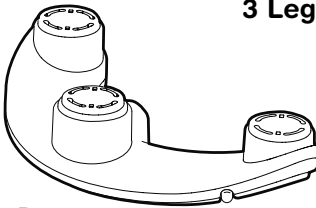

Base

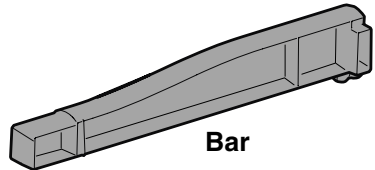

Bar

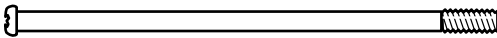 



#6 x 2 1/2" Shoulder Screw
Shown Actual Size



#6 x 3/8" Screw
Shown Actual Size

Battery Replacement

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

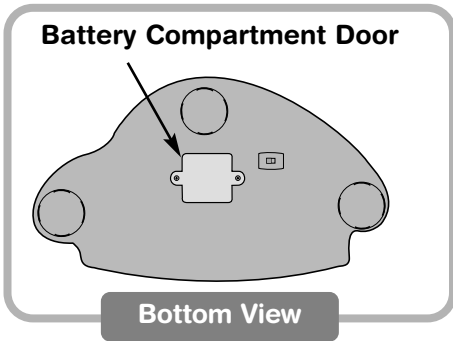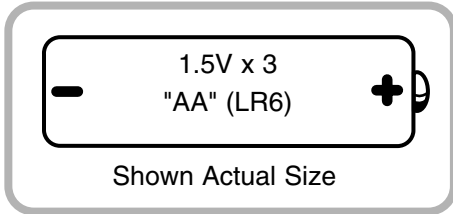

- Locate the battery compartment on the bottom of the toy.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.


- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights from this toy become faint or stop, it's time for an adult to change the batteries!

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.


Assembly

1

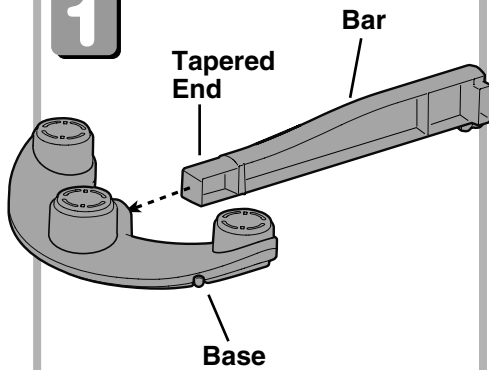

- Place the base on a flat surface as shown.
- Insert the tapered end of the bar into the large opening in the base as shown.


2

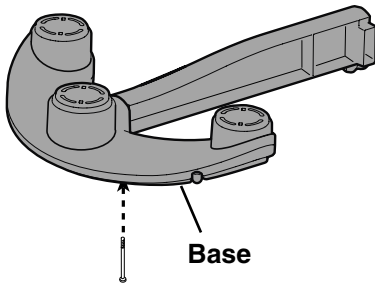

#6 x 2 1/2" Shoulder Screw
Shown Actual Size


- Turn the assembly over and insert the #6 x 2 1/2" shoulder screw through the hole in the base and into the bar. Tighten the screw with a Phillips screwdriver. Do not over-tighten.

3

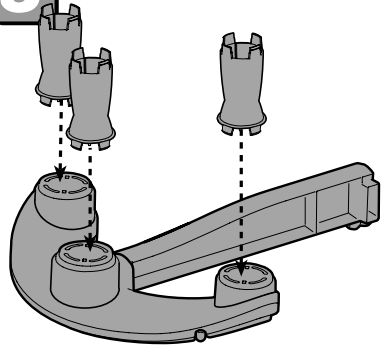

- Insert and "snap" the tabs on each of the three legs into the slots in the base as shown.


4

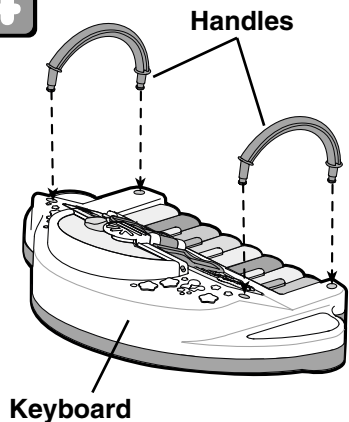

- Place the keyboard on a hard flat surface.
- Insert and "snap" the handles into the keyboard as shown.


Assembly

5

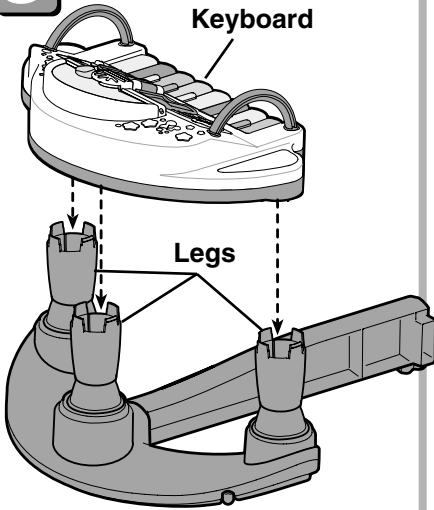

- Position the keyboard over the legs as shown.
- Press and "**snap**" the slots in the bottom of the keyboard onto the tabs on the legs.

6

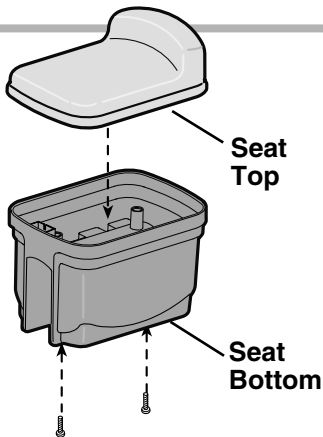

- Fit the seat top onto the seat bottom as shown.

- Turn the seat assembly over and insert the two #6 x $\frac{3}{8}$ " screws through the holes in the seat bottom. Tighten the screws with a Phillips screwdriver. Do not over-tighten.



#6 x $\frac{3}{8}$ " Screw
Shown Actual Size

7



- Place the groove in seat bottom onto the bar as shown.

Note: *The seat will fit in two positions. Adjust the seat forward or back, to your child's comfort.*

One time assembly is now complete.

Grows with baby's musical ability!

**Younger babies
create music by
rocking the piano!**



**Toddlers can
play it like a
real piano!**



Song Book


Turn the page to
select another song.

Instrument Selector

Choose from piano,
violin, harp, tuba or flute.

**Volume
Switch**

**Mode
Switch**

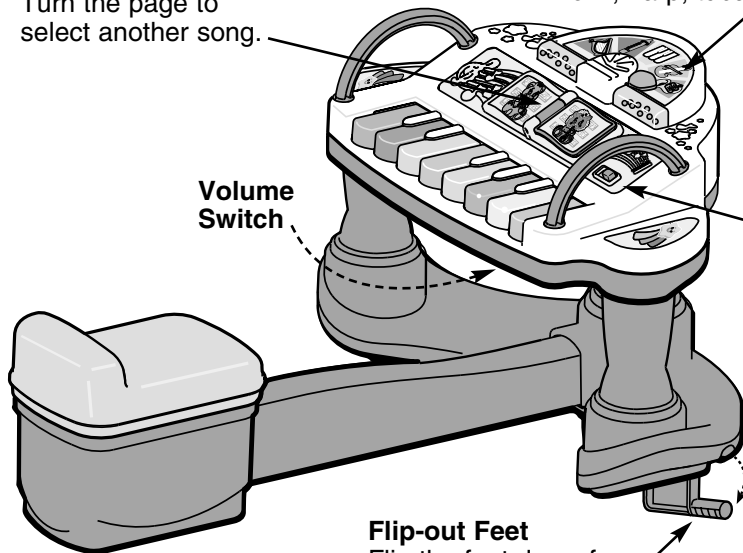




Flip-out Feet

Flip the feet down for
stationary piano play.


Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2002 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

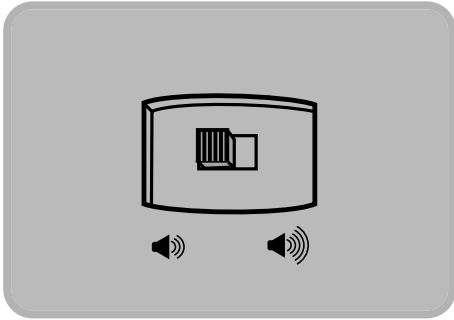Volume Switch



- Locate the volume switch on underside of the keyboard.
- Adjust volume to low  or high  for your child's comfort.

Mode Switch

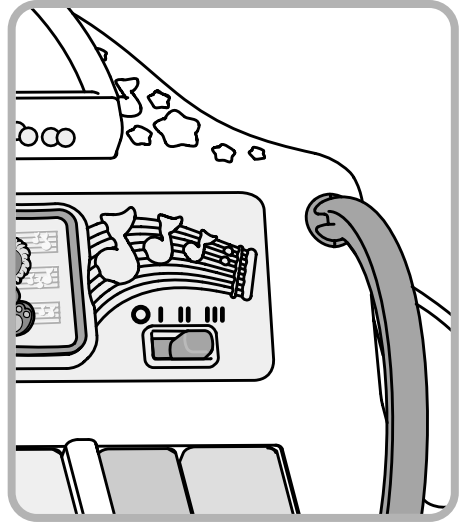

The toy has three different ways to play.

I Rock & Play – When baby rocks the toy, a song will play with dancing lights. You can also hear a song by tapping a key.

II Build-a-Song – Press the keys or rock to hear part of a song. Press or rock again to hear more.

III Freeplay – Press the keys to play your own songs, just like a real piano.



Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- **CAUTION:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. **Great Britain:** telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.