 


# Grow With Me™ RC Rally Repair Kit

## PARTS



Bottom Cover - 2



End Link - 2




Side Cover - 2




#4 x  $\frac{5}{8}$ " Screw - 6  
Shown Actual Size

1

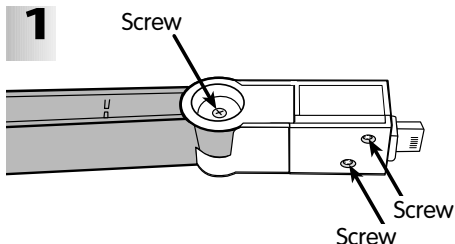

- Turn the track over so you are looking at the bottom of one end of the track.
- Remove three screws from the end of the track, as shown.

2

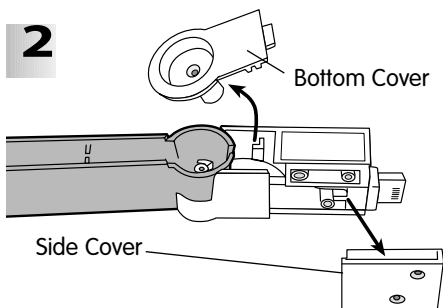


- Lift and remove the bottom cover.

**Hint:** This will require a lot of force.


- Remove the side cover.

3

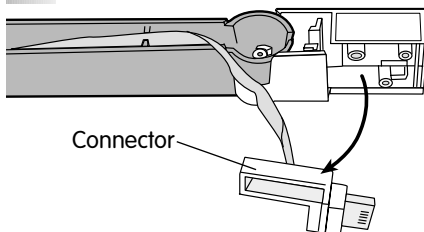


- Remove the connector from the two pegs as shown.

4

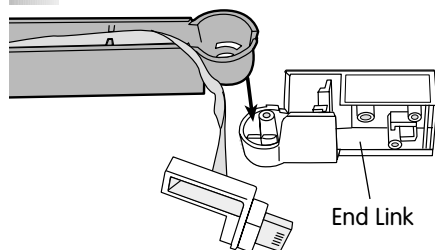


- Remove the end link from the track as shown.
- Throw away the old bottom cover, side cover and end link.

5

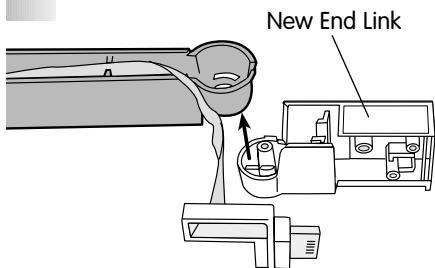


- Fit the new end link to the track, as shown.

**6**

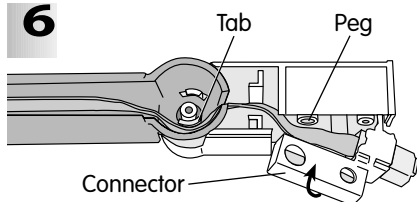

- Route the wire around the tab in the end of the track and under the peg in the new end link as shown.
- Fit the connector onto the two pegs on the new end link.

**7**

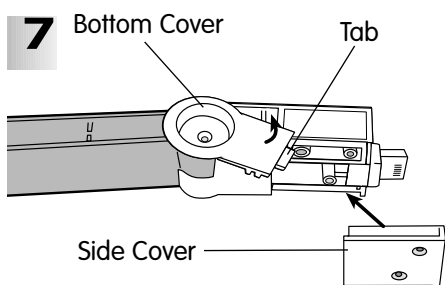


- Place the new bottom cover onto the end of the track. Rotate the bottom cover so that the tab fits under the edge of the end link.
- Hint:** You may need to bend the bottom cover slightly to fit it to the end link. This may require some force
- Fit the new side cover onto the end link.

**8**



#4 x  $\frac{5}{8}$ " Screw  
Shown Actual Size

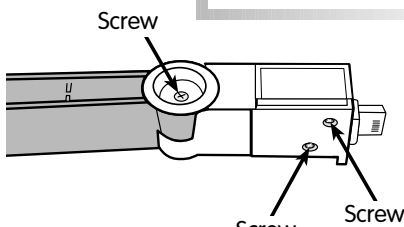

- Insert three 4 x  $\frac{5}{8}$ " screws into the bottom cover and side cover, as shown. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

**Repeat this procedure to repair the other end of the track.**

## CONSUMER INFORMATION

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States:

**Canada:** call **1-800-567-7724**, or write to: Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**Great Britain:** telephone 01628 500302.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.



Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2002 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China.

77306pr-0922