

Fisher-Price®

Instructions

Product Number: 77820

2-in-1

Bach 'n Rock Guitar™



**Please keep this instruction sheet for future reference,
as it contains important information.**


Requires three "AA" batteries (included).

Adult assembly is required for battery replacement.


Tool required for battery replacement: Phillips screwdriver (not included).

www.fisher-price.com

Battery Replacement

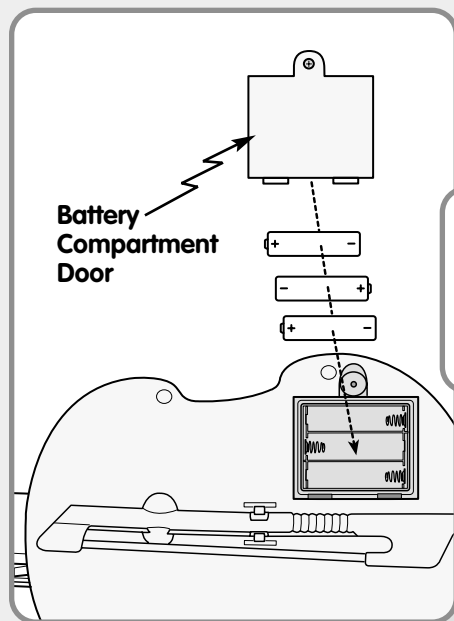

For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

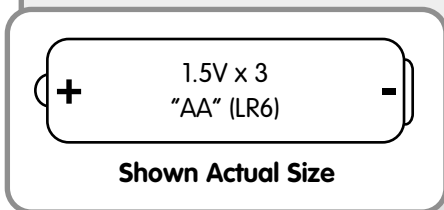

- Locate the battery compartment door on the bottom of the toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer life.

- Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries!

Note: Static electricity that comes in contact with this toy may temporarily stop its electronic function. A static electric charge can be created simply by walking across a carpet or rug and then touching this toy. To reset the toy, either: 1. Rotate the power/volume dial to the off position and then back to the on position again; or 2. Remove the batteries from the toy and reinstall the same batteries.



Battery Tips



- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can damage this toy. Dispose of batteries safely.
- Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.







2-in-1 Fun

The 2-in-1 Bach 'n Rock Guitar™ is two instruments in one: a Classical Violin and Rock Guitar! It converts easily and plays three classical tunes and three rock favorites.

Classical Violin

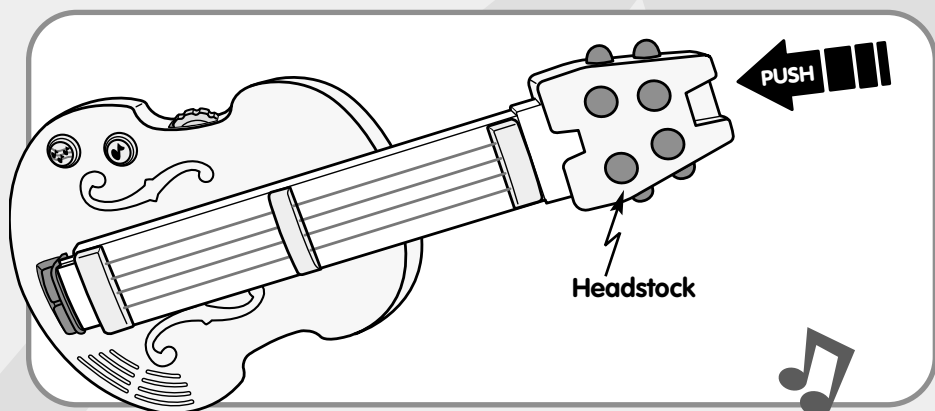


- To convert from rock guitar to classical violin, grasp the headstock and push it toward the body of the instrument. The neck will shorten and “click” into place. If the toy is already turned on, you will hear a short violin “riff”.

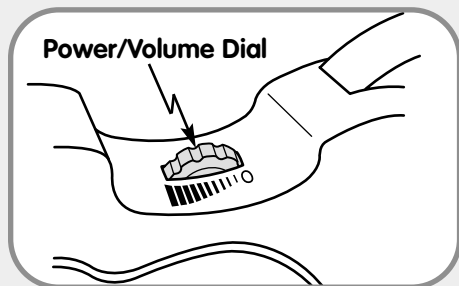

Let's Play

- Rotate the power/volume dial to turn the toy on. You will hear a short violin “riff”.
- Adjust the volume to a comfortable listening level.

2-in-1 Fun

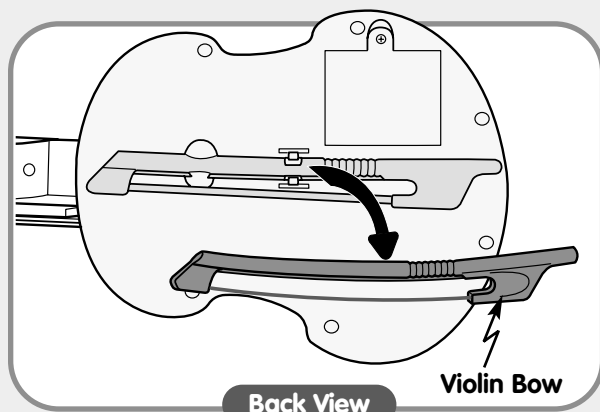


Bow Storage

- Lift and remove the violin bow from the storage area on the back of the instrument.

Note-by-Note

- The violin is now ready to play in the note by note mode. Slide the bow across the strings or tap it on the strings. The violin plays single notes of a classical song each time the strings are tapped. Your child sets the pace.

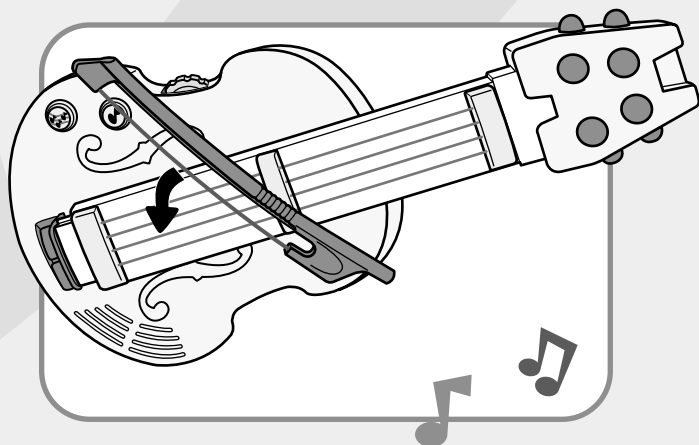

Hint: If your child needs to hear the entire song to learn the phrasing or tempo, try pressing the Demo Button (see next page).



2-in-1 Fun



Demo Button

- Press the Demo Button  and the violin plays the entire classical song selected and then returns to note by note mode. This allows young musicians to hear the entire song played with correct phrasing and at the proper tempo so they may play the song better in the note by note mode.
- Pressing the Demo Button is also fun for younger musicians who can pretend they are playing with or without touching the bow to the strings.

Hint: Pressing the Demo Button while a song is playing stops the song.

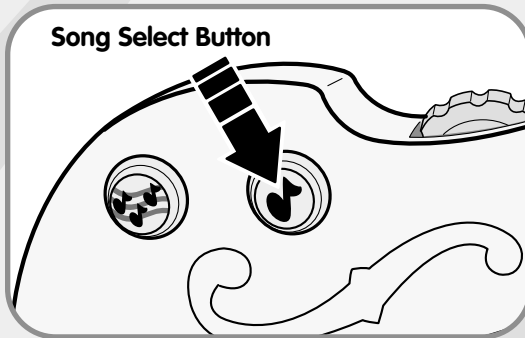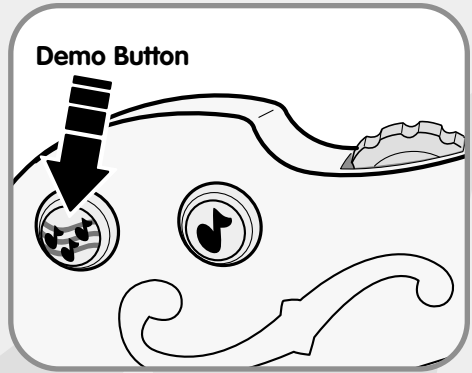

Song Select Button

- Press the Song Select Button  to change the song and you will hear a short violin "riff" of the song selected.
- You may now play this song in the note by note mode.
- Each time you press the Song Select Button the toy will change to the next of three songs until it returns back again to the first.

After the Concert


- When you're finished, rotate the Power/Volume dial to turn the toy off.
- Insert and "snap" the violin bow into the storage area on the back of the instrument.

Hint: If your child is not actively playing with this toy, it turns off automatically after a few seconds (sleep mode).




2-in-1 Fun

Rock Guitar

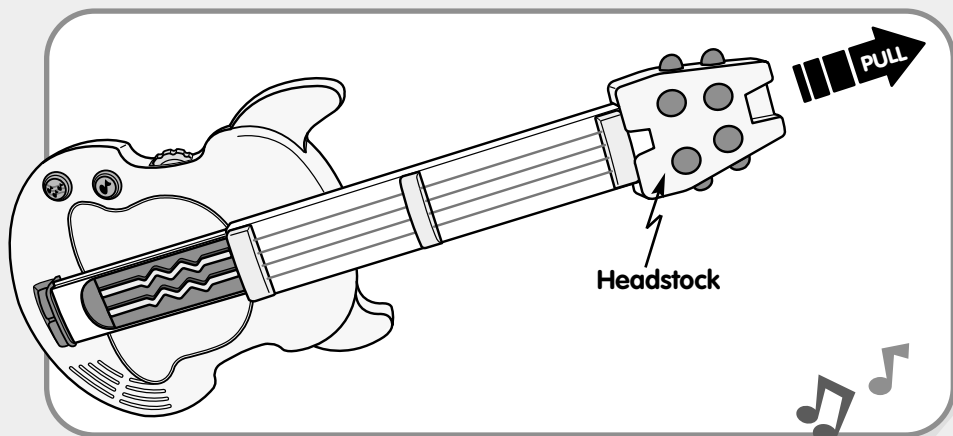

- To convert from classical violin to rock guitar, grasp the headstock and pull it away from the body of the violin. The neck will extend and “click” into place. If the toy is already turned on, you will hear a short guitar “riff”.

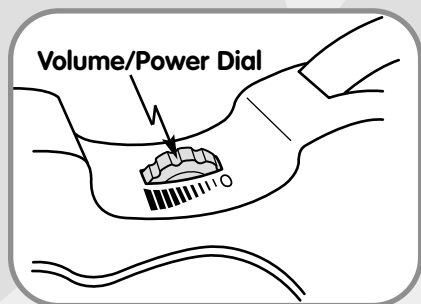


Let's Jam!

- Rotate the power/volume dial to turn the toy on. You will hear a short guitar “riff”.
- Adjust the volume to a comfortable listening level.

2-in-1 Fun




Ready to Play

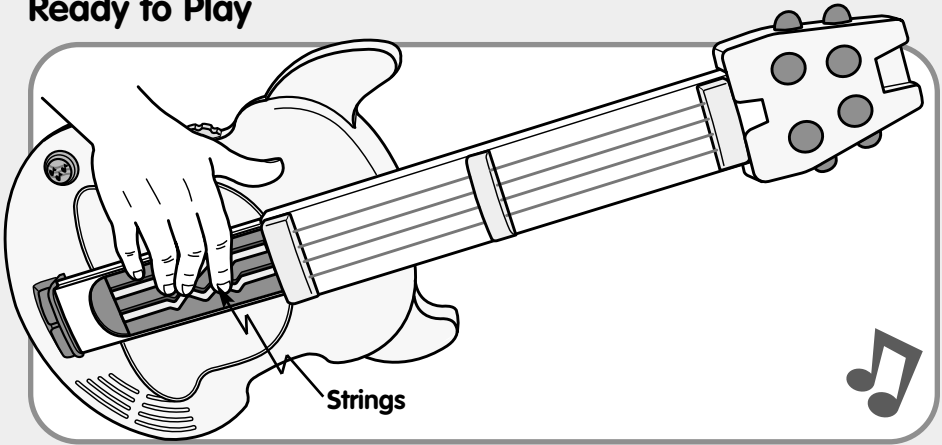

- The guitar is now ready to play in band mode. Wiggle either or both of the “strings” and the guitar plays the song selected along with a backup band. When you stop wiggling the strings, the band continues to play backup until the song is over.

Song Select Button


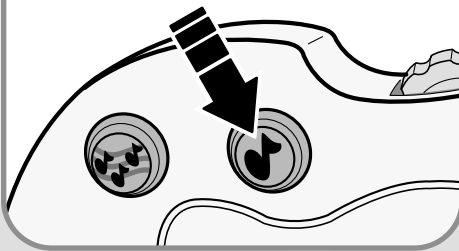


Different Modes

- The guitar plays three different songs in two different ways (six selections in all).
- The first three selections are the songs in Band mode. The next three selections are the same songs in Solo Mode.

- Press the Song Select Button  to change the song and you will hear a short “riff” of the song selected.
- Each time you press the Song Select Button the toy will change to the next selection until it returns back again to the first.
- **Band Mode** – (first three song selections) Wiggle the strings and the guitar plays the melody of the song selected along with a backup band. When you stop wiggling the strings, the band continues to play backup until the song is over.
- **Solo Mode** – (last three song selections) Wiggle the strings and the guitar plays the song selected as a guitar solo, note by note.

Hint: If your child needs to hear the entire song to learn the phrasing or tempo, try pressing the Demo Button (see next page).

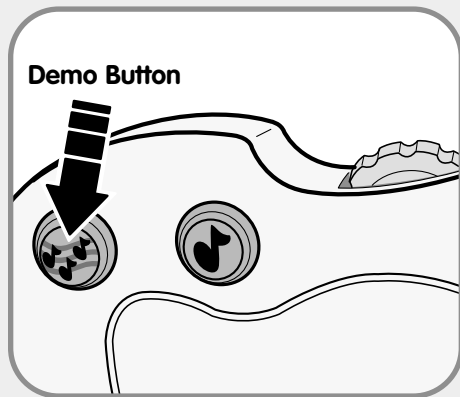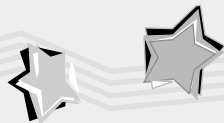

Demo Button

- Press the Demo Button  and the guitar plays the entire song selected.
- If the song selected is a Band song and you wiggle the strings while it's playing, the guitar will jam along with a rocking solo.
- When the demo is over the guitar is now ready to play in Band mode.


- If the song selected is a Solo song, you will hear the entire song played solo with correct phrasing and at the proper tempo. This gives your child an idea of how to play the song better. Younger musicians can pretend they are playing with or without touching the strings.
- When the demo is over, the guitar is now ready to play in Solo mode.

Hint: Pressing the Demo Button while a song is playing will stop the song.

After the Concert



- When you're finished, rotate the Power/Volume dial to turn the toy off.

Hint: If your child is not actively playing with this toy, it turns off automatically after a few seconds (sleep mode).

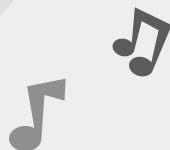




Reattach the Neck

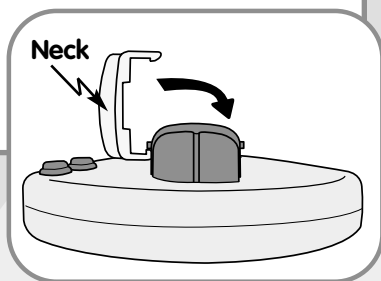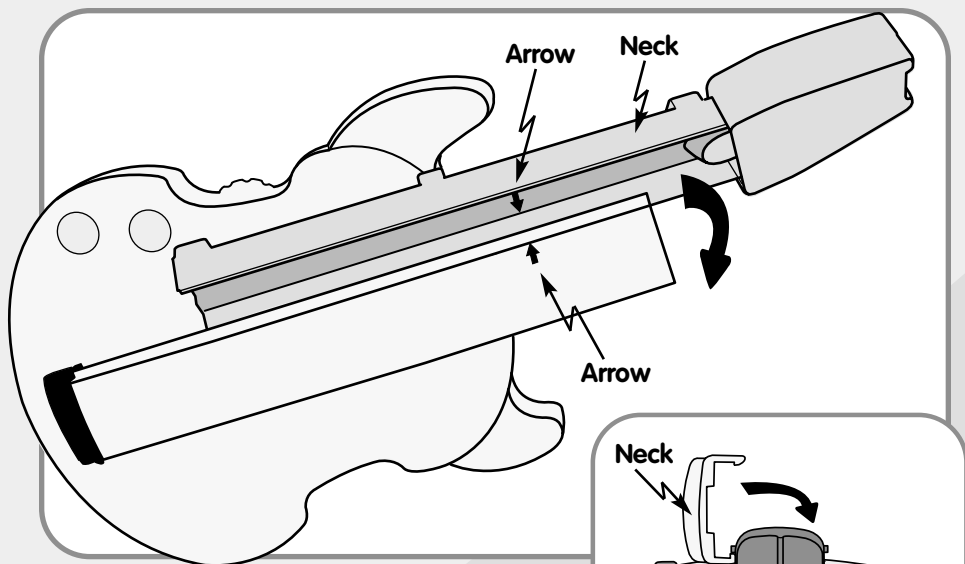

Hint: The neck of the Bach 'n Rock Guitar™ is designed to “break away” from the instrument. If the neck gets bumped or knocked off, it can be easily reattached by following these steps.

- Position the neck so that the inside faces the instrument body.
- Locate the arrow on the inside of the neck and the arrow on the instrument. Align the arrows on both parts.
- Rotate the neck onto the instrument body and “snap” it into place. This will require a lot of force.

 Care

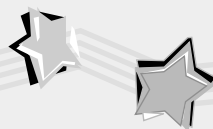

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.
- Do not drop this toy on a hard surface.



FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.



Consumer Information



Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM- 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price, Inc.
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For other countries, outside the United States:

Canada: call 1-800-567-7724, or write to:

Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500303.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,



Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2001 Mattel, Inc. All Right Reserved. ® and ™ designate
U.S. trademarks of Mattel, Inc.