

Fisher-Price®

ODOR-FREE DIAPER SYSTEM

Model Number: 79578

Please save these instructions for future reference.

Adult assembly is required.

Requires tall (13 gallon) kitchen trash bags.



www.fisher-price.com



WARNING

- Always keep lid closed and secured to the pail.
- Use only non-toxic deodorizers.
- To avoid danger of suffocation, keep plastic bags away from children.

CONSUMER INFORMATION

Occasionally a consumer may experience a problem with one of our products.

If this should happen, please call us toll-free, rather than return this product to the store.


Usually, we can solve the problem over the telephone or send you replacement parts.

Please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, between 8 AM - 6 PM EST, Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052


ASSEMBLY

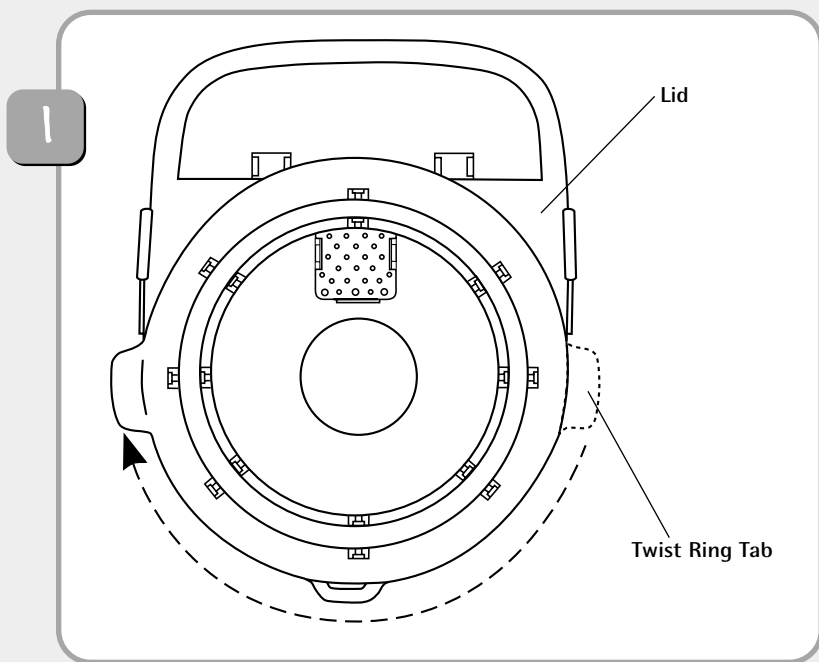

- Remove the lid from inside the pail.
- Turn the lid upside down and place it on a flat surface.
- Slide the twist ring tab all the way to the left (clockwise).


ASSEMBLY

2

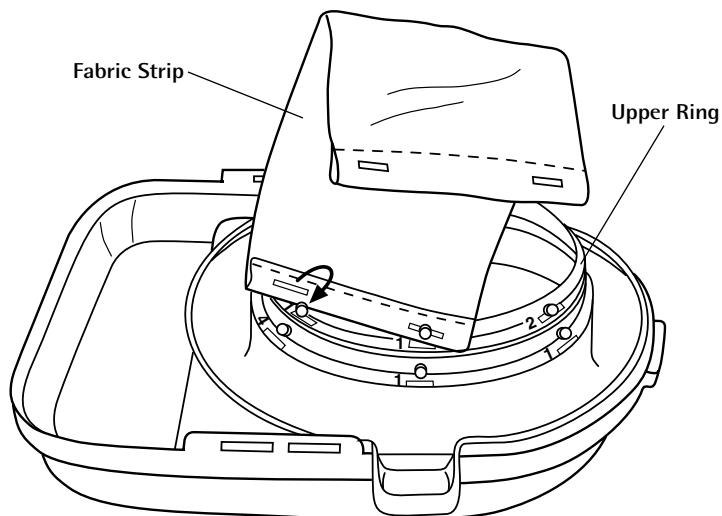

- Attach the two colored button holes on one end of a fabric strip to the two pegs numbered "1" on the upper ring.

3

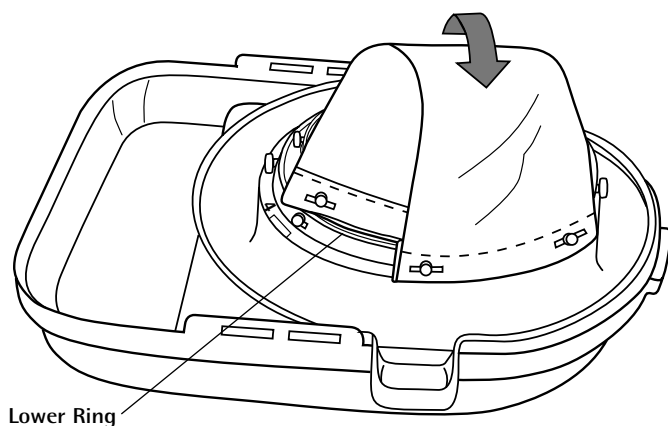


- Fold the fabric strip over and attach the two remaining button holes to the two pegs numbered "1" on the lower ring.

Note: Make sure the fabric strip is not twisted. If the fabric strip is twisted, remove it from the lid, smooth out the fabric strip and then reattach it.


ASSEMBLY

4

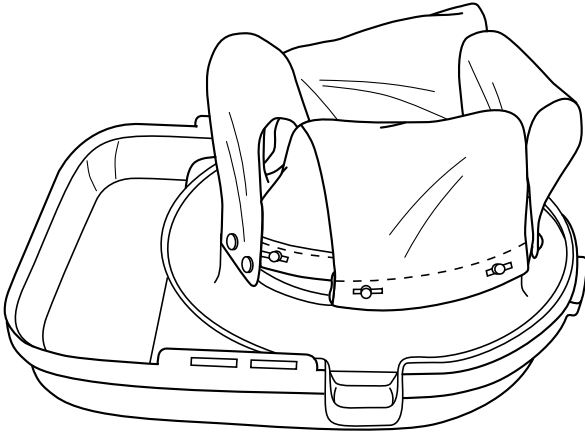

- Repeat this procedure to attach the three remaining fabric strips to the pegs numbered 2, 3 and 4 on the upper and lower rings.

5

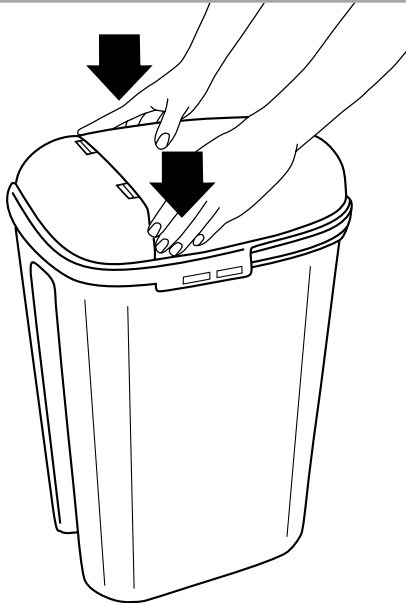

- Place the lid on the pail.
- Push down on both sides of the lid. Make sure you hear a **"snap"** on both sides.

Assembly is now complete.


INSTALLING A TRASH BAG



WARNING

To avoid danger of suffocation,
keep plastic bags away from children.

1

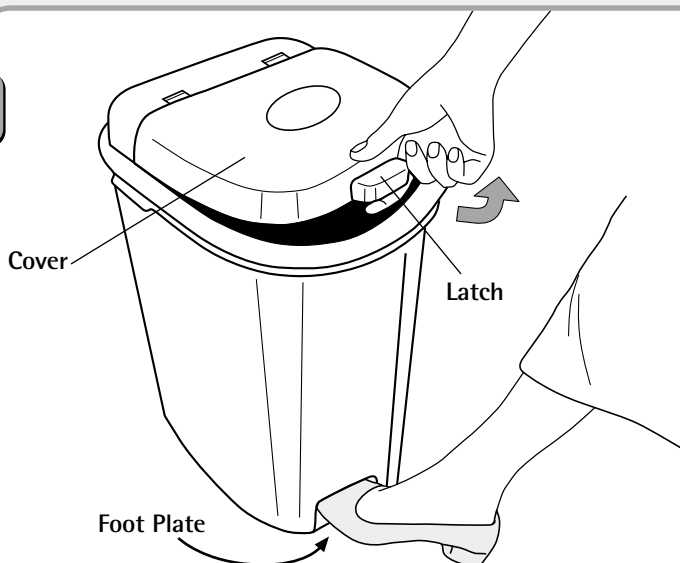

- Pull the cover latch toward you and lift the cover.

Hint: Place your foot on the foot plate to keep the pail flat on the floor.


INSTALLING A TRASH BAG

2



- Insert a tall kitchen trash bag into the pail.

3

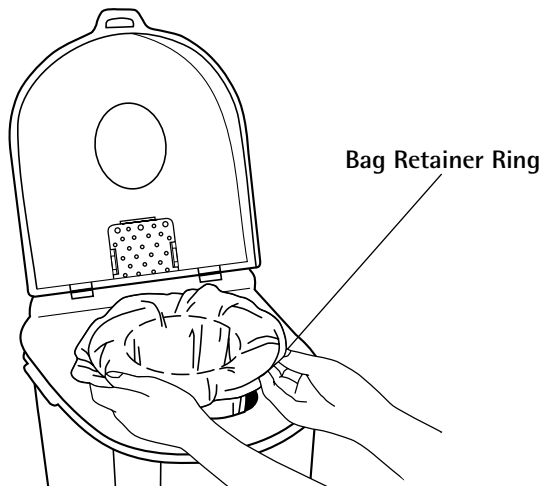


- Lift the bag retainer ring slightly.
- Tuck the top of the trash bag under the bag retainer ring. For best performance, make sure the bottom of the trash bag rests on the bottom of the pail.

Hint: For easy trash bag installation, you may prefer to use drawstring trash bags. Tuck the top of the drawstring trash bag under the bag retainer ring and pull the drawstrings to gather the top of the bag around the ring.

INSTALLING A TRASH BAG

4

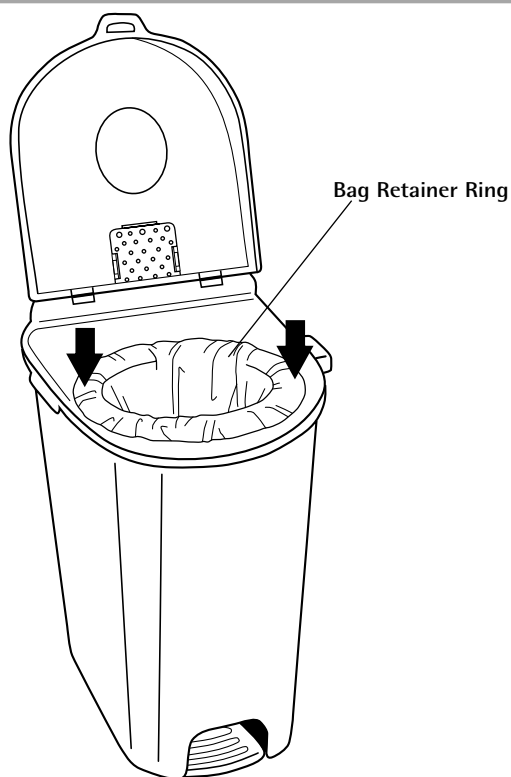


- Push the bag retainer ring down completely.

USING A DEODORIZER




WARNING

Use only non-toxic deodorizers.

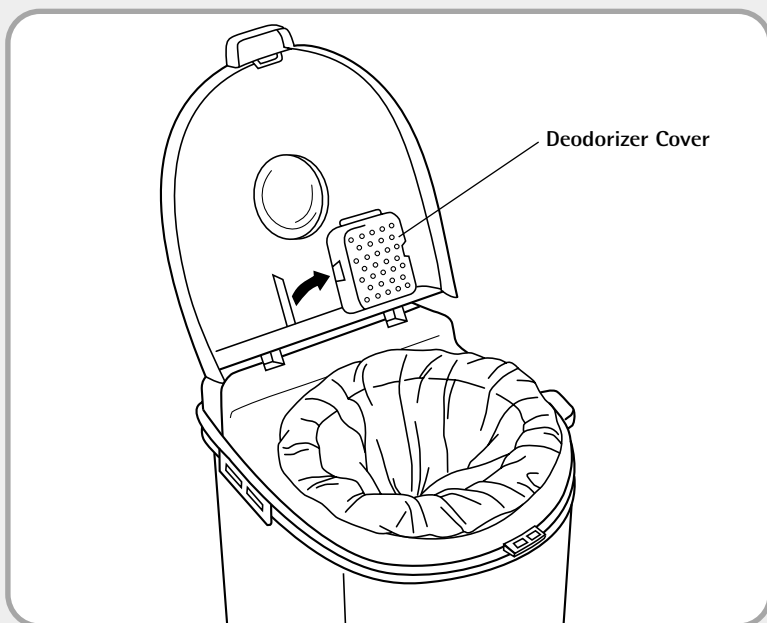

- The Odor-Free Diaper System can be used effectively with or without a deodorizer. If desired, place a non-toxic deodorizer in the deodorizer compartment.
- Remove the deodorizer cover.
- Place a non-toxic deodorizer into the compartment and reattach the deodorizer cover.
- Lower the cover and push down on it to be sure it is securely closed.

DIAPER DISPOSAL

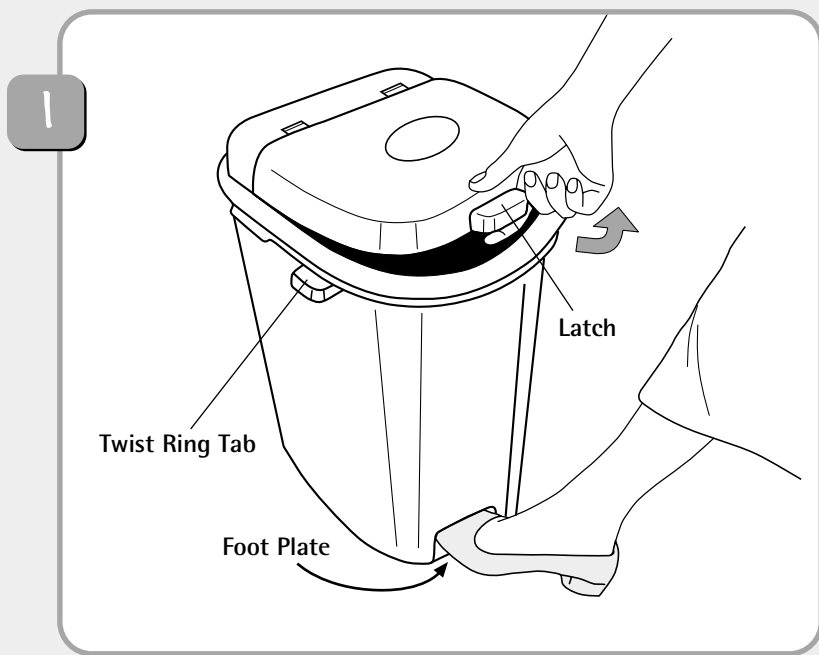

- Make sure the twist ring tab is completely to the left to close the trash bag.
- Pull the cover latch toward you and lift the cover.

Hint: Place your foot on the foot plate to keep the pail flat on the floor.

- Place a dirty diaper into the pail. For best performance, wrap the dirty diaper tightly so it drops easily into the pail.


DIAPER DISPOSAL



WARNING

Always keep lid closed and secured to the pail.


2

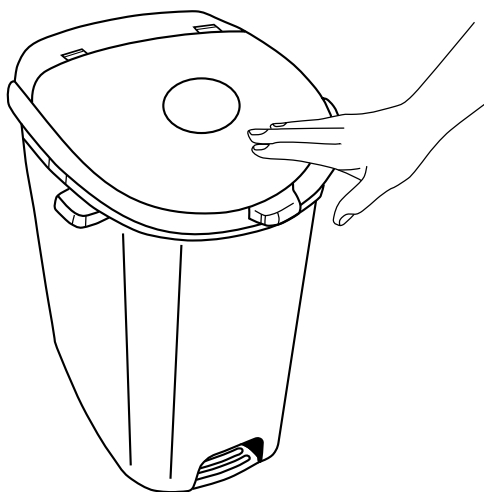

- Lower the cover and push down on it to be sure it is securely closed.

DIAPER DISPOSAL

3

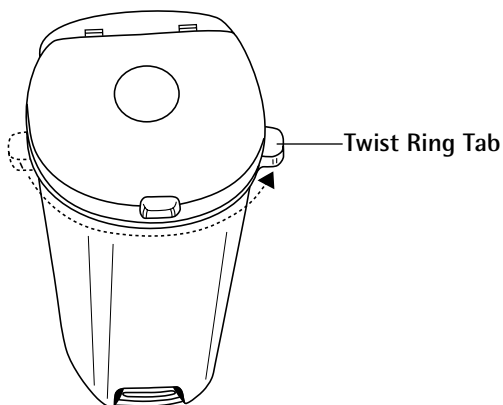


OPEN

- Slide the twist ring tab completely to the right to open the trash bag. The dirty diaper will drop into the pail.

Hint: Place your foot on the foot plate to keep the pail steady when sliding the twist ring tab.


4

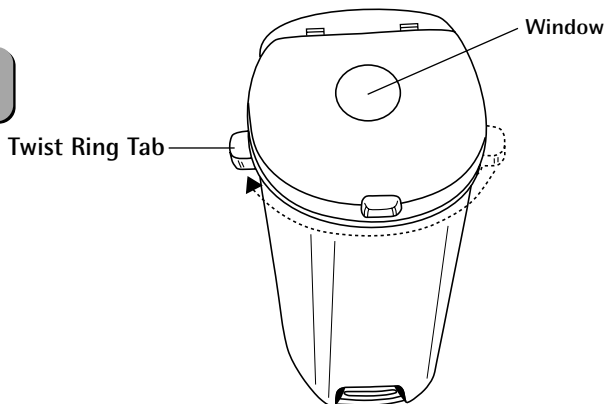

SEALED

- Slide the twist ring tab completely to the left to close the trash bag, trapping odors inside.
- Look into the window on the cover to make sure the dirty diaper has dropped into the pail. If the diaper has not dropped into the pail, slide the twist ring tab back and forth again.


CHANGING THE TRASH BAG

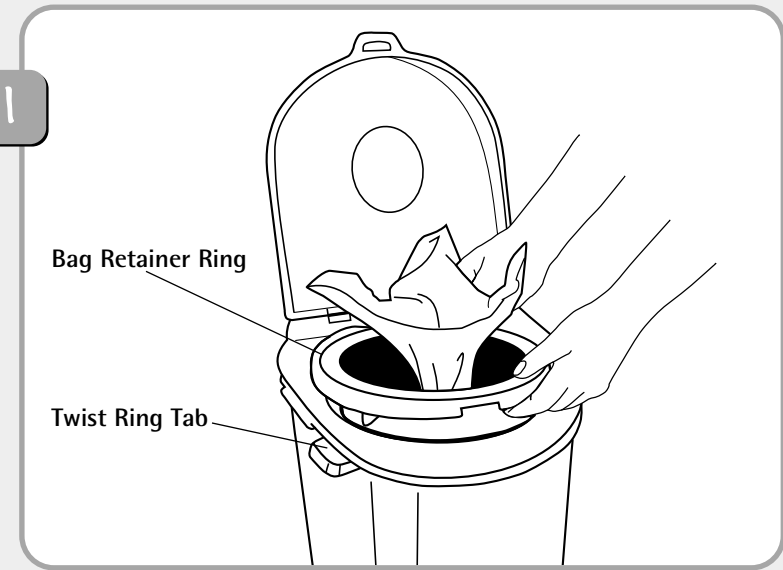

- Make sure the twist ring tab is in the sealed position (completely to the left).
 - Pull the cover latch toward you and lift the cover.
- Hint:** Place your foot on the foot plate to keep the pail flat on the floor.
- Lift the bag retainer ring to free the top of the trash bag.
 - Place the bag retainer ring back on the lid.

CHANGING THE TRASH BAG


2

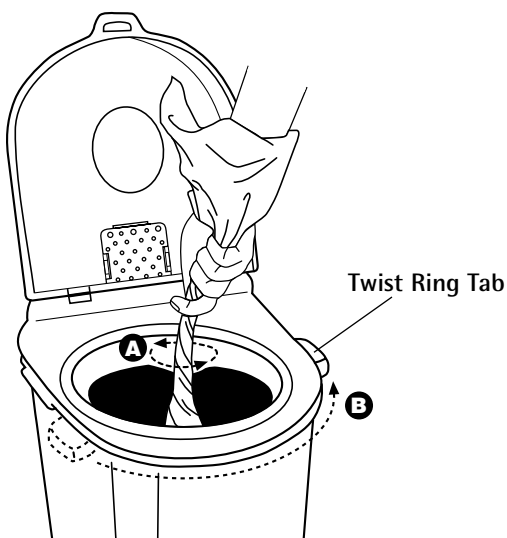

- Seal the trash bag for disposal **A**.
- Slide the twist ring tab completely to the right to free the top of the trash bag **B**.

CHANGING THE TRASH BAG

3

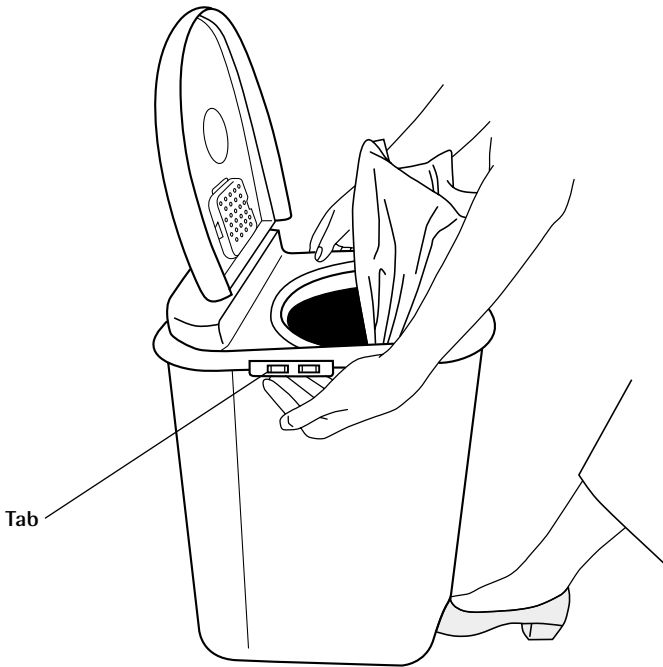

- Pull the tabs on each side of the lid out while lifting the lid off of the pail.

Hint: Place your foot on the foot plate to keep the pail flat on the floor.

- Dispose of the trash bag.
- To place a new trash bag into the pail, please follow "Installing a Trash Bag" steps 2-4.

CARE

- Wash the pail with a mild soap and water solution, and rinse thoroughly.
- The fabric strips can be removed and machine washed with soap and cold water. Do not use bleach. Tumble dry on low heat. Follow the assembly instructions, steps 1-4 to replace the fabric strips.

CANADA, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.
Questions? 1-800-567-7724.

GREAT BRITAIN, Mattel U.K., Ltd., Helpline: 01628 500303.

AUSTRALIA, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond,
Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2000 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.