

Fisher-Price®

Deluxe Take-Along™ Swing



Model Number: 79618

Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

Tool needed for battery installation: Phillips Screwdriver (not included).

Requires four "C" (LR14) **alkaline** batteries for operation (not included).

Weight Limit: 25 lbs (11.3 kg).

IMPORTANT! The maximum weight limit for this product is 25 lbs. If your child weighs less than 25 lbs., but is really active and appears to be able to climb out of the swing, immediately discontinue its use.

Discover what's possible™... www.fisher-price.com

Warnings



WARNING

- To prevent serious injury or death from falls and being strangled in the restraint system:
 - Always use the restraint system.
 - Never use with an active child who may be able to climb out of the seat.
- Never leave child unattended.
- Never use on any elevated surface.

Consumer Information


Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than return this product to the store. Usually, we can solve the problem over the telephone or send you replacement parts.

Please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.


Or, write to:
Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

Parts


Frame with Liner

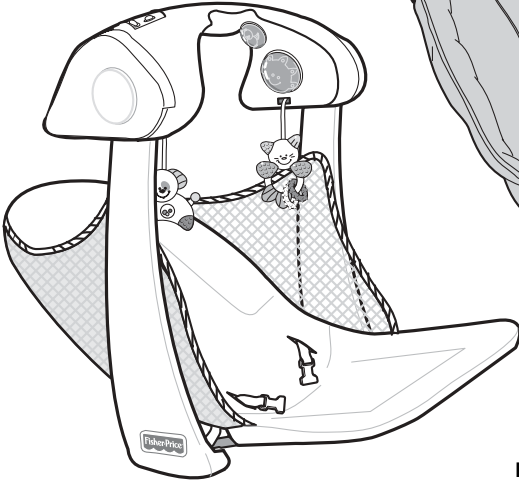


Pad with Restraint

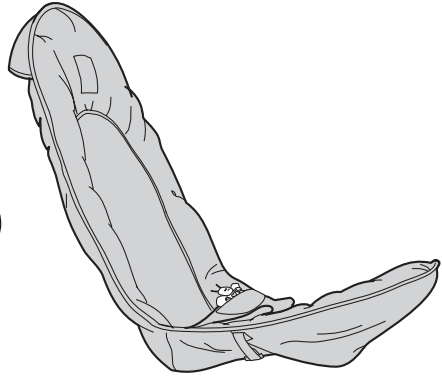

2 Frame Tubes

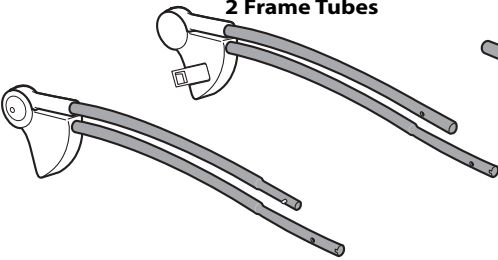


Front Tube

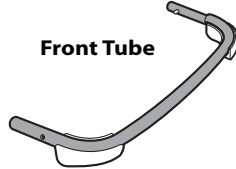


Assembly

IMPORTANT! Before assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

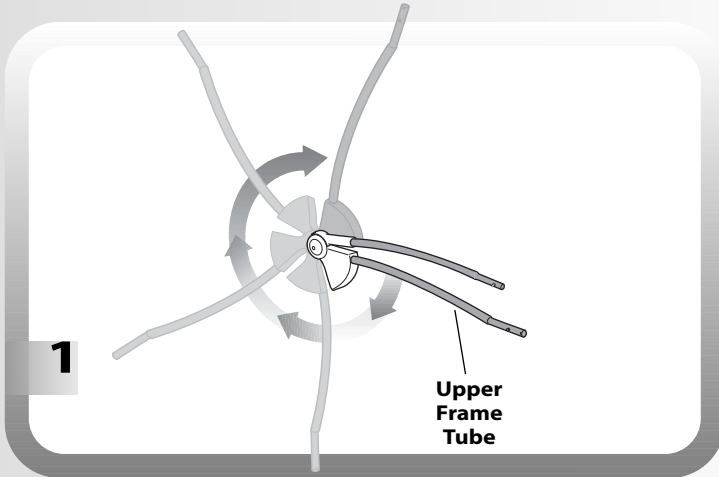


- Rotate the upper frame tube until it **"snaps"** into an upright position, as shown.

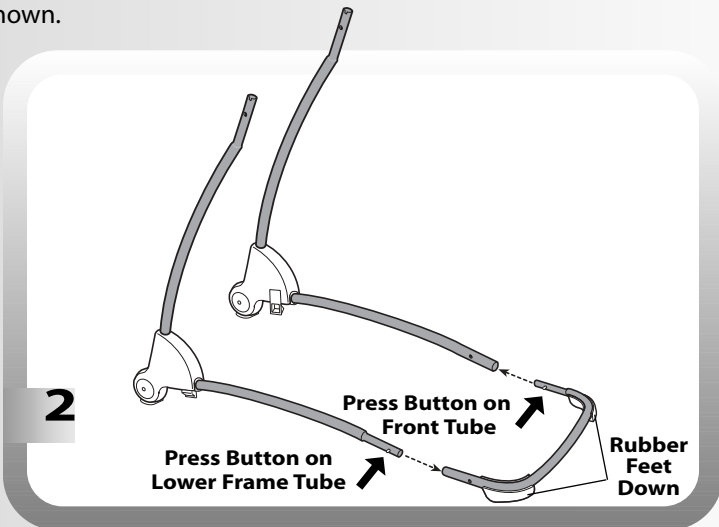


- Position the front tube so that the rubber feet are **flat** on the surface.
- While pressing the button on the lower frame tube, insert it into an end of the front tube. Continue to insert the lower frame tube into the front tube until you **hear a "click"**.
- While pressing the button on the front tube, insert it into the end of the lower frame tube. Continue to insert the front tube into the lower frame tube until you **hear a "click"**.

Assembly

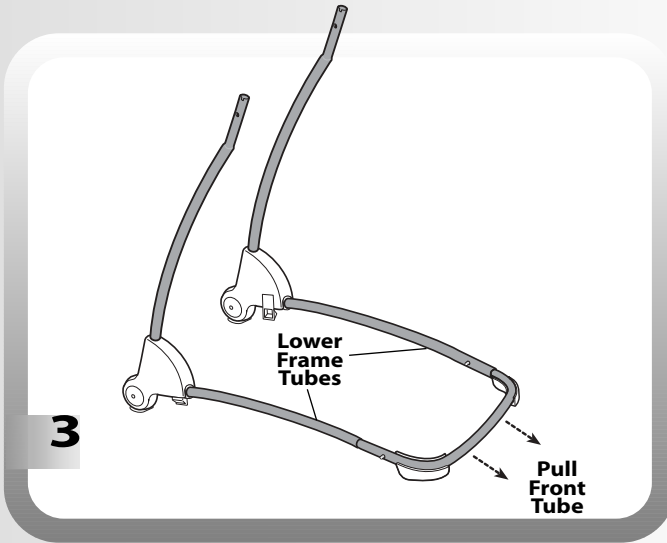


- Check to be sure the front tube is secured to the lower frame tubes.
- Pull the front tube. It should remain attached to the lower frame tubes. If you can remove it, you have not assembled it properly. Please re-read and repeat Assembly step 2.

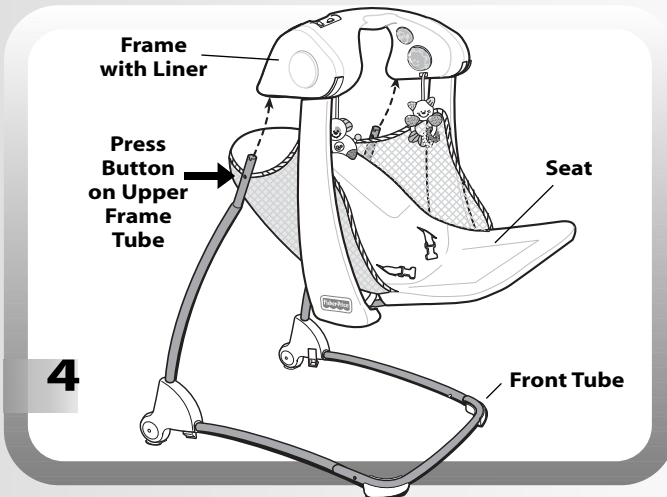


- Position the frame with liner so that the seat is over the front tube.
- While pressing the buttons on the upper frame tubes, insert them into the holes in the underside of the frame with liner.
- Continue to insert the upper frame tubes into the frame with liner until you hear a **"click" on both sides**.

Assembly

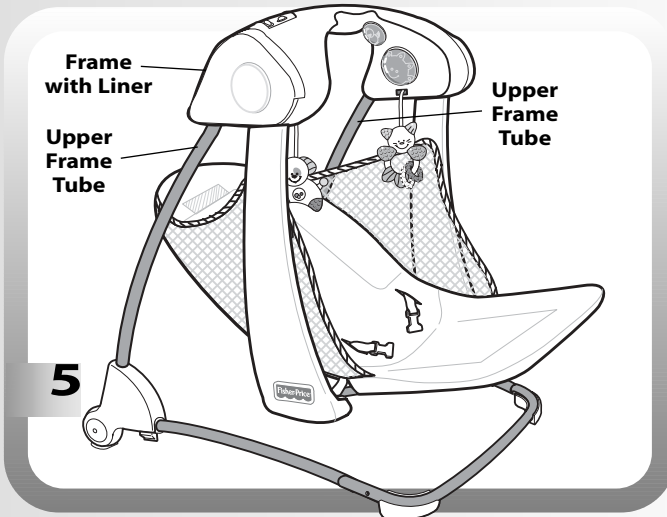


- Check to be sure the upper frame tubes are secure in the frame with liner. If you can remove the upper frame tubes from the frame with liner, you have not properly inserted the tubes into the frame. Remove the upper frame tubes from the frame with liner and reread and repeat Assembly step 4.

IMPORTANT! This product must always be used with the pad provided, which includes the restraint system. Attach the provided pad (with restraint system) to this product.

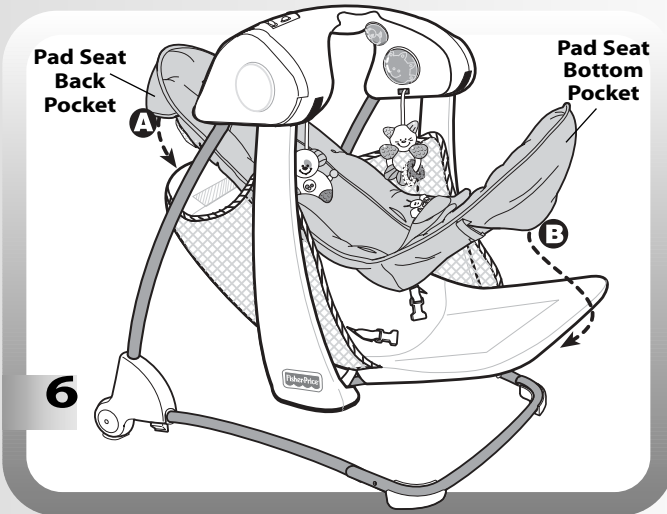

- Fit the pad seat back pocket over the seat back **A** and fasten.
- Fit the pad seat bottom pocket over the seat bottom and fasten **B**.


Assembly

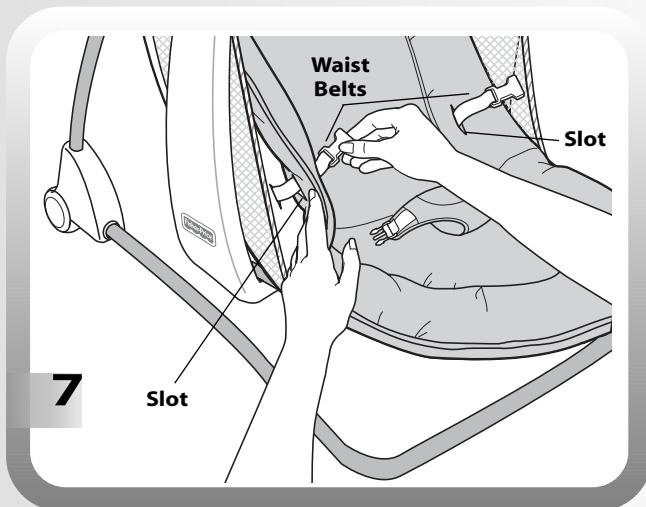


- Lift the edges of the pad and insert the waist belts on the liner through the slots in the pad.

Assembly is now complete.

Battery Installation

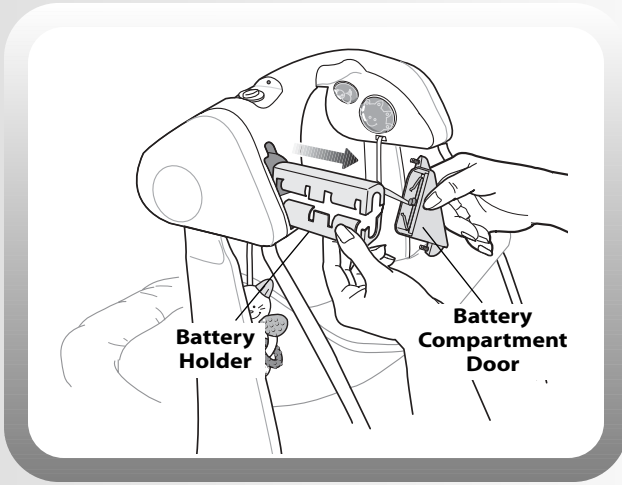

- Locate the battery compartment door on the frame.
- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Remove the battery compartment door and the battery holder from the battery compartment.

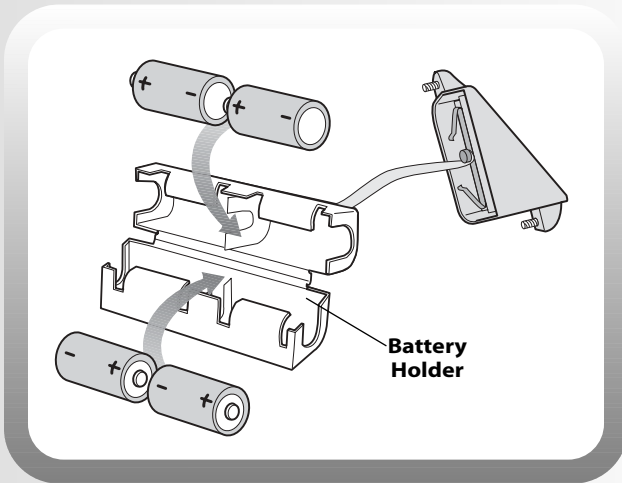


- Open the battery holder.
- Insert four "C" (LR14) **alkaline** batteries as indicated inside the battery holder.

Hint: We recommend using **alkaline** batteries for longer battery life.


- Close the battery holder.

Battery Installation

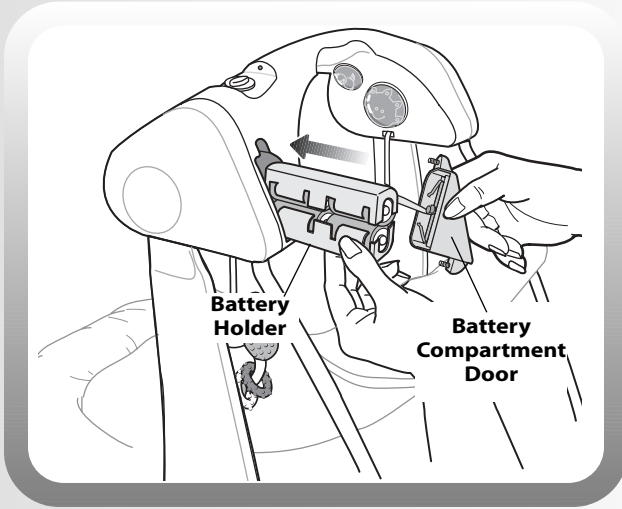

- Align the ridge on the battery holder with the groove in the battery compartment.
- Slide the battery holder back into the battery compartment.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

Battery Safety Information

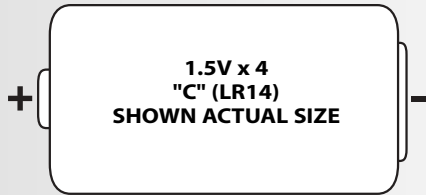

Batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Securing Your Child





WARNING

- To prevent serious injury or death from falls and being strangled in the restraint system:
 - Always use the restraint system.
 - Never use with an active child who may be able to climb out of the seat.
- Never leave child unattended.
- Never use on any elevated surface.

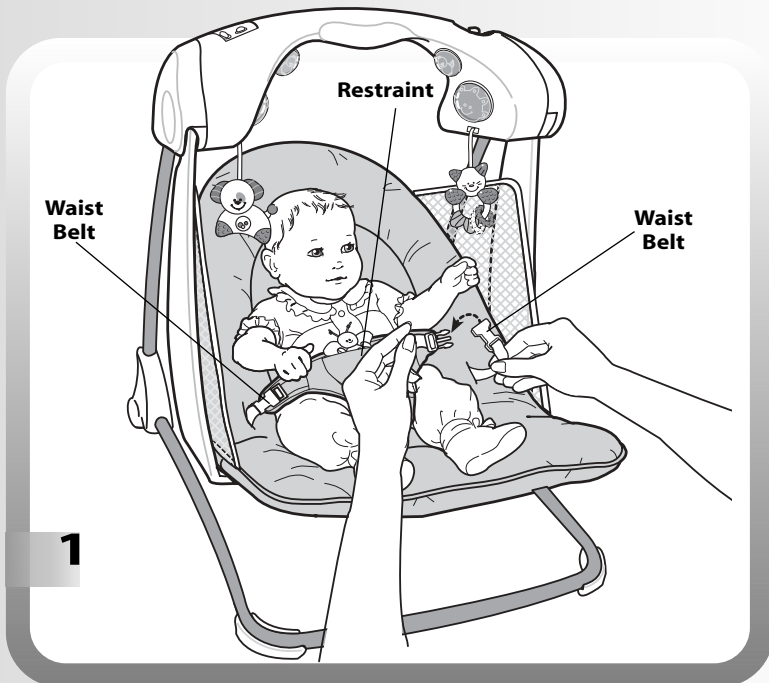

- Place your child in the seat. Position the restraint between your child's legs.
- Fasten both waist belts to each side of the restraint. **Make sure you hear a "click" on each side.**
- Check to be sure the restraint is securely attached by pulling it away from your child. The restraint should remain attached.

Securing Your Child

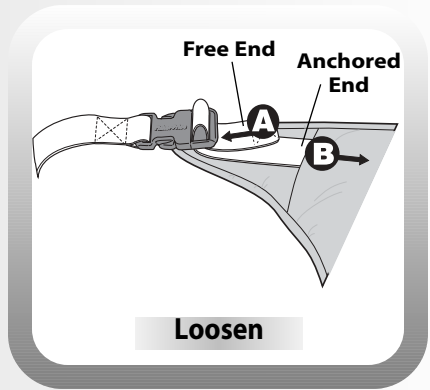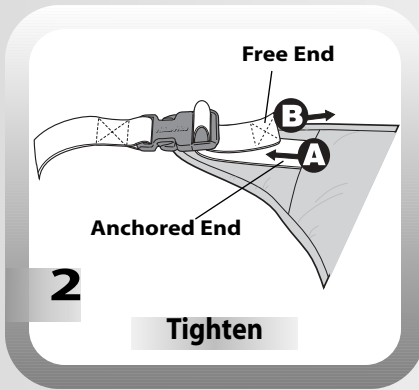

To tighten the restraint:

- Feed the anchored end of the restraint belt up through the buckle to form a loop **A**.
- Pull the free end of the restraint belt **B**.
- Repeat this procedure to tighten the other restraint belt.

To loosen the restraint:


- Feed the free end of the restraint strap up through the buckle to form a loop **A**.
- Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the restraint belt to shorten the free end of the restraint belt **B**.
- Repeat this procedure to loosen the other restraint belt.

Note: After adjusting the restraint to fit your child, make sure you pull on it to be sure it is securely fastened.

IMPORTANT! The maximum weight limit for this product is 25 lbs. If your child weighs less than 25 lbs., but is really active and appears to be able to climb out of the swing, immediately discontinue its use.

Starting the Swing

IMPORTANT! Before each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

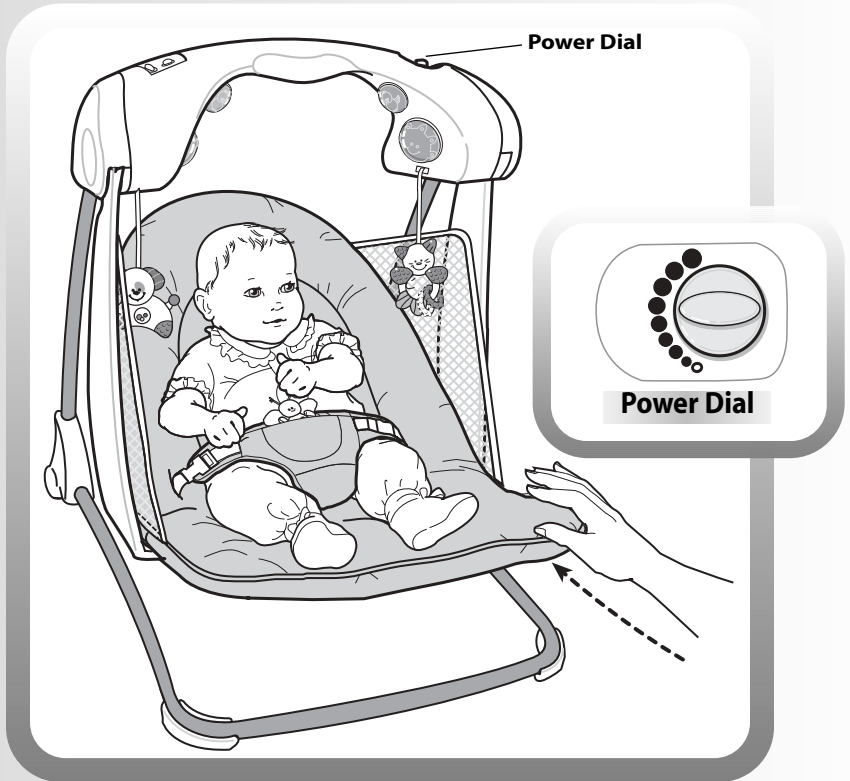


- Turn the power dial to any of eight settings.
- Give the seat a light push to start the swinging motion. Adjust the swing power dial to the desired swing motion setting.

Hint: As with most battery-powered swings, a heavier child will reduce the amount of swinging motion on all settings. In most cases, the low setting works best for a smaller child while the high setting works best for a larger child.

- If swinging stops while using a lower setting, try a higher setting. Give the seat a light push to start the swinging motion again.
- Be sure to turn this product off when not in use. Turn the power dial to the off setting ○.

Lights and Music!


Hint: Your baby can enjoy lights and music **with** or **without** swinging.

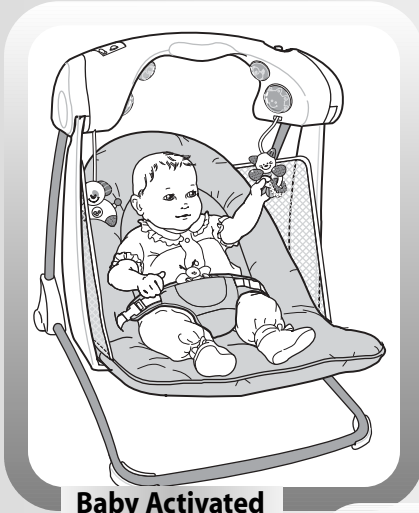

Baby Activated



 
Parent Activated



Lights and Music Switch



 Volume Dial



Lights and Music Switch

- Slide the lights and music switch to: **baby activated lights and one song** ☺; **sound and lights off** ●; or **parent activated lights and music** ↻.



When baby pulls either toy on the arch, one tune plays along with twinkling lights.



When switched to this setting, six tunes (approximately 10 minutes) play along with dancing lights.



Turns lights and music off.

- Turn the volume dial to a comfortable listening level.

Room-to-Room Portability




WARNING

- To prevent serious injury or death from falls and being strangled in the restraint system, always use the restraint system.
- Never use on any elevated surface.




- Make sure your child is properly secured in the swing seat.
- With baby facing forward and outward, lift the swing using the handle.
- Carefully carry the swing to another room. Be sure to set the swing down on a **non-elevated, flat surface.**

Take-Along

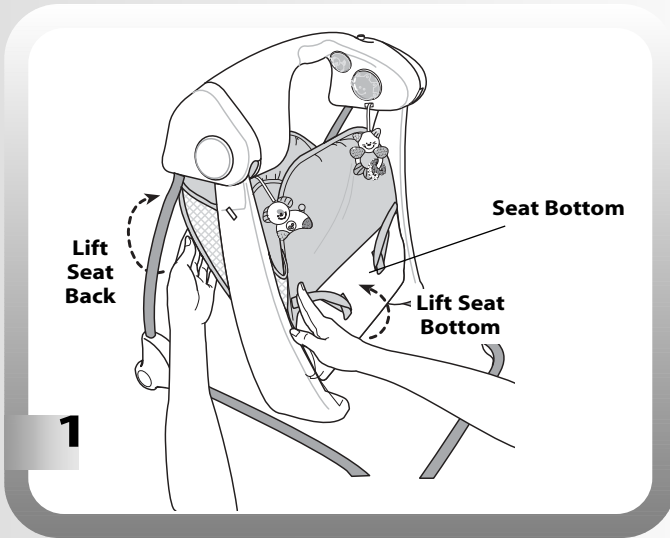


- Lift the seat back and seat bottom together.

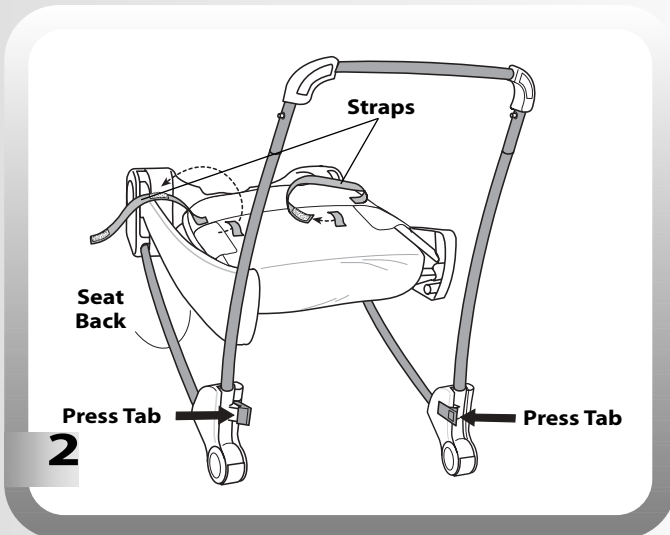


- Tip the swing backwards the seat back down.
- Unfasten the straps on the seat bottom.
- Pull the straps from the loops on the seat bottom.
- Press both tabs on the frame **at the same time** to release the frame base.

Take-Along

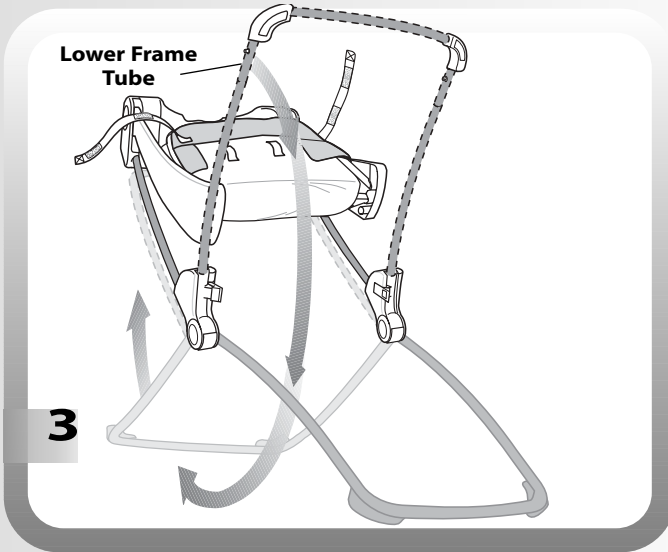

- Rotate the lower frame tube around to the top of frame, as shown.

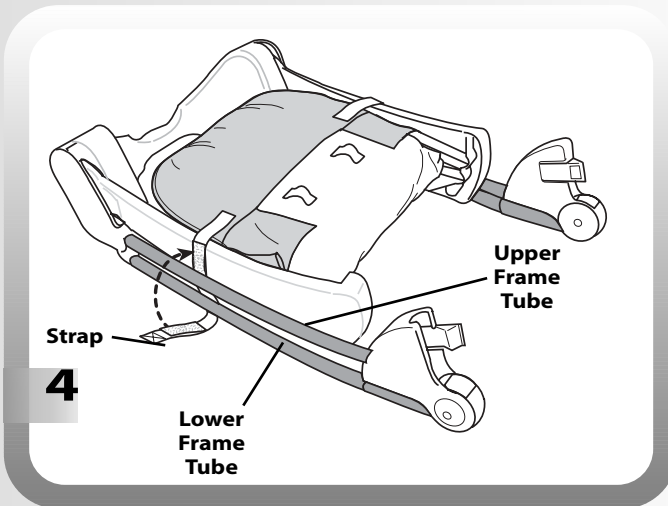

- Fit the straps on the seat bottom between the upper and lower frame tubes, as shown.
- Wrap the straps around the lower frame tubes and fasten the straps.


To set the swing back up for use:

- Unfasten the straps around the upper and lower frame tubes.
- Replace the straps through the loops on the seat bottom and fasten.
- Rotate the lower frame tube around until it snaps into place.
- Place the swing on a **non-elevated, flat surface**.

Care

- The pad is machine washable. Wash the pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly. The frame, liner and toys may be wiped clean using a mild cleaning solution and a damp cloth. Do not immerse the frame.
- This product has no consumer serviceable parts. Do not take this product apart.

IMPORTANT! This product must always be used with the pad provided, which includes the restraint system. Be sure to re-attach the provided pad (with restraint system) to this product.

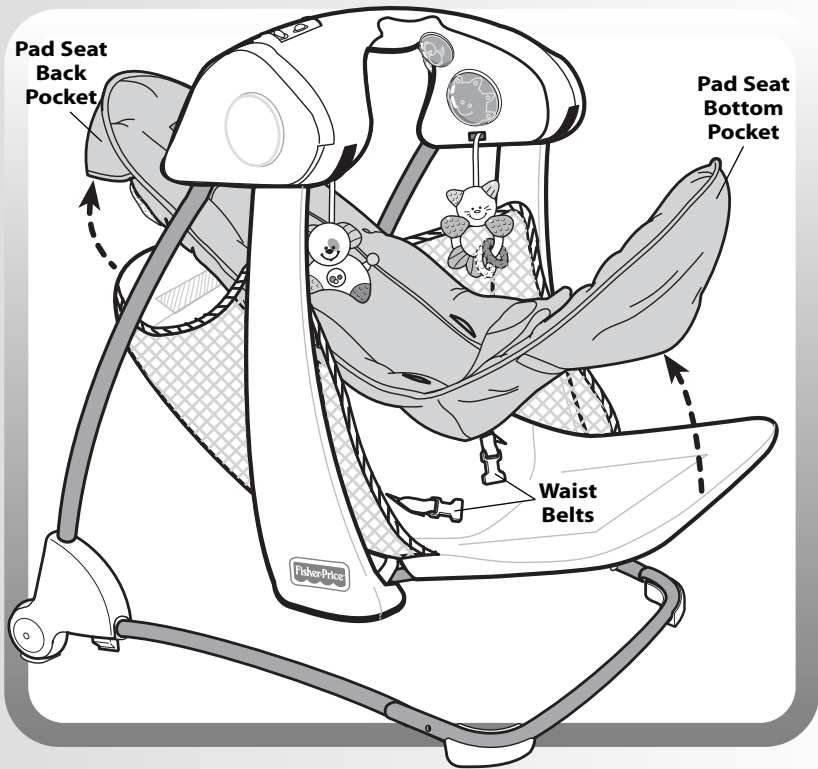

To remove the pad:

- Push the waist belts back through the slots in the pad.
- Unfasten and slide the pad seat back pocket off of the seat back.
- Unfasten and slide the pad seat bottom pocket off of the seat bottom.

To replace the pad:

- Refer to Assembly steps 6 and 7.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Deluxe Take-Along™ Swing is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For other countries outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121
Australia. Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.