


ABC SINGING WAGON INSTRUCTIONS


Please keep these instructions for future reference as they contain important information.

Assembly:



The battery compartment requires one-time customer assembly. Please attach to the wagon as shown.

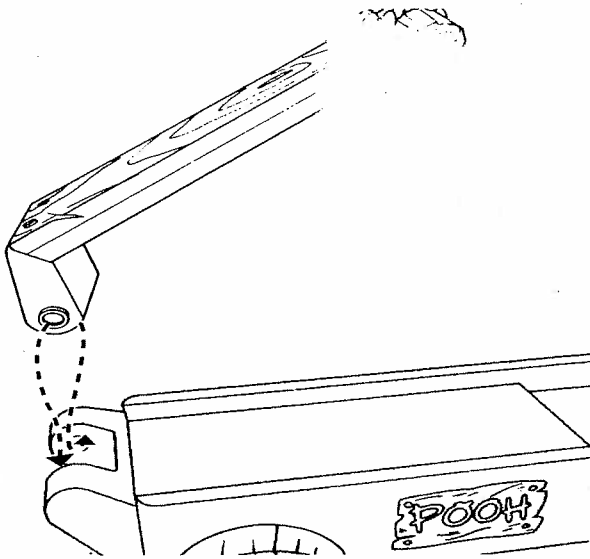

Insert the handle into the wagon as shown.

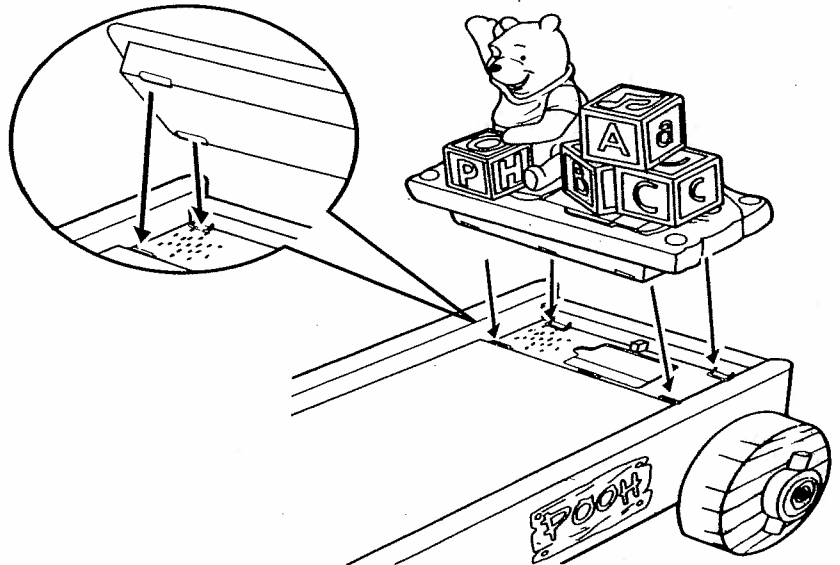

On/Off switch is located on the bottom of the toy, beneath the battery box.

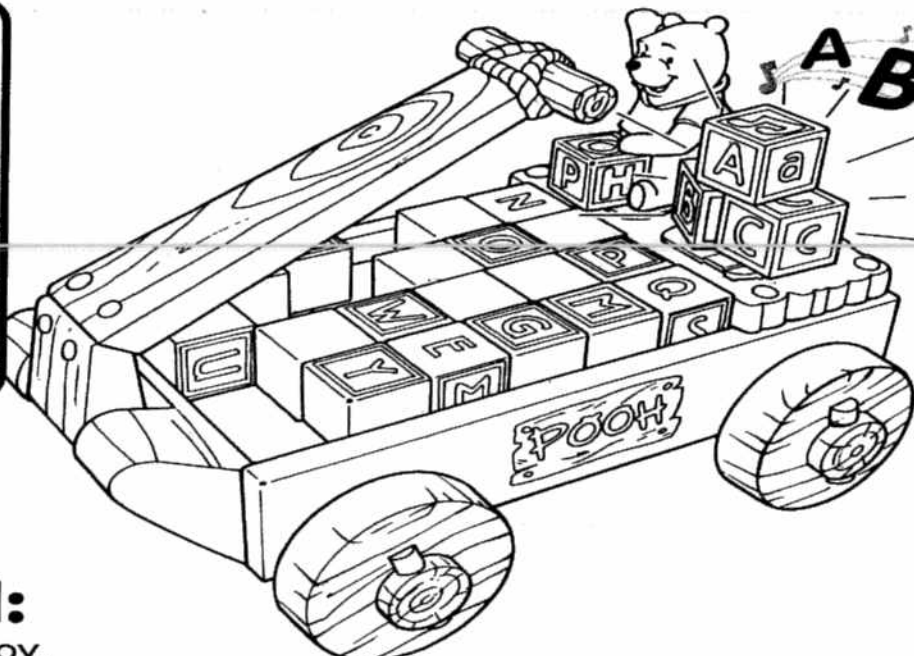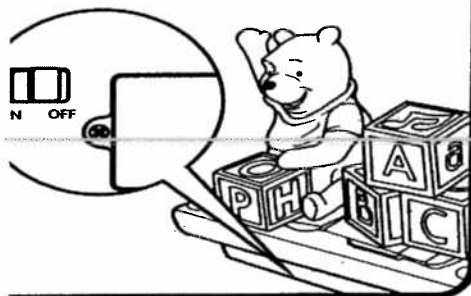

CAUTION:
This is not a ride-on toy.

Helpline 01628500303

94114

Fisher-Price

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,
New York, New York 10010 U.S.A.
Manufactured for Fisher-Price.
© 2000 Mattel, Inc. All Rights Reserved.
Fisher-Price, the Fisher-Price logo are
U.S. trademarks of Mattel, Inc.

Retain this address for future reference:
Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB.
Mattel Australia Pty., Ltd., Richmond, Victoria 3121-
Consumer Advisory Service 1800 800 812 (Valid only in Australia).
Mattel East Asia Limited, 930 Ocean Centre, Harbour City, HK, China.