

Barney™

Move 'n Groove™ Dance Mat

INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.


BARNEY'S™ MOVE 'N GROOVE™ DANCE MAT allows children to dance to six different tunes with BARNEY™ and make their own music using a keyboard. Children can select which song they want to hear, and play sound effects by stepping on the footprints, star, BJ™, and Baby Bop™ icons. All the while, BARNEY dances along to the music! There's also a game mode where Barney asks you to find certain icons.

ADULT ASSEMBLY:


- Unfold the vinyl dance mat and lay it flat on the floor.
- Remove the plastic "star" from below the main unit.
- Insert the star on the top of the main unit as shown.

WARNING:

This is a one-time assembly - once the star has snapped into place it will remain there permanently and cannot be disassembled or corrected.

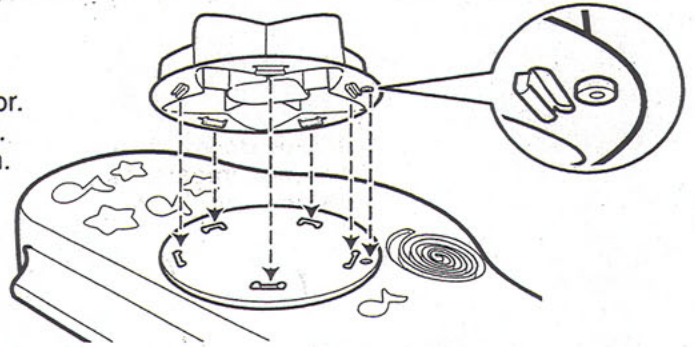

- Inflate BARNEY by blowing into the tube until fully inflated, and close tube.

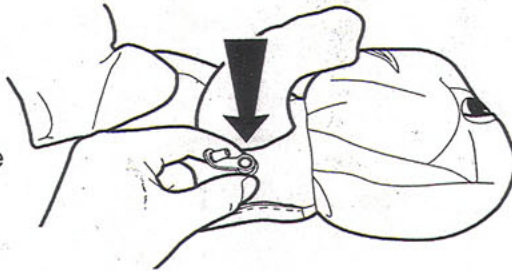


- Insert the plastic piece below Barney's left foot into the plastic star.
- BARNEY is now ready to dance!

NOTE:

Non-return valve needs to be squeezed at bottom while inflating by mouth. Do not use a high-pressure pump. To avoid damage, keep the toy away from sharp objects. To ensure best performance, make sure BARNEY is fully inflated before each use.



WARNING:
BARNEY WILL NOT OPERATE PROPERLY IF NOT FULLY INFLATED BEFORE EACH USE.

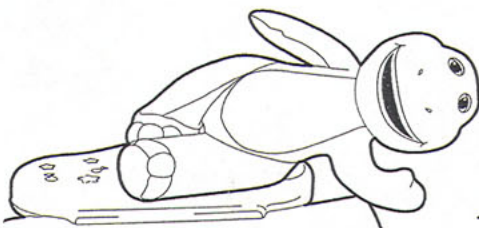

Underinflated



Inflated

HOW TO BEGIN PLAY:

- Flip the ON/OFF switch on the bottom of the main plastic unit to the ON position.
- Press any icon or key on the dance mat to begin play.

DANCE MODE:

- Select a song by pressing one of the following icons:
 - Horn
 - Guitar
 - Drums
- While the song plays, the child can dance around and step on any of the dance pads while BARNEY dances along.
- Stepping on any of the footprints will cause a sound effect to play.
- Stepping on the star will cause the magic sparkle sound effect to play.
- Stepping on the picture of Barney will cause Barney to spin 360 degrees and say "Super Dee Duper™".
- Stepping on the picture of Baby Bop or BJ will cause them to say words of encouragement.
- At any time you can step on the horn, guitar or drums to advance to the next song.
- There are two songs per icon, totaling 6 songs in all!

KEYBOARD MODE:

- At any time you can press the keyboard to play single notes, just like a real keyboard!

 
GAME MODE:

- Press the rainbow footprint to play a quiz game.
- Press the icon Barney asks for.
- If the child presses the correct icon, Barney will congratulate the child and ask them to find another icon.
- Barney will ask to find a total of 3 icons per game, which may include repeating ones answered incorrectly.
- Press the rainbow footprint to play again.

TOY SLEEP MODE:

- If the toy is not played with for more than 10 seconds Barney will say, "Let's Dance again".
- Barney will wait another five seconds and repeat, "Let's Dance again".
- If the child does not press any of the icons after another 5 seconds, the dance mat will shut down.
- Press any icon on the dance mat to turn it back ON.

- To clean, wipe the surface of the dance mat and BARNEY with a damp cloth.
- To store, remove Barney from the base and fold the mat towards the base.
- Do not immerse any portion of BARNEY or the dance mat in water. The inflatable BARNEY is not intended for use in water.
- The dance mat should be placed in an area that will permit lots of movement. Do not place close to furniture or other obstacles.
- This product is intended for indoor use only.

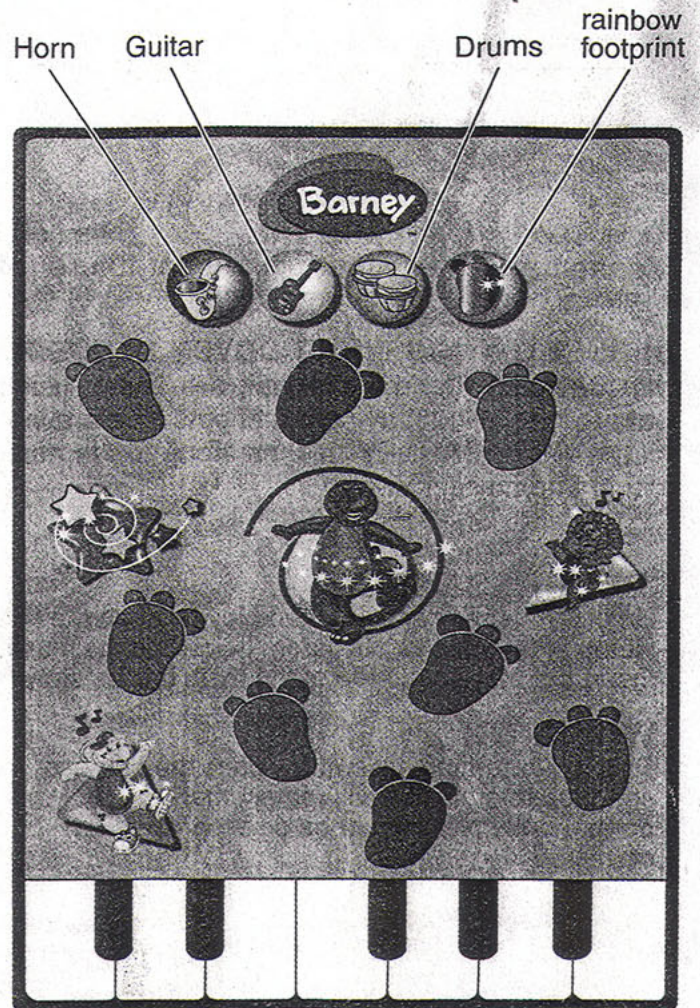

Fisher-Price, Inc.,
a subsidiary of Mattel, Inc.,
New York, New York 10010 U.S.A.
Manufactured for Fisher-Price.
© 2001 Mattel, Inc. All Rights Reserved.
Fisher-Price and the Fisher-Price logo
are U.S. trademarks of Mattel, Inc.
Packaging and address should be
retained for future reference.



© 2001 Lyons Partnership, L.P. All rights reserved. The Barney and BJ names and characters and the overlapping dino spots and Barney and star logos are trademarks of Lyons Partnership, L.P. Reg. U.S. Pat. & Tm. Off. The Baby Bop name and character are trademarks of Lyons Partnership, L.P.

94593-0920-G2

Fisher-Price