



MATCHBOX

RADIO RESCUE Playset

2-YEAR LIMITED WARRANTY

Mattel, Inc., warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052, for replacement or refund at our option.

This warranty does not cover damage resulting from unauthorized modification, accident, misuse, or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Valid only in U.S.A.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday through Friday: 8:00 a.m.-6:00 p.m. Eastern time. Outside the U.S.A., see telephone directory for Mattel listing.

Please keep these instructions for future reference as they contain important information.

1 IF SOUND DISTORTS, REPLACE BATTERIES. IF AUDIO FEEDBACK OCCURS, MOVE MICROPHONE AWAY FROM SPEAKER.


1. Unscrew and remove the battery cover. Remove the old batteries and dispose of them safely.
2. Insert 3 new "AA" (LR6) batteries as shown in the diagram. Alkaline batteries provide best results.
3. Make sure that polarity is correct.
4. Replace the battery cover and its screw.

CLEANING

Brush away loose dirt, then wipe with a damp cloth.
DO NOT IMMERSE IN WATER.


BATTERY INSTALLATION

Screwdriver not included.

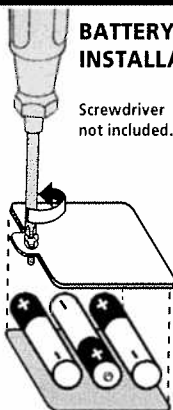**BATTERY SAFETY INFORMATION**

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely. Do not dispose of in a fire as batteries may explode or leak.
11. Products with non-replaceable batteries are not to be disposed of in a fire as the batteries inside may explode or leak.

2

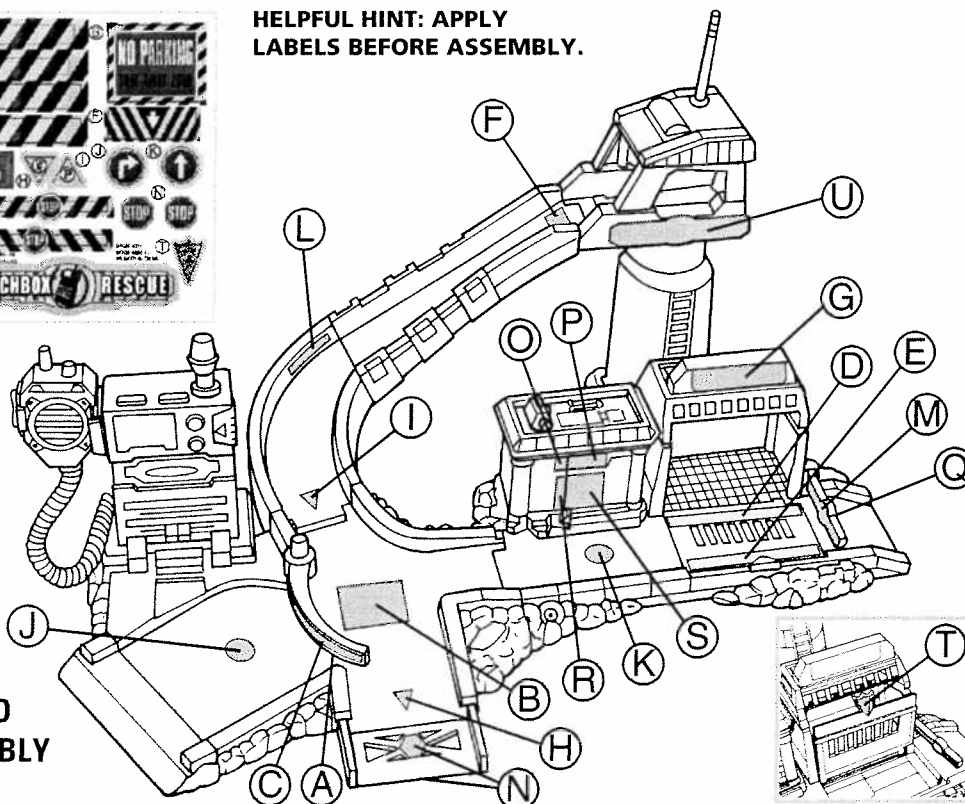HELPFUL HINT: APPLY LABELS BEFORE ASSEMBLY.

**UNASSEMBLED
ADULT ASSEMBLY
REQUIRED**



©2001 Mattel, Inc., Mt. Laurel, NJ 08054 U.S.A. PRINTED IN CHINA.
All Rights Reserved. ® and TM designate U.S. trademarks of Mattel, Inc.

Retain this address for future reference: Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB, Mattel Australia Pty Ltd., Richmond, Victoria 3121.
Consumer Advisory Service: 1800 800 812 (valid only in Australia). Mattel East Asia Limited, 930 Ocean Centre, Harbour City, HK, China.


FORD trademarks used under license from Ford Motor Company. Emblems and vehicle model body designs are used under license to Mattel, Inc. All other trademarks are used under license or with permission.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.


97036-0920-G1
97036-9993-S1-G1

ASSEMBLY


1

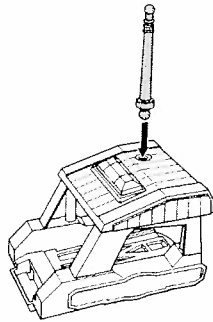


2

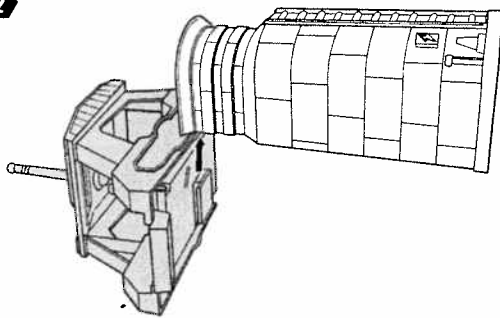


3

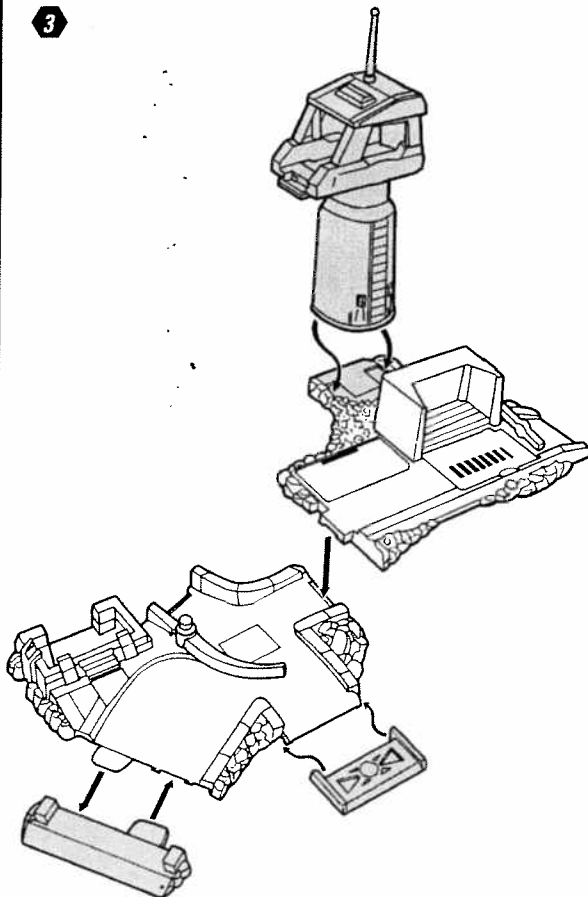


4

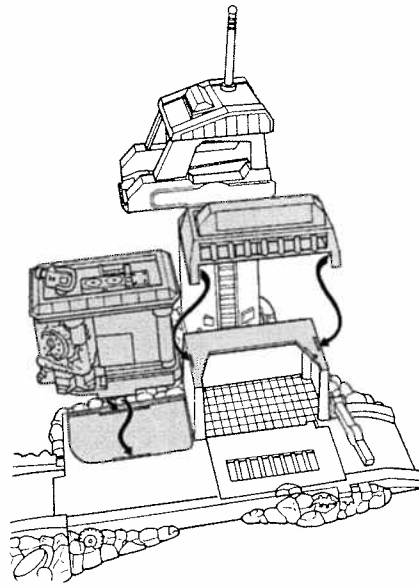

5

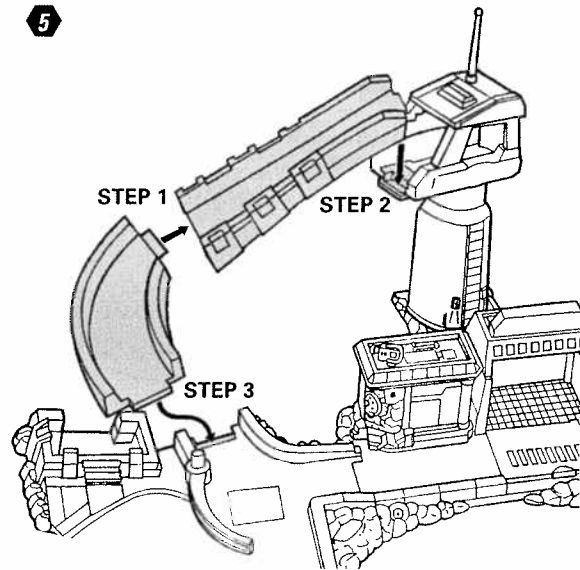

6

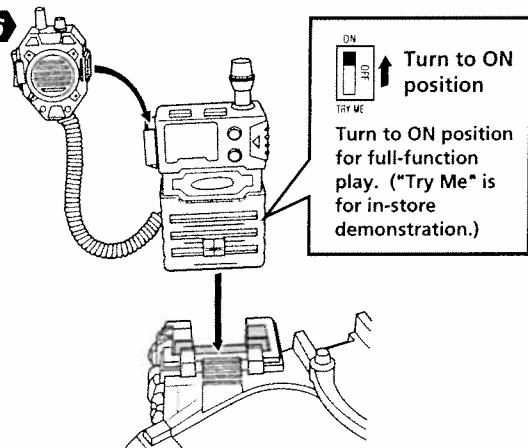


HOW TO PLAY


1

PRESS to
amplify
your
voice.


PRESS for
sound effects.

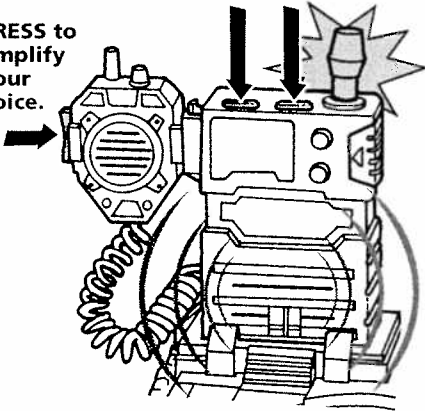


2 Make the bad guys
crash into the bank.

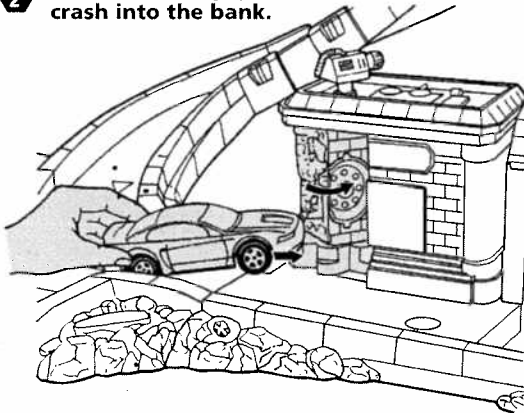


3

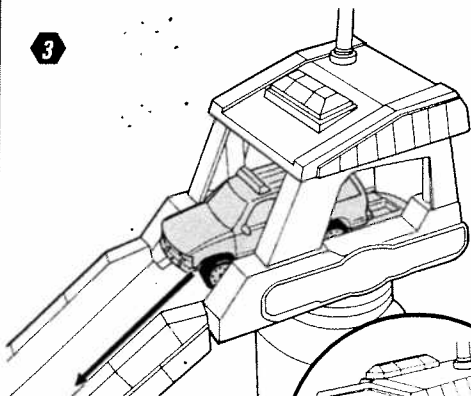


INCLUDES ONE
MATCHBOX® VEHICLE.
NOT FOR USE WITH
SOME MATCHBOX®
VEHICLES.

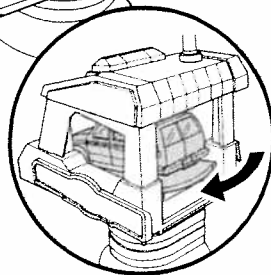

4 Ram the bad guys. Trap them in the jail.

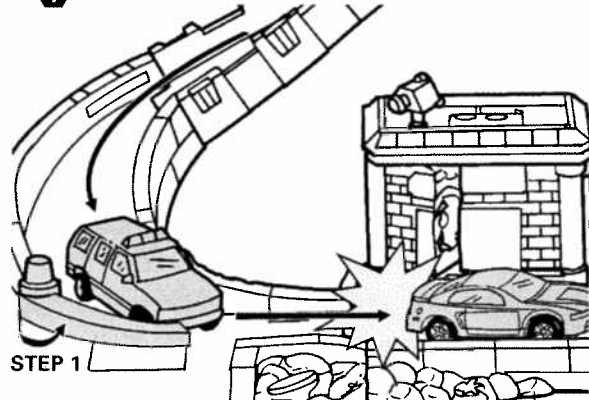

5

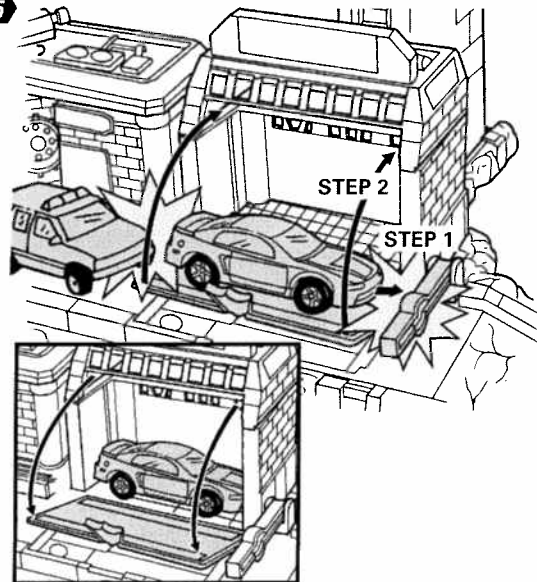

TO RESET

6 Microphone and
speaker detach
from the set for
on-the-go play!



NOTE: If the
toy does not
function, turn
the switch OFF
and ON again to
reset.