



Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" (LR6) **alkaline** batteries (not included).

Adult assembly is required.

Tool required for assembly and battery installation: Phillips screwdriver (not included).



 
www.fisher-price.com

Ramps Around Garage™


Parts

⚠ CAUTION

This product contains small parts in its unassembled state.
Adult assembly is required.

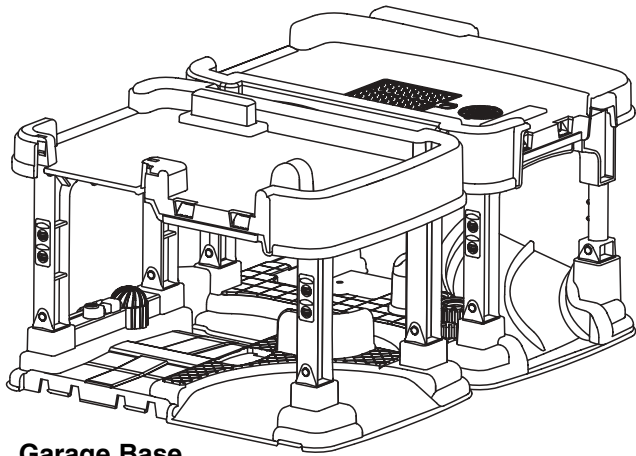


Garage Base

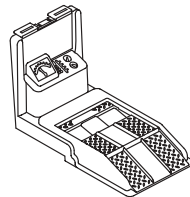 


Diagnostic Center



 
News Stand

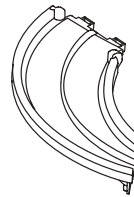


Upper Track

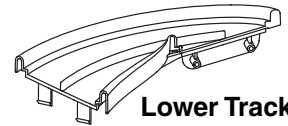 


Lower Track

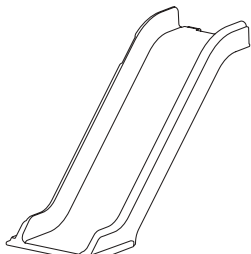 


Ramp

 

Elevator Roof

 


2 Fences

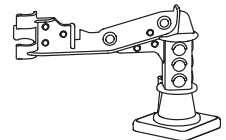 


Track Support

Parts Not Shown:

 - Label Sheet
- Car
- Tow Truck
- 2 Figures

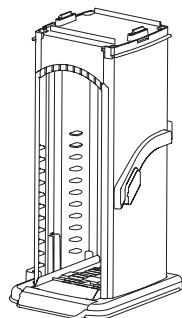

Elevator

 

Gate



Post



Elevator Handle

 


Vacuum

Note: Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.




**#6 x 1" Screw - 4
Shown Actual Size**




**#6 x 1/2" Screw - 6
Shown Actual Size**

 Assembly

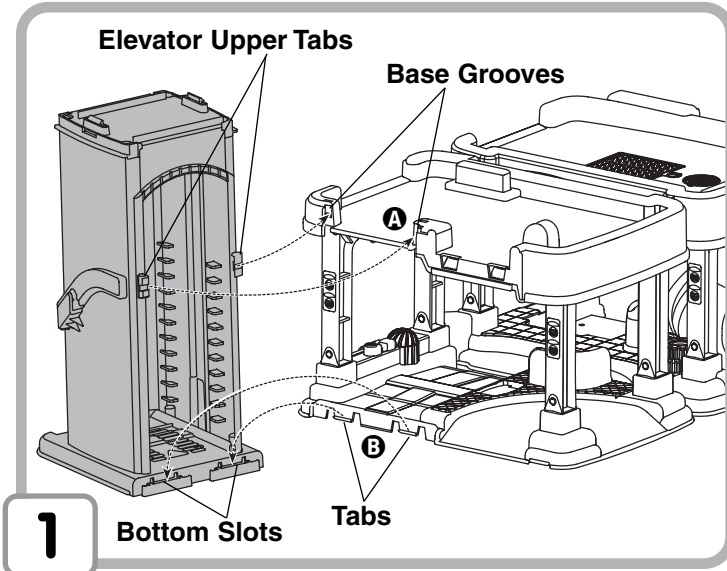


1

 - Position the elevator on a flat surface. Note the locations of the bottom slots and the upper tabs on the elevator.
- Hold the base at an angle. While making sure the upper tabs on the elevator fit into the grooves in the base **A**, insert the tabs on the base into the bottom slots on the elevator **B**.
- Press down on the base to **"snap"** the elevator in place.

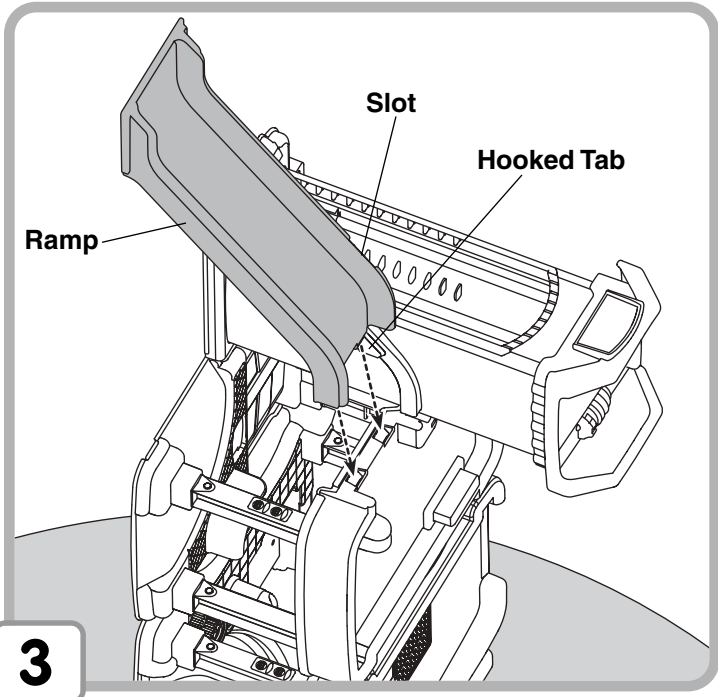


3

 - Place the garage on its side on a flat surface, as shown.
- Fit the connectors on the end of the ramp into the holes on the top of the base. Be sure to fit the hooked tab on the side of the elevator into the slot on the ramp. Press the ramp until it **"snaps"** in place.
- Place the garage upright again.

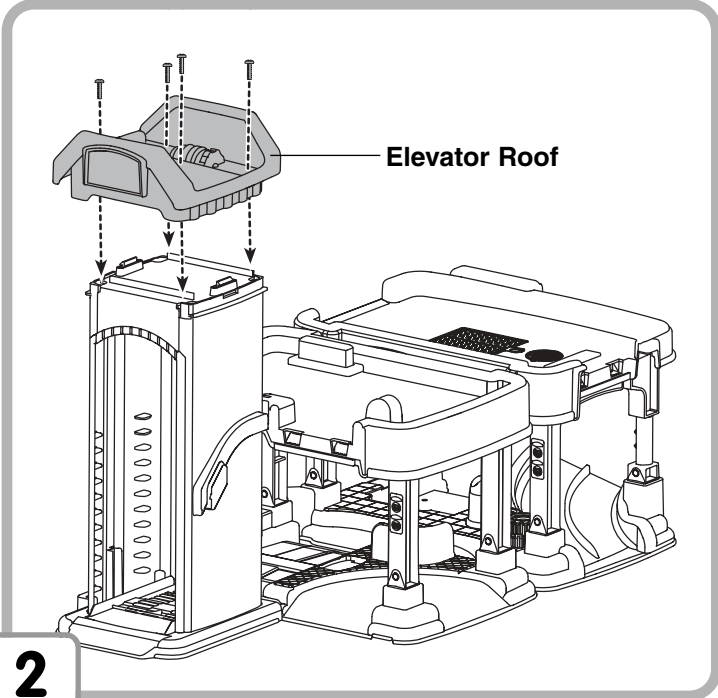


2

 - Fit the elevator roof on the elevator.
- Insert four #6 x 1" screws into the elevator roof and tighten.

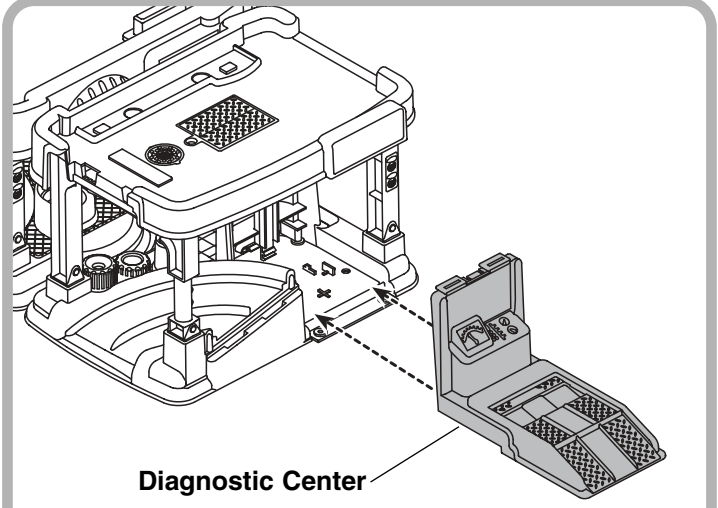


4

 - Slide and **"snap"** the diagnostic center into the base.
- Turn the base over and insert two 1/2" screws into the base. Tighten the screws.
- Turn the base upright.

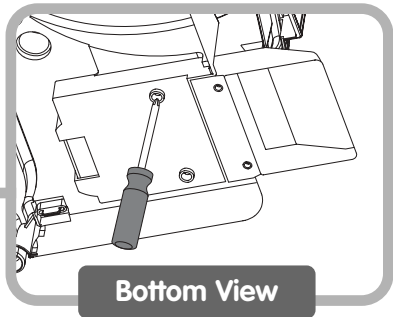

Bottom View

 
Assembly

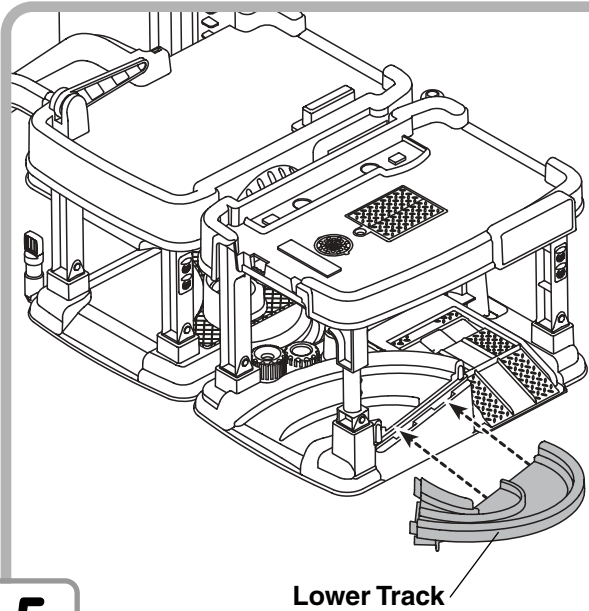

5

Lower Track

 - "Snap" the tabs on the lower track into the slots in the base.

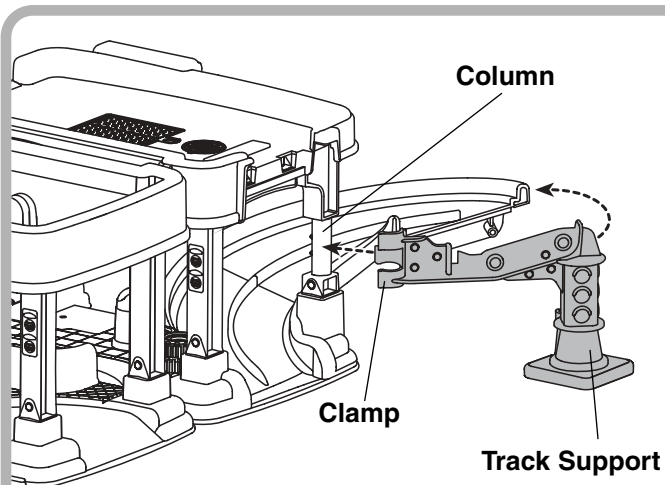


Column

Clamp


Track Support

 6

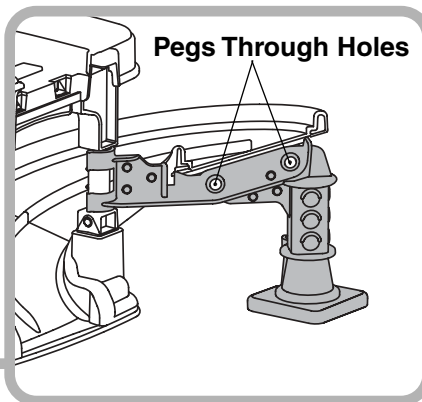


Pegs Through Holes

 - Press the clamp on the track support onto the base column.
- Rotate the track support so that the holes in the support fit over the pegs on the lower track.

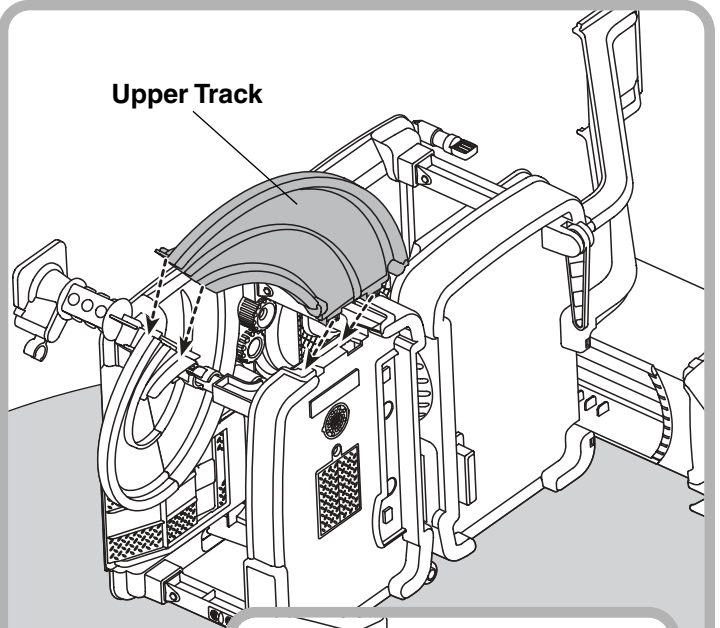


Upper Track

 7

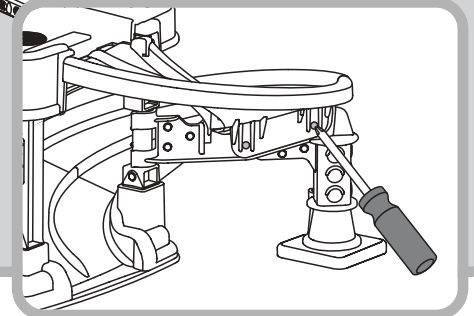

 - Place the garage on its side on a flat surface, as shown.
- "Snap" the rectangular connectors on the upper track into the holes at the top of the base.
- Fit the other end of the upper track over the end of the lower track.
- Place the garage upright again.
- Insert two 1/2" screws into the holes on the underside of the upper track, as shown. Tighten the screws.

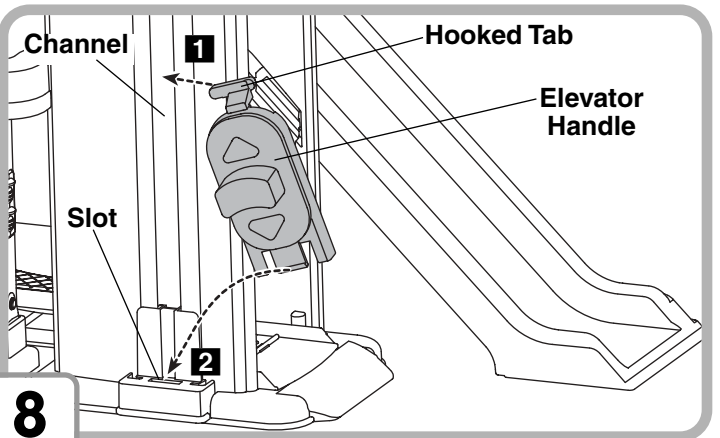

Channel

Hooked Tab

 
Elevator Handle

Slot

8


- Tip the elevator handle and fit the hooked tab through the channel in the side of the elevator **1**.
- Slide the elevator handle down and "snap" the tab on the handle into the slot in the elevator **2**.

Assembly

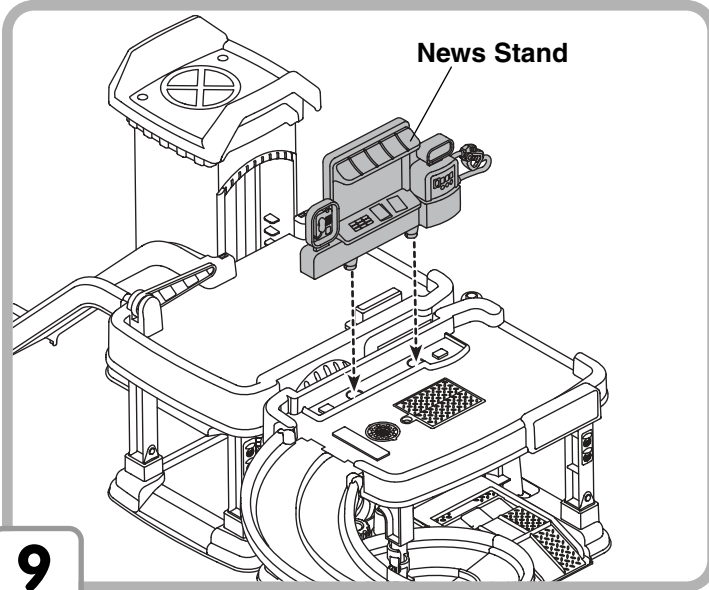


9

 - "Snap" the news stand into the top side of the base.

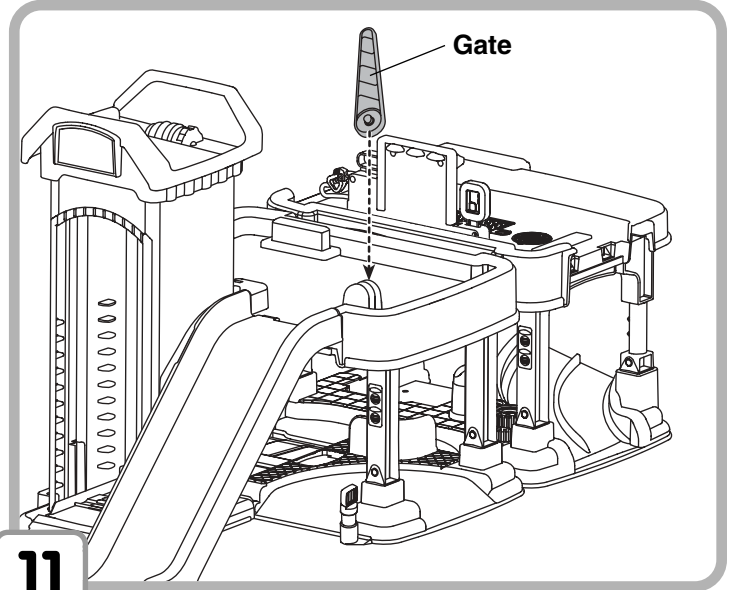


11

 - "Snap" the gate into the slots on the top side of the base.

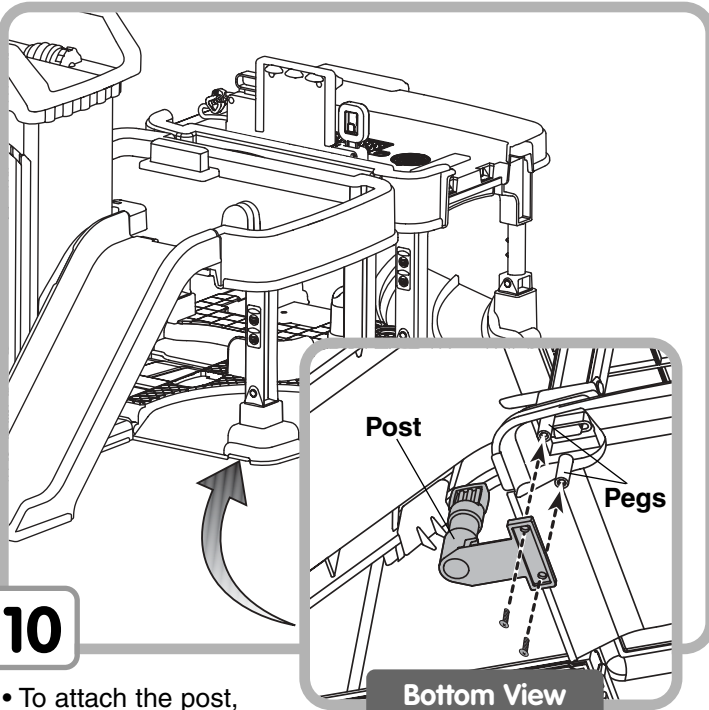

10

 
- To attach the post, turn the base over so the bottom is facing you.
- Align the holes in the post with the pegs, as shown.
- Insert two $\frac{1}{2}$ " screws into the post and tighten.
- Turn the base upright.

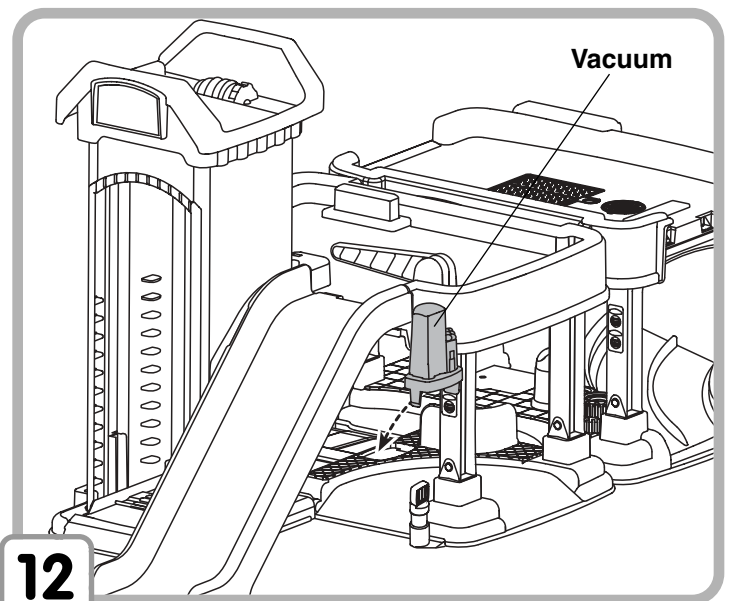


12

- "Snap" the vacuum into the base.

 Battery Installation



SHOWN ACTUAL SIZE

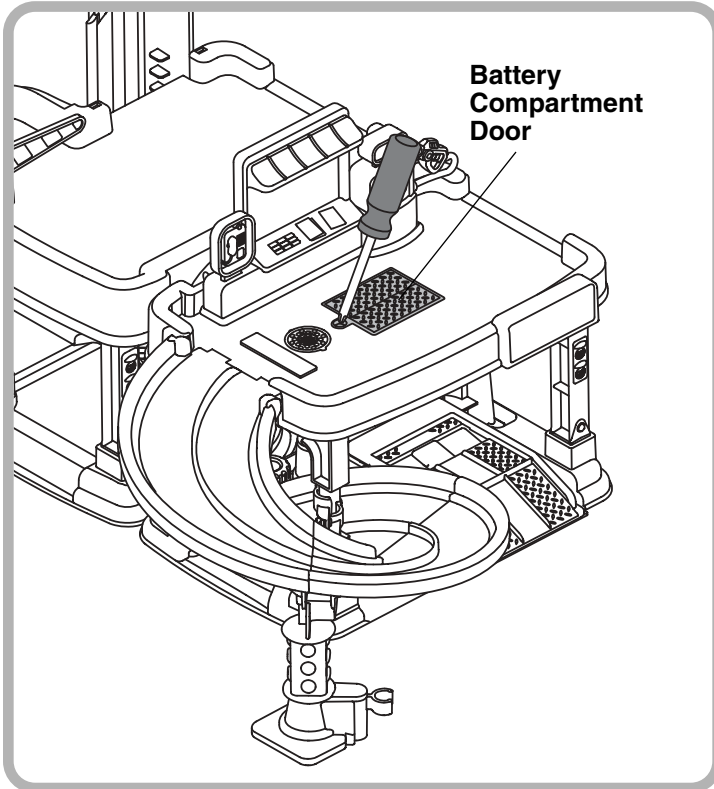 

- Locate the battery compartment on the top level of the garage.
- Loosen the screw in the battery compartment door. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer life.

- Replace the battery compartment door and tighten the screw.

 
Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the battery compartment door.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Decoration

- Before applying labels, wipe the surface of the toy with a clean, dry cloth to remove dust or oils.
- For best results, avoid repositioning a label once it has been applied.
- Apply labels as shown in the illustration.

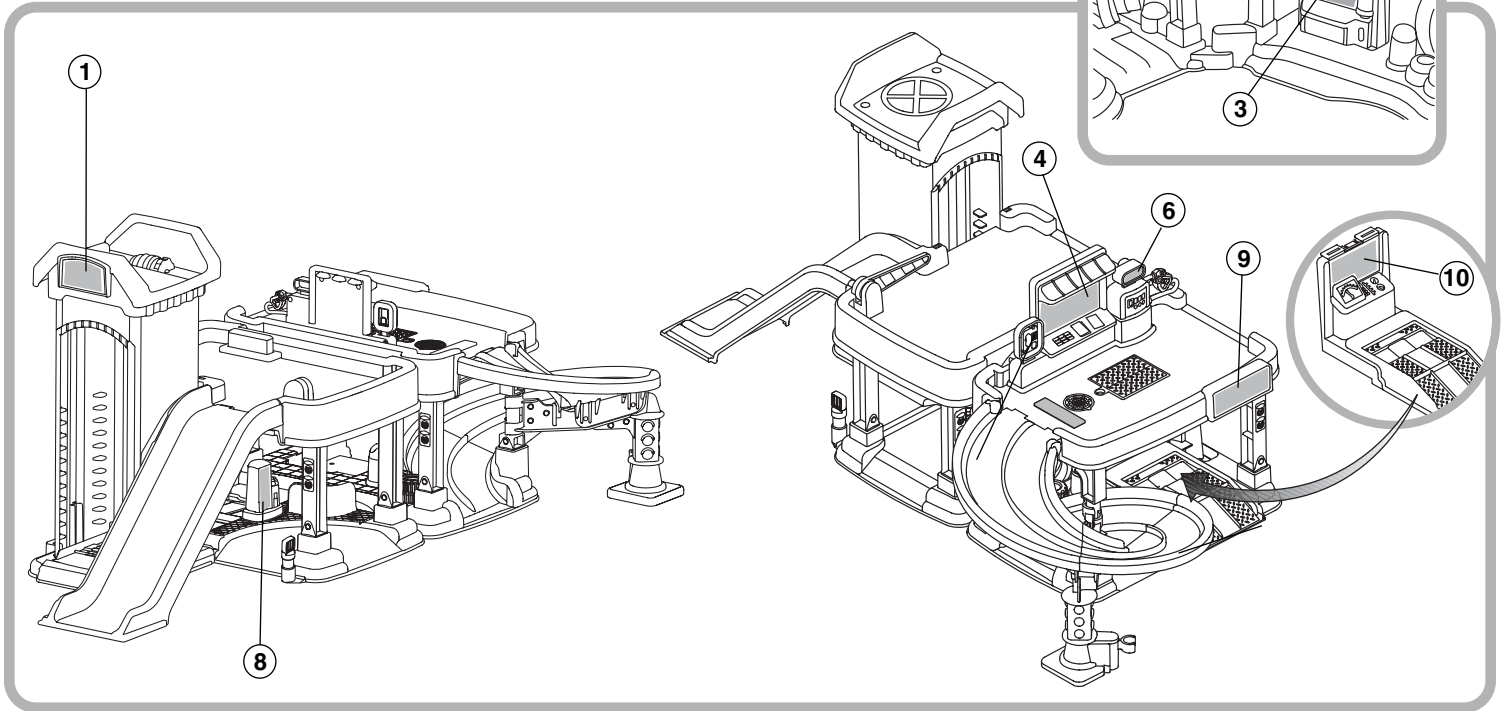


Fun sounds all around the garage!

- Locate the On/Off switch under the battery compartment.
- Slide the switch to the ● position to turn the toy on and to the ○ position to turn it off.

Hint: If your child is not actively playing with this toy, it turns off automatically (sleep mode).

- When your child is finished playing with this toy, slide the on/off switch to the off position ○.

 Press these buttons around the garage to hear many fun sound effects.

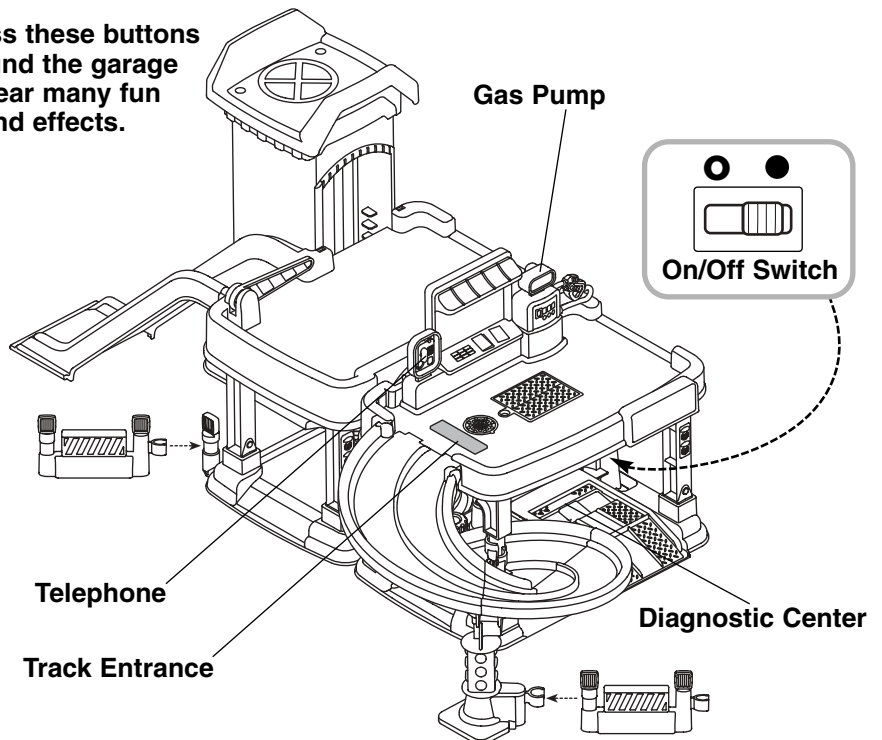

Care

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052, U.S.A.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For countries outside the United States:

CANADA

Questions? 1-800-567-7724, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.