



Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

Tool needed for assembly: Phillips Screwdriver (not included).

Requires four "D" (LR20) **alkaline** batteries (not included) for operation.




www.fisher-price.com


Triple Hit™ Baseball

Parts

IMPORTANT! Only use balls supplied with this toy.

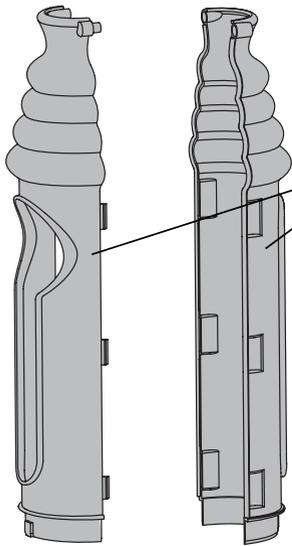


Ball Chute
(2 Pieces)

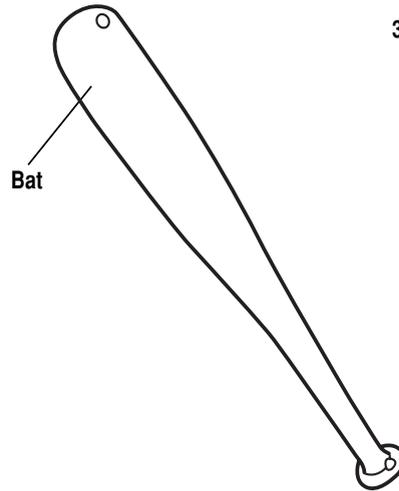

Bat

3 Balls

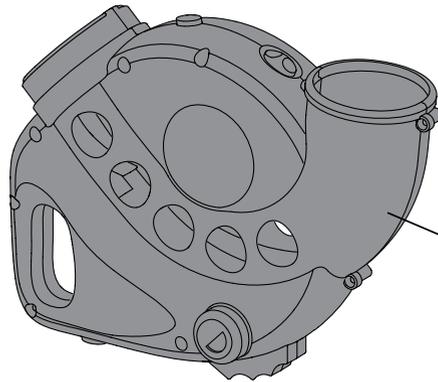


Motor




#6 x 1/2" Screws - 4

SHOWN ACTUAL SIZE

Note: Tighten and loosen all screws with a Phillips Screwdriver. Do not over-tighten the screws.

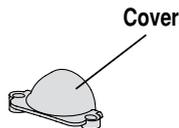

Cover

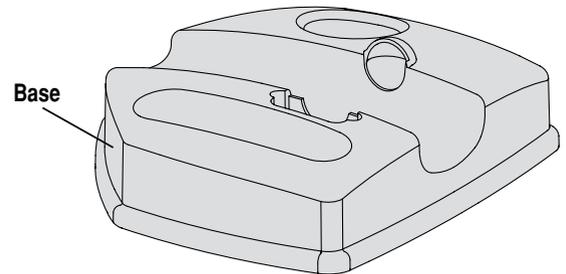

Base

WARNING


To prevent injury from balls and moving parts:

- Keep face, head and hands away from the ball release.
- Use only the balls included.
- Never put other objects in the ball chute.


CAUTION

This product contains small parts in its unassembled state. Adult assembly is required.


Assembly

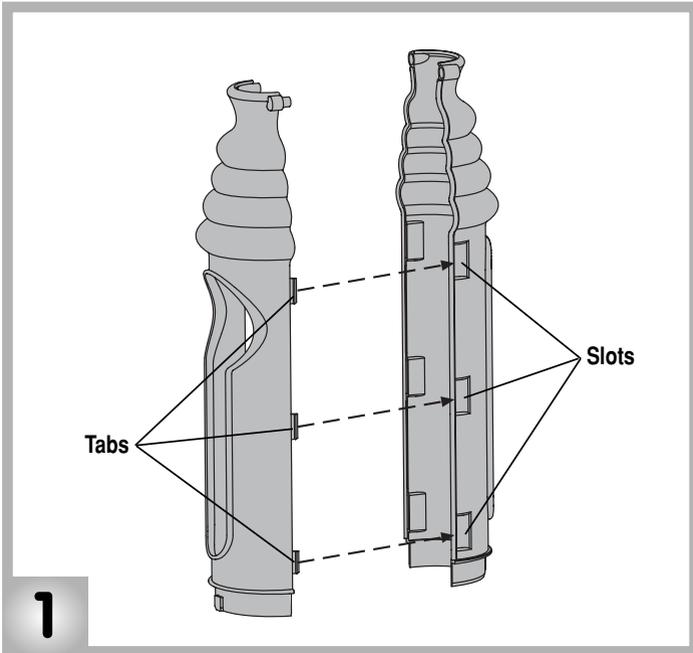


- Insert and snap the tabs into the slots in the ball chute pieces.

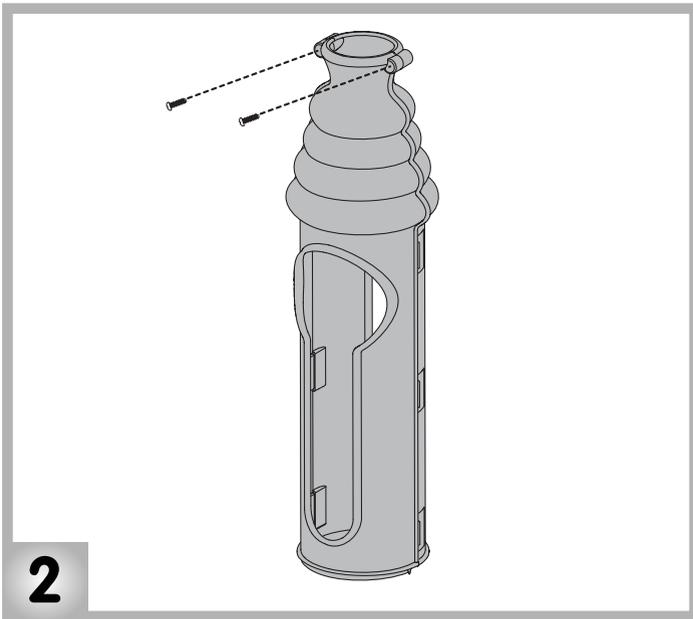

- Insert two screws into the pegs at the top of the ball chute and tighten.

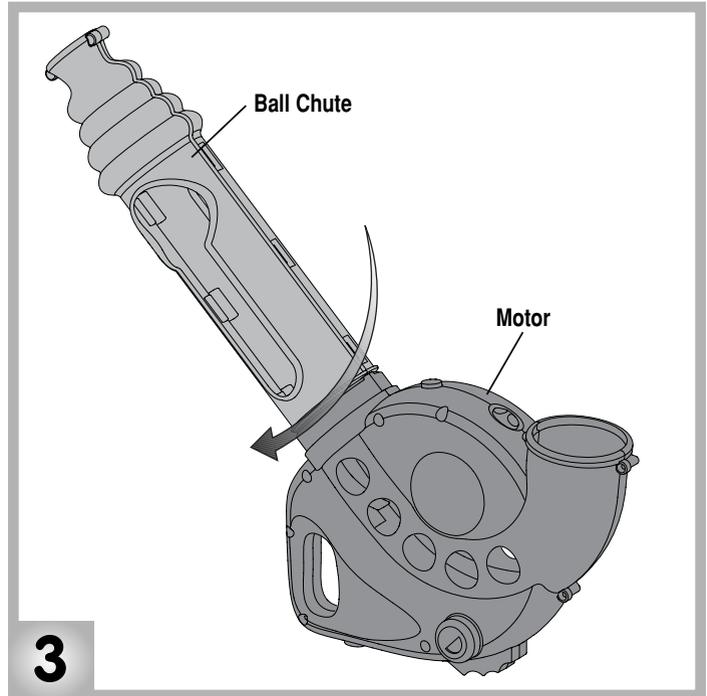


- Align the tabs at the bottom of the ball chute with the grooves in the opening of the motor.
- Turn the ball chute clockwise to lock it into position. Pull up on the ball chute to be sure it is secure.

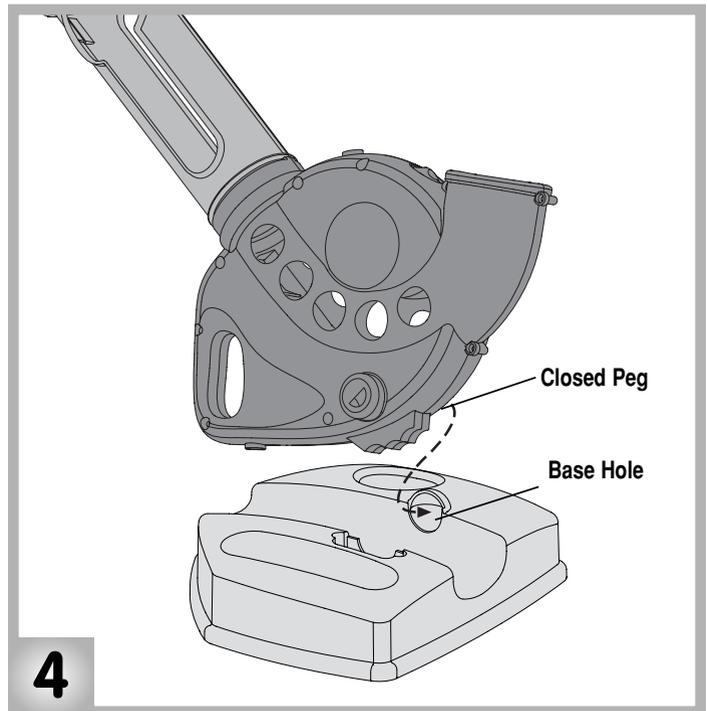


- At an angle, insert the closed peg on the motor into the hole in the base.

Assembly

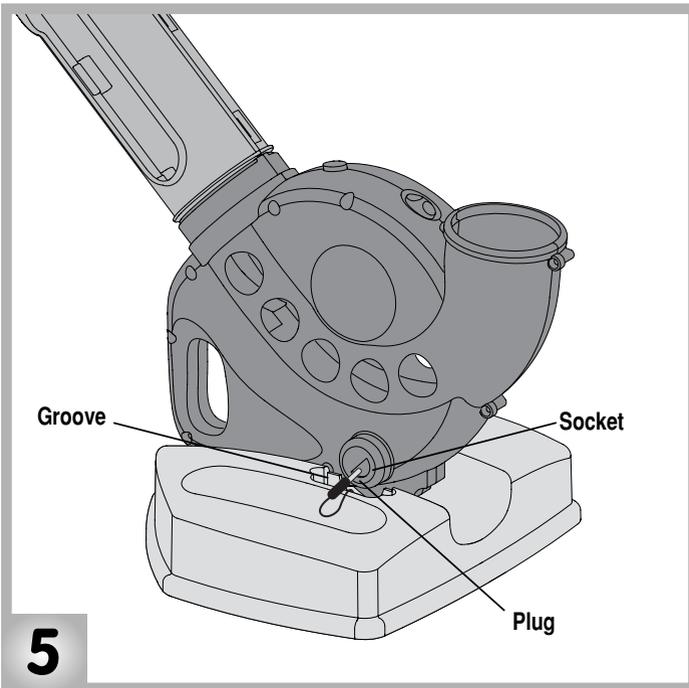

- Lower the motor so that the open peg fits into the groove in the base.
- Insert the battery plug into the socket in the motor, as shown.



Hint: If there isn't a socket inside the peg, you've positioned the motor/chute assembly backwards in the base. Remove the motor/chute assembly and turn it around. Repeat assembly step 4.

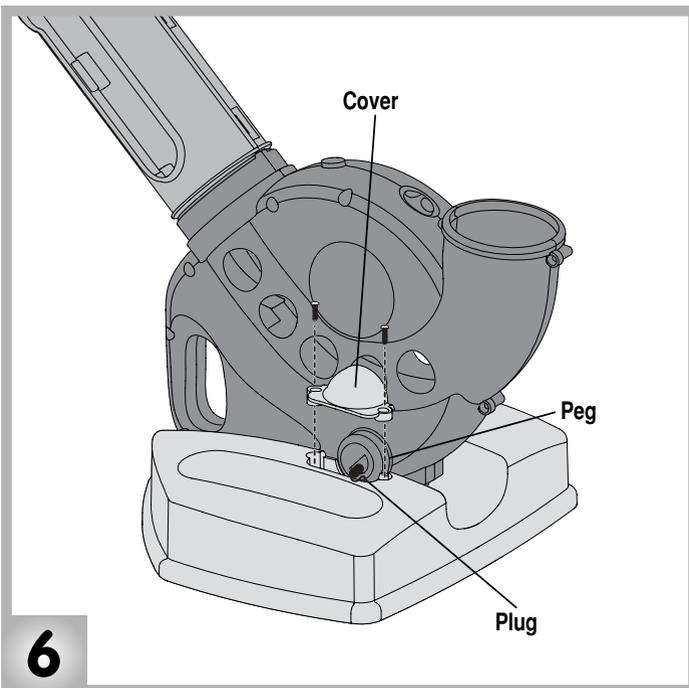

- Fit the cover over the peg and plug and into the base.
- Insert two screws into the cover and tighten.

Assembly is now complete.

Battery Installation

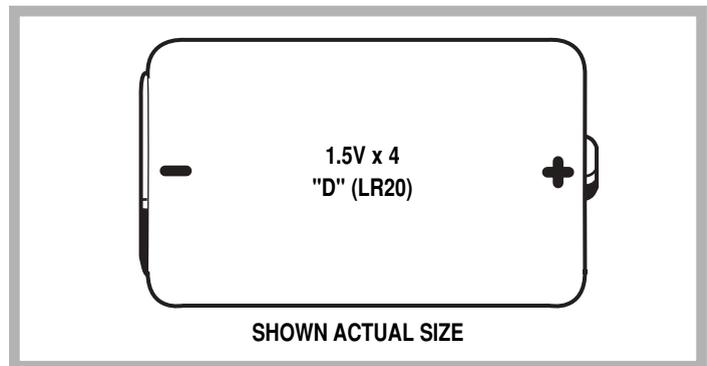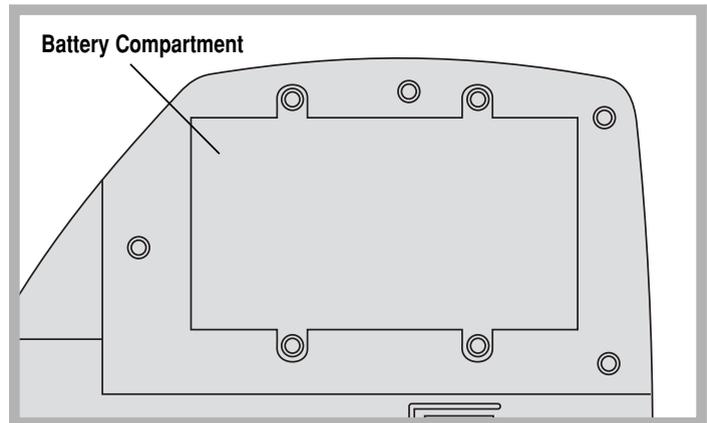

- Loosen the screws in the battery compartment door and remove the battery compartment door.
- Insert four "D" (LR20) **alkaline** batteries into the battery compartment.

Hint: We recommend using **alkaline** batteries for longer life.

- Replace the battery compartment door and tighten the screws.
- When ball release distance is greatly reduced or if the time between ball releases is long, it's time for an adult to replace the batteries!

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.



Beginner

Hit from the tee!

- Position the ball chute completely upright.
- Place the ball on top of the ball chute.
- Your little player can hit the ball off the “tee”.

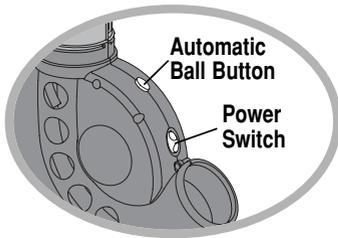

Rookie

Balls pop up automatically to hit.

- Push the ball chute all the way back.
- Load the balls into the side of the ball chute.
- Locate the power switch on the top of the motor. Slide the power switch on .
- Press the automatic ball button  and get ready.
- Stand about two feet to the side of the base.
- Hit the ball when it pops up!

Pro

Hit the pitched ball from up to 10 feet away!

- Position the ball chute completely upright.
- Load the balls into the side of the ball chute.
- Locate the power switch on the top of the motor. Slide the power switch on .
- Press the automatic ball button  and get ready.
- Stand no further than 10 feet from the front of the base.
- Watch the pitch and hit a home run!

Hint: After pressing the automatic ball button, the motor shoots three balls and automatically turns off. To shoot three more balls, press the automatic ball button again!

Batting Practice Tips

- We recommend that this toy be used outdoors, on a non-paved surface, such as grass or sand. Do not use outdoors when it is raining or there is wet grass. The balls will not launch properly.
- Be sure that when your child is batting, there are no other children in or around the batting area, including directly in front of the unit.
- This toy is designed for use with plastic balls and plastic bat (both included). It is not designed for use with wooden or metal bats, or regulation baseballs or softballs. Use of these balls and bats may damage this toy.
- Hold the bat with hands together, about one or two inches from the knob at the end of the bat.
 - Right handed batters should have the right hand on top of the left hand.
 - Left handed batters should have the left hand on top of the right hand.
- Stand with feet about shoulder width apart.
- When hitting from the “tee” or pop-up, stand close enough to hit the ball comfortably. Look at the ball and swing with a smooth and level motion.
- When hitting a pitched ball, stand no further than 10 feet from the unit.
- Keep your eyes on the ball as it pops-up or as it is being pitched.
- Swing with a smooth and level motion.

Consumer Information

Storage

- Load the balls into the side of the ball chute.
- Fit the bat in the circular indent in the base.

Care

- Do not leave this product outdoors. Store this product indoors when not in use.
- This product may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue. Do not immerse this product.
- Periodically inspect this product for wear and damage and replace any cracked parts.

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052, U.S.A.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For countries outside the United States:

CANADA

Questions? 1-800-567-7724, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.