



Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" (LR6) **alkaline** batteries (not included).

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).




[www.fisher-price.com](http://www.fisher-price.com)

Surprise Sounds Fun Park™


## Parts

### CAUTION


This product contains small parts  
in its unassembled state.  
Adult assembly is required.

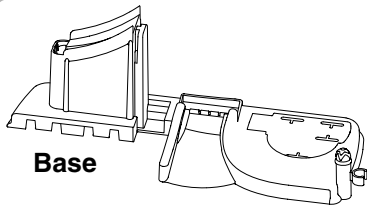

Base

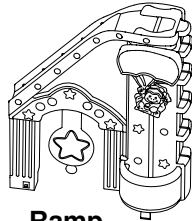


Ramp

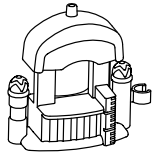


Ticket Booth




Flag

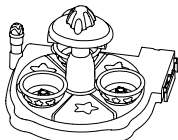


Teacup Ride

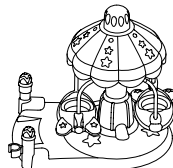

Rocketship Ride

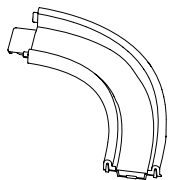

Lower Track

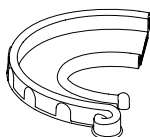

Upper Track




Lower Track Support  
(Smaller)



Upper Track Support  
(Larger)

#### Parts Not Shown:

 2 Figures  
Car  
Label Sheet



#8 x 1/2" Screw - 2  
Shown Actual Size

## Consumer Information

### Care

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to:  
Fisher-Price® Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052, U.S.A.

#### For countries outside the United States:

##### CANADA

Questions? 1-800-567-7724, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

##### GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.  
Helpline: 01628 500302.

##### AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.


##### NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

##### ASIA


Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

# Assembly

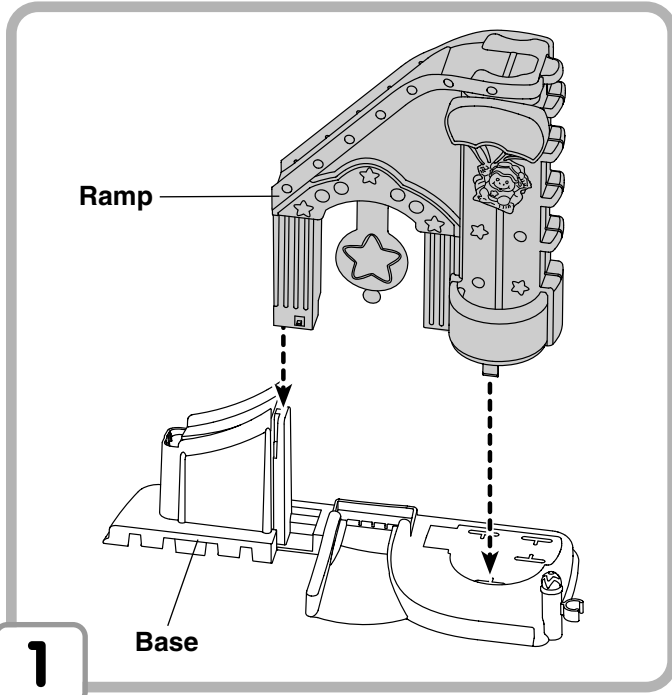


1

- "Snap" the ramp into the base.

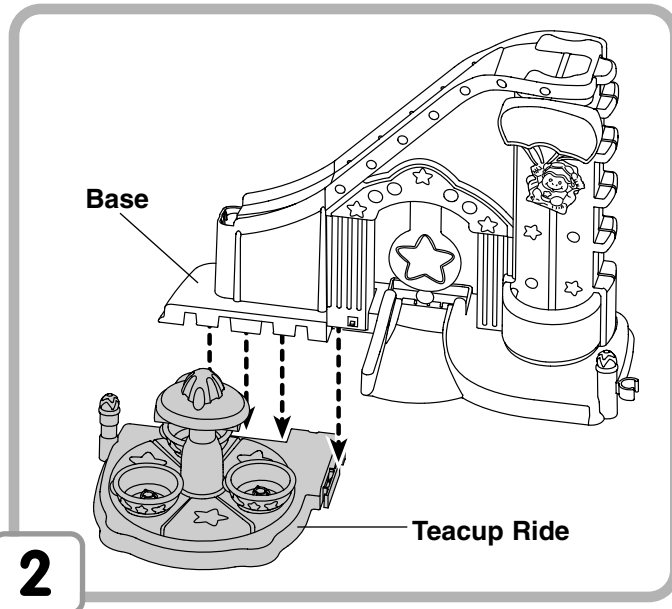


2

- Fit the base onto the teacup ride as shown. Press down on the base to "snap" it in place.

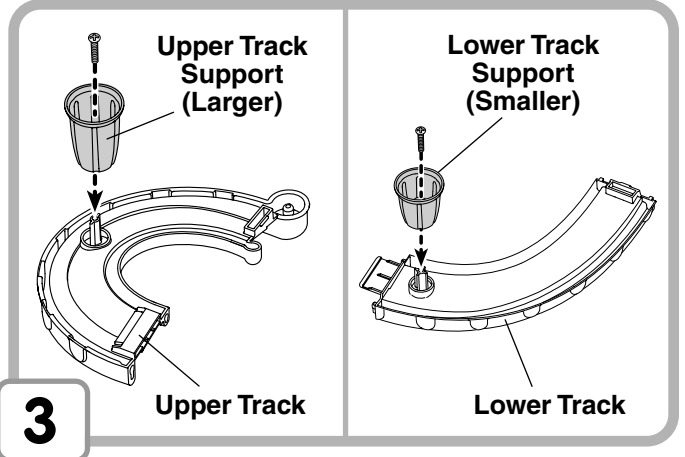

3


- Turn the upper track face down. Fit the upper track support (larger) to the peg on the upper track.
- Turn the lower track face down. Fit the lower track support (smaller) to the peg on the lower track.
- Insert a screw into each track support and tighten with a Phillips screwdriver. Do not over-tighten.

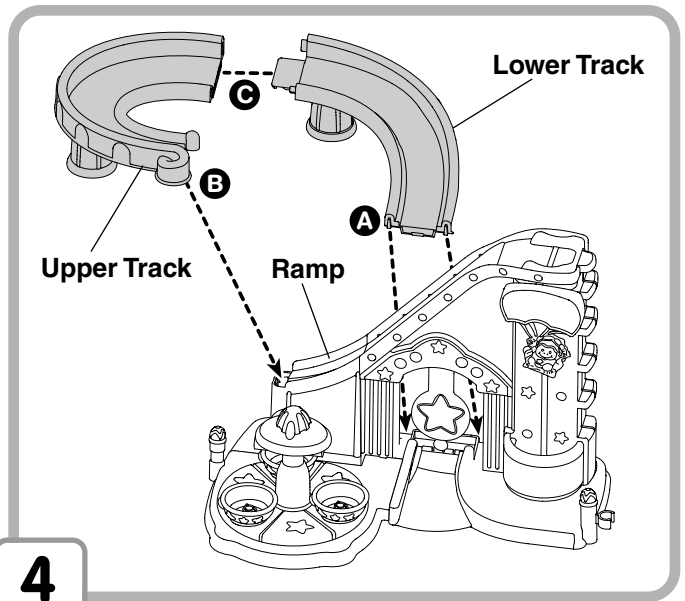

4

- "Snap" the lower track into the base under the ramp **A**.
- "Snap" the upper track into the end of the ramp **B**.
- "Snap" the upper track to the lower track **C**.


## Assembly

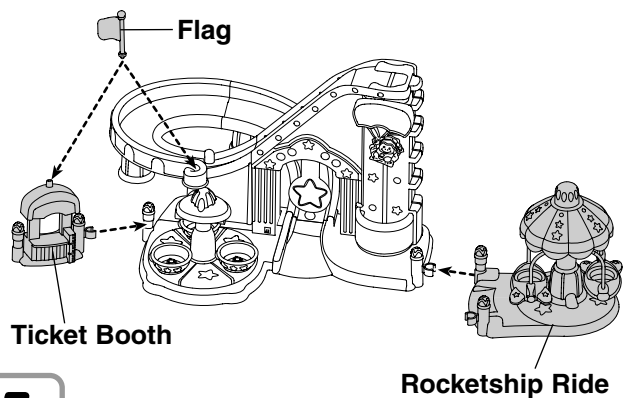


5

- “Snap” the ticket booth and rocketship ride to the main assembly.
- Insert the flag into the top of the ticket booth or the hole in the upper track.

## Battery Installation

 

SHOWN ACTUAL SIZE

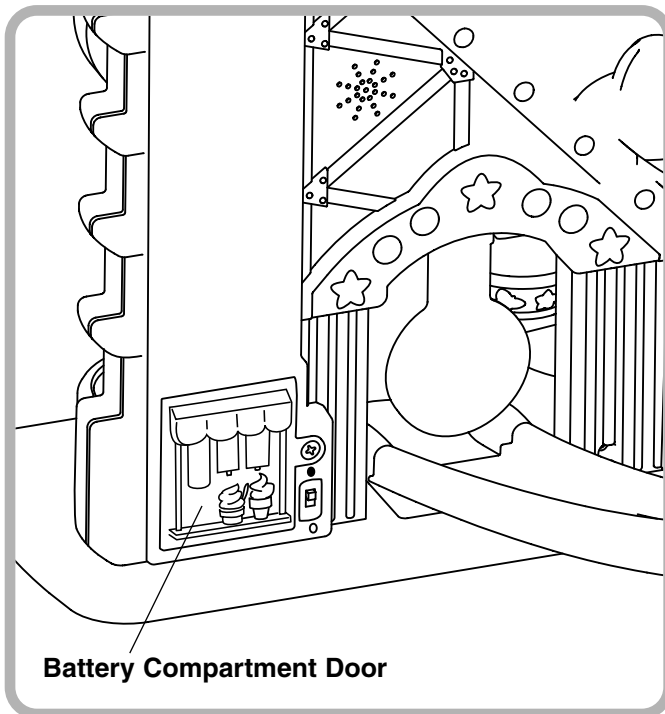

- Locate the battery compartment on the back of the ramp.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries.

**Hint:** We recommend using **alkaline** batteries for longer life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.

## Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.


## Fun Sounds and Excitement!




- Spin the teacup ride and hear a fun song.



- Push down to spin the rocketship ride.

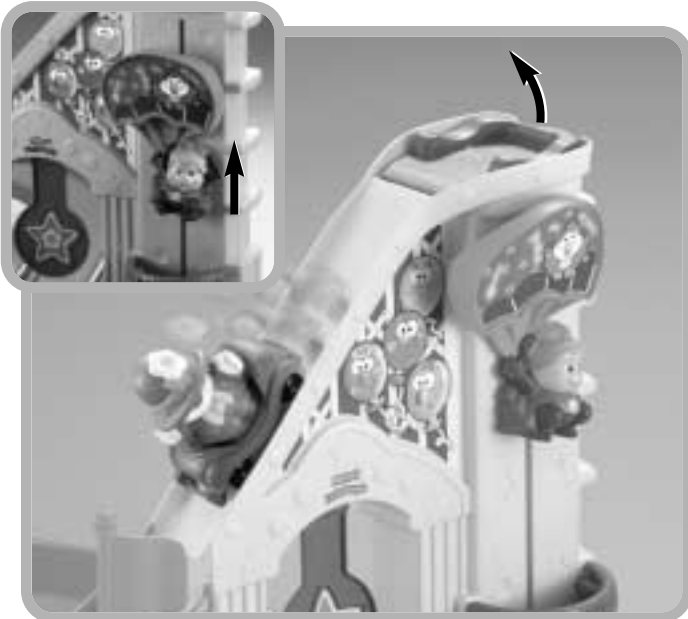

- Lift the monkey to the top of the ramp.
- Place the car on top of the ramp.
- Lift the handle at the top of the ramp. When the roller coaster car heads down the track and hits the star, you'll hear a fun sound effect as the monkey drops into the dunk tank.

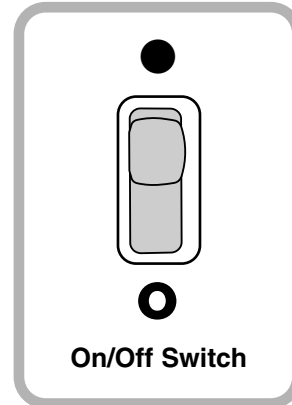

- Locate the On/Off switch on the back of the ramp.
- Slide the switch to the ● position to turn the toy on and to the ○ position to turn it off.

**Hint:** If your child is not actively playing with this toy, it turns off automatically (sleep mode).

- When your child is finished playing with this toy, slide the on/off switch to the off position ○.