

SESAME STREET

Hokey Pokey Elmo

 
INSTRUCTION SHEET

Please keep these instructions for future reference as they contain important information.



HOW TO PLAY

Please remove and discard the "Try Me" pull-tab from the bottom of Elmo's **LEFT** foot.

- Be sure the **ON/OFF** switch is in the **ON** position. The **ON/OFF** switch is located on the bottom of Elmo's **LEFT** foot.
- Press Elmo's **LEFT** hand and watch him do the **HOKEY POKEY!**

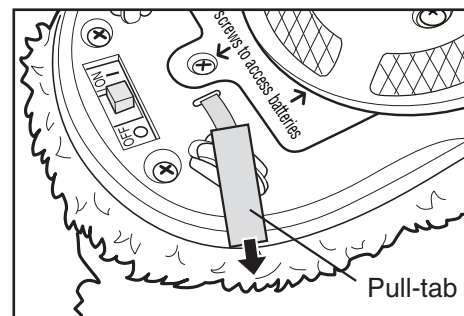

BATTERY INSTALLATION

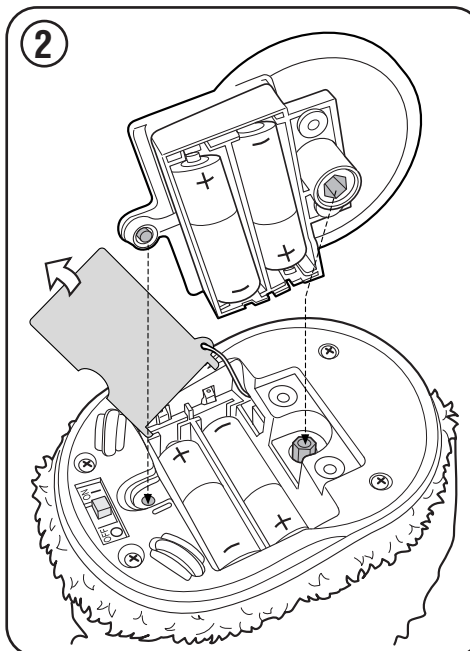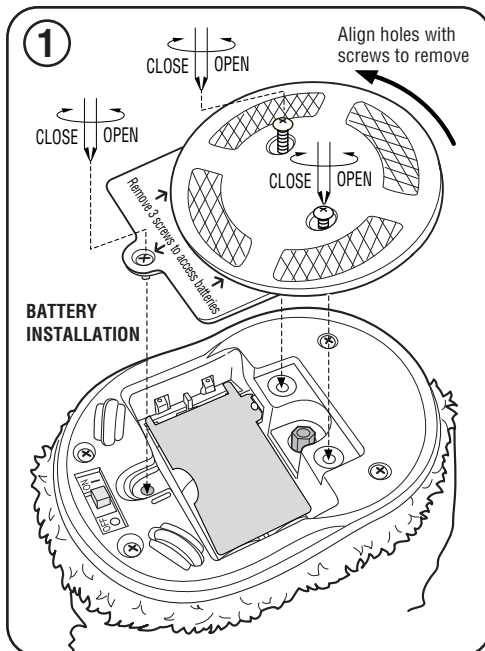  

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use.

Always remove exhausted batteries from the toy (product).
Dispose of batteries safely. Do not dispose of batteries in a fire.
The batteries may explode or leak.

©2002 Sesame Workshop. "Sesame Street," "Sesame Workshop" and their logos are trademarks of Sesame Workshop. All rights reserved. Watch Sesame Street on PBS and 123 Sesame on Noggin. Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A.

PRINTED IN CHINA.

Manufactured for Fisher-Price. ©2002 Mattel, Inc. All Rights Reserved. Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc. Packaging and address should be retained for future reference. Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-665-6288.

 
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.
Helpline 01628500303.

- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

BATTERY REPLACEMENT:

- Batteries included are for demonstration purposes only.
- If sounds play slowly or distort or the toy begins to operate slowly, replace the batteries as shown.
- Requires (4) "AA" (LR6) Batteries.
- For longer life use only alkaline batteries.

- The battery compartment is located on the bottom of Elmo's **LEFT** foot.
- Turn the rotating disc counterclockwise until the two screw holes line up and remove the two screws.
- Remove the third battery compartment screw, located above the rotating disc.
- **NOTE: DO NOT REMOVE THE OTHER SCREWS FOUND ON ELMO'S FOOT.**
- Lift the rotating mechanism away from Elmo's foot.
- Remove and replace the two batteries found in the rotating mechanism.
- Also remove and replace the other two batteries found in Elmo's foot below the tethered battery partition.
- Once the batteries are replaced, place the rotating mechanism back into Elmo's foot as shown in the illustration.
- Turn the rotating disc counterclockwise until the two screw holes line up and replace the screws.
- Replace the third battery compartment screw.

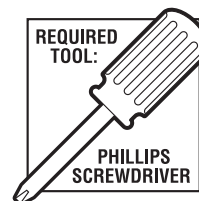

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.
Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre,
Harbour City, Tsimshatsui, HK, China.
Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5,
13th Floor, Menara Lien Hoe,
Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.
Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.

Questions or Comments?
1-888-892-6123

Fisher-Price

ITEM NO. B6678

B6678-0920

Item No : B6678-G1
Version : English
Size : 8.5 x 11"
Paper : Woodfree paper 80 gsm
Color : Black
Date : May,06 2003