



Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three "AA" (LR6) **alkaline** batteries (not included).

Adult assembly is required.

Tool required for assembly:  
Phillips screwdriver (not included).



 


[www.fisher-price.com](http://www.fisher-price.com)

# Animal Sounds Farm™

# Parts

## CAUTION

This product contains small parts in its unassembled state.  
Adult assembly is required.

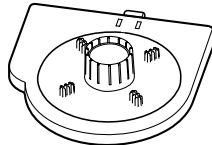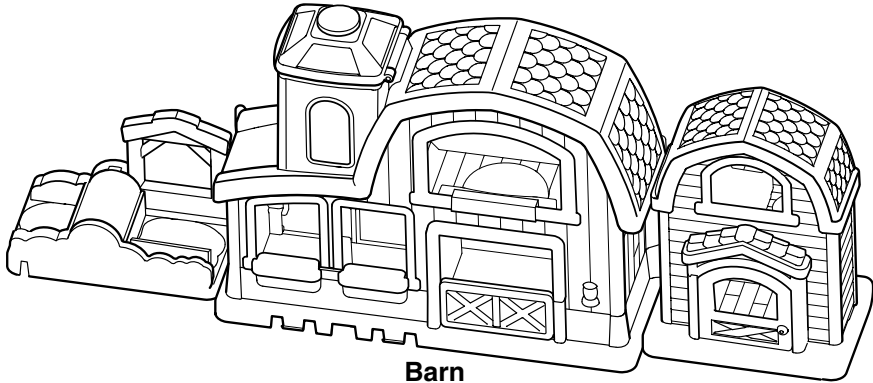


### Parts Not Shown:

- Farmer Figure
- 5 Animal Figures
- Food Cart
- Label Sheet




#6 x  $\frac{3}{8}$ " Washer Screw - 2  
**Shown Actual Size**
 
## Battery Installation



SHOWN ACTUAL SIZE

### Battery Compartment Door

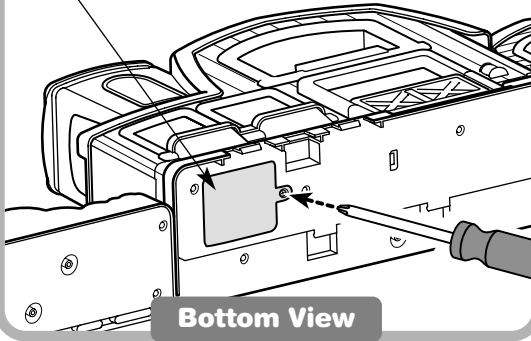

Bottom View


- Locate the battery compartment on the bottom of the toy.
  - Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
  - Insert three "AA" (LR6) **alkaline** batteries.
- Hint:** We recommend using **alkaline** batteries for longer battery life.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
  - When sounds from this toy become faint or stop, it's time for an adult to change the batteries.

## Battery Safety Information


Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Assembly

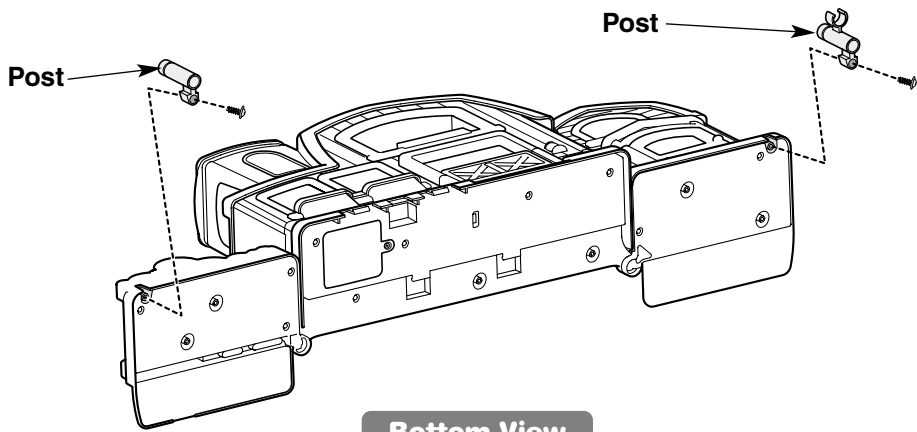


- Position the barn so the bottom is facing you.
- Fit a fence post over a matching peg on the bottom of the barn as shown.
- Insert a screw through the post and into the peg. Tighten the screw with a Phillips screwdriver. Do not over-tighten.
- Repeat this procedure to attach the other fence post.

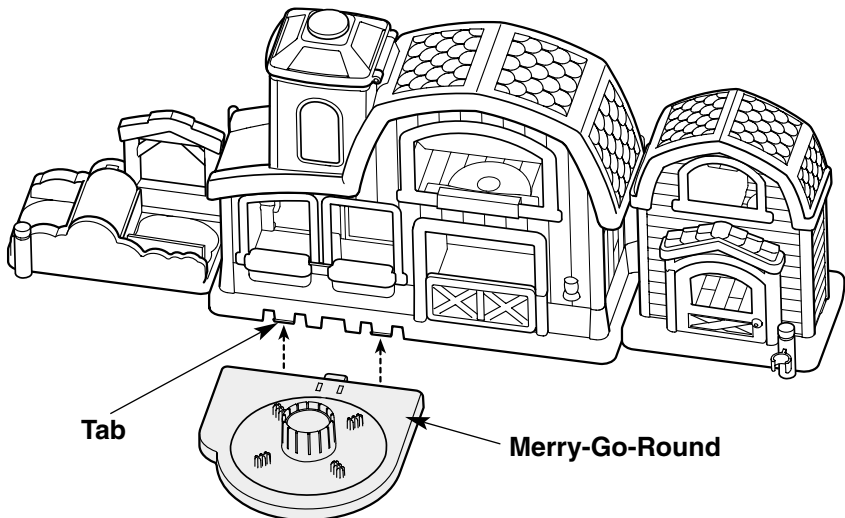


- Align the tabs on the edge of the barn with the slots in the merry-go-round.
- Fit the tabs into the slots and press firmly on the barn to **“snap”** the merry-go-round in place.

# Label Decoration - Front View

- Apply the labels as shown in the illustration.
- For best results, wash your hands before applying the labels and make sure the areas to which the labels will be applied are clean and dry. Avoid repositioning a label once it has been applied.

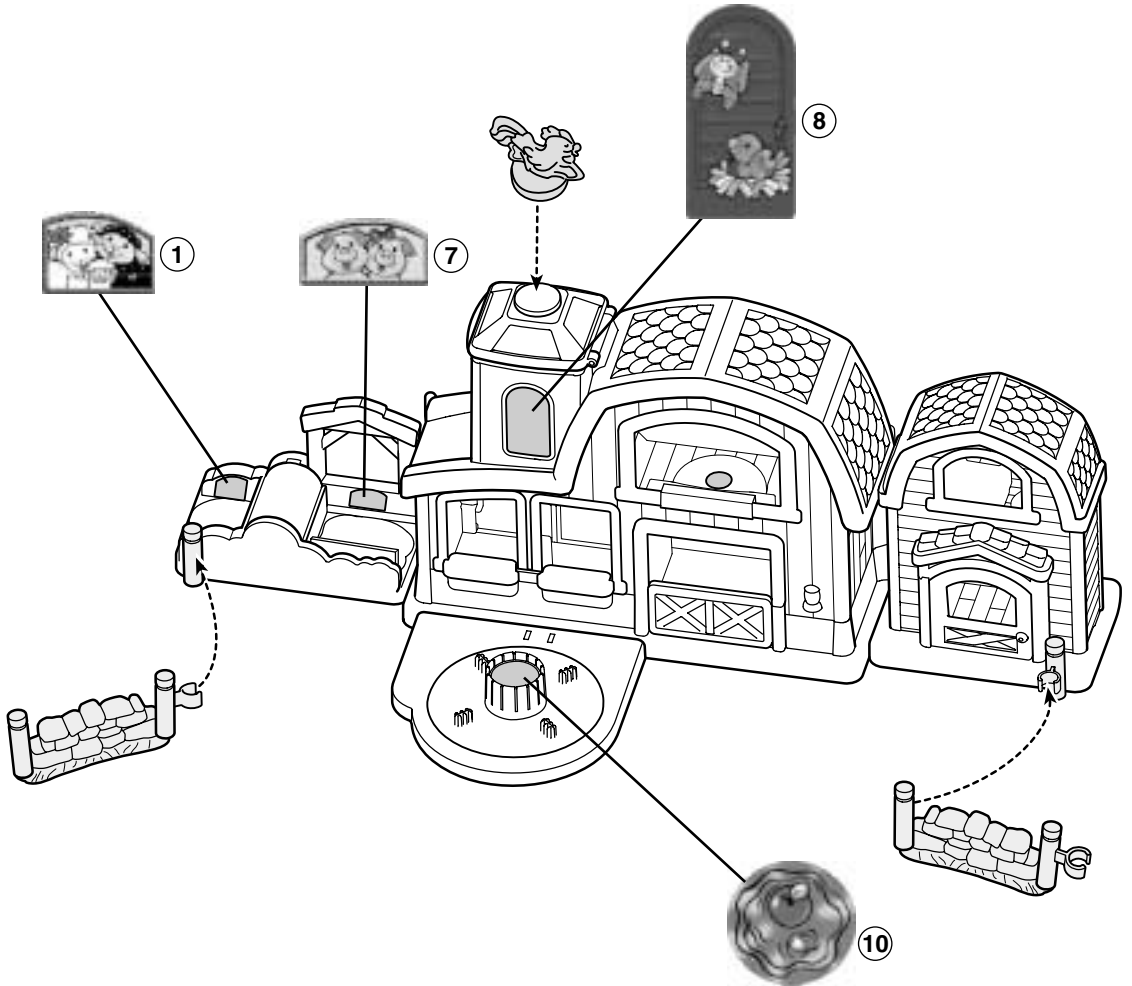


# Label Decoration - Inside View

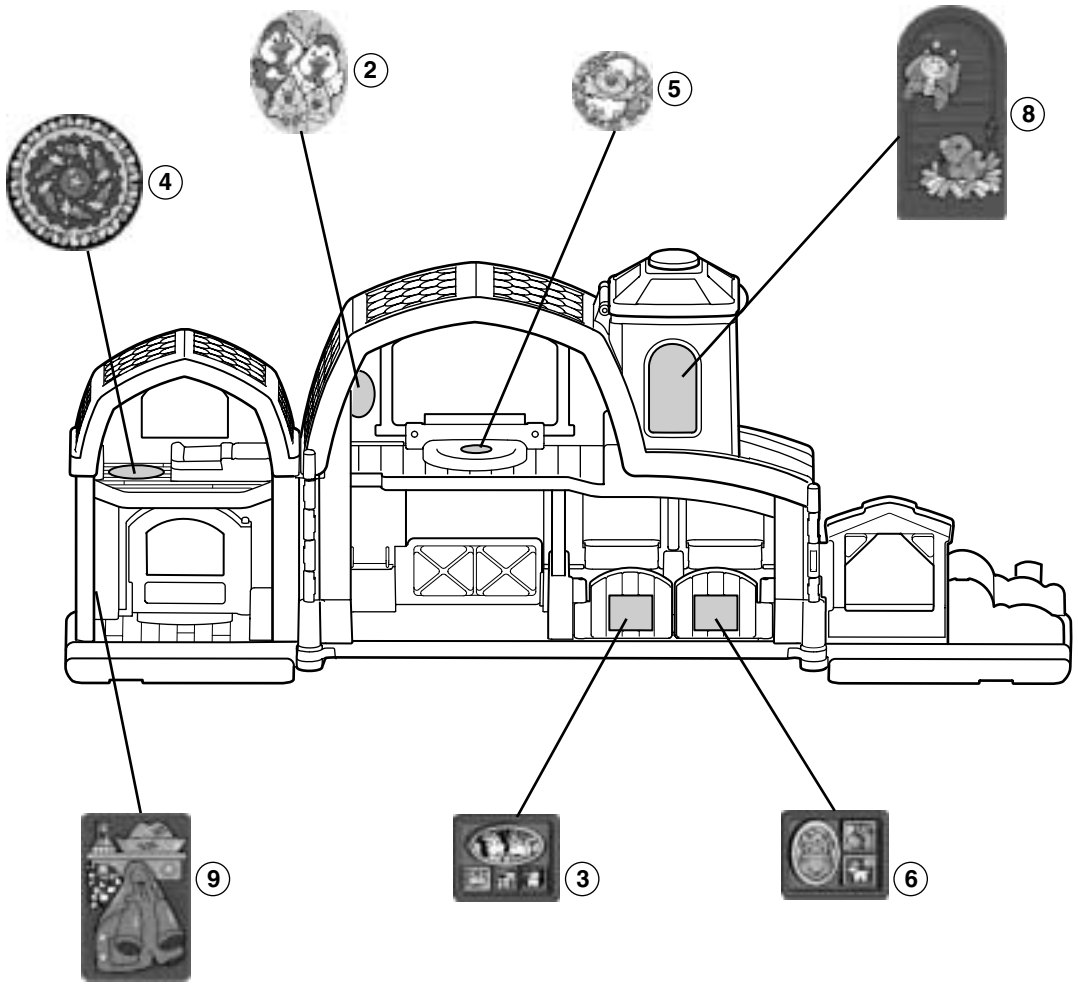

# Fun on the Farm!

*There are fun animal sounds and activities all around the farm!*

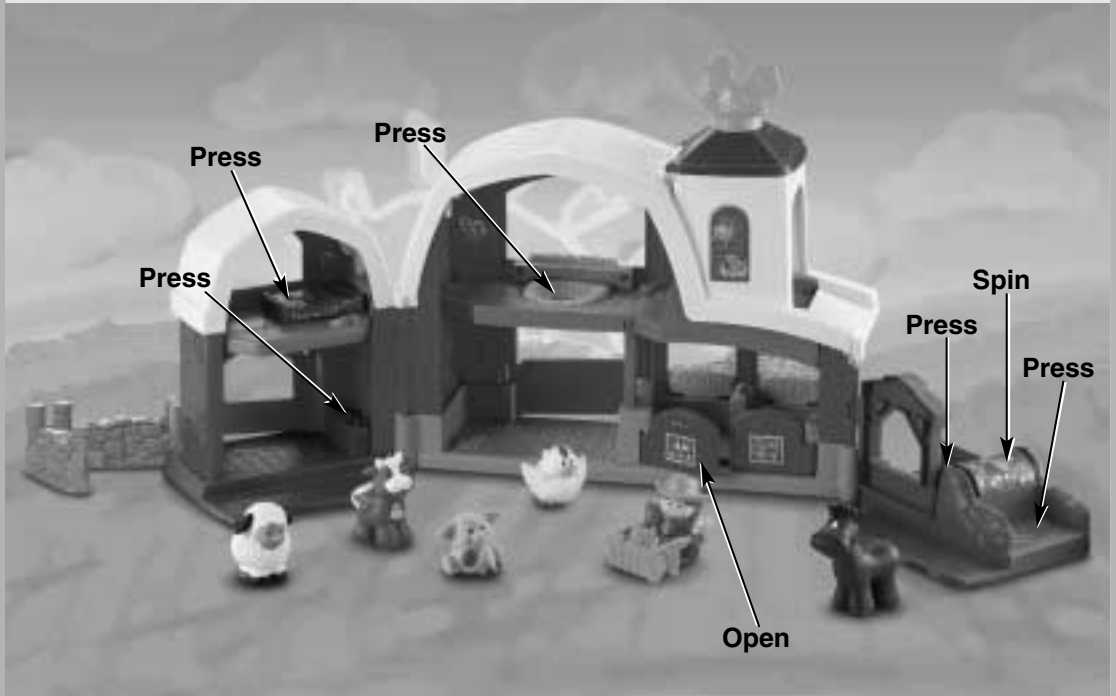

Slide the On/Off switch to the ● position to turn the toy on and to the ○ position to turn it off.



**Spin merry-go-round to hear musical tune!**



**Take a shortcut down through the silo!**



**Spin food bin to give animals “food” and “water”!**

## Care

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

### For countries outside the United States:

**CANADA Questions? 1-800-567-7724.** Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**GREAT BRITAIN** [Mattel UK Ltd. Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.](#)

**AUSTRALIA** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.