
 


INSTRUCTIONS Please keep these instructions for future Please keep these instructions for future reference as they contain important information.

 
CONTENTS



 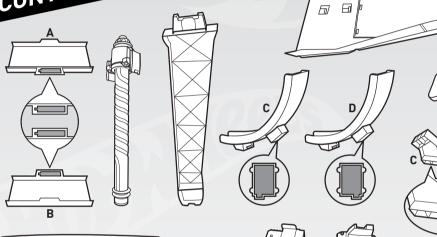













©2013 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK,


China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Malaysia. Tel:03-78803817, Fax:03-78803867.


service.mattel.com
HOTWHEELS.com

ASSEMBLY


Refer to letter on toy parts and contents page to help with assembly.

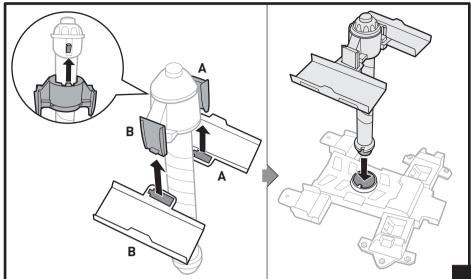


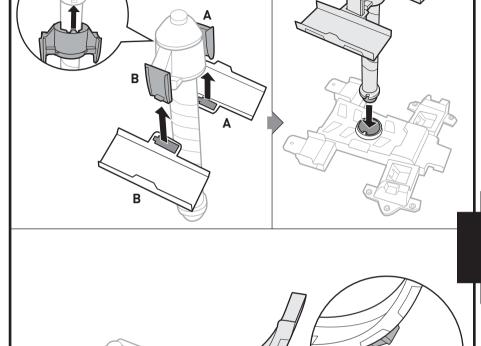


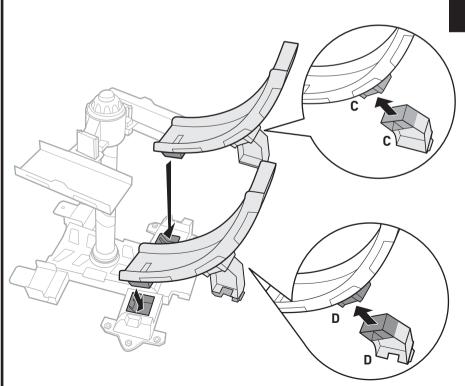


2

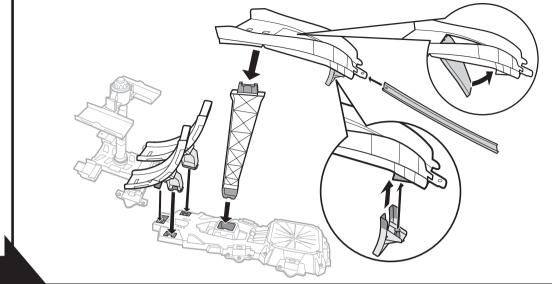


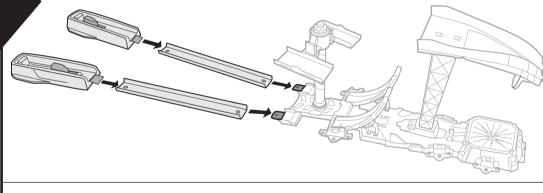

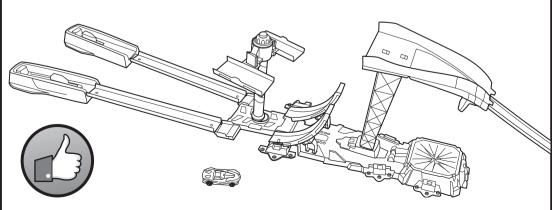


2 APPLY LABELS

 

 


3 TO PLAY


The set works with one car, but it's more fun to challenge a friend. So load 2 cars (additional vehicle not included) and get ready to race!

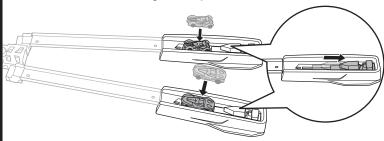


Try different launch settings to find the best performance.

2. Press button to release the fair-start ramp.

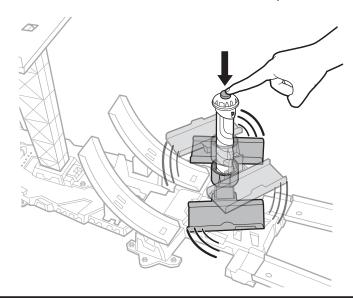

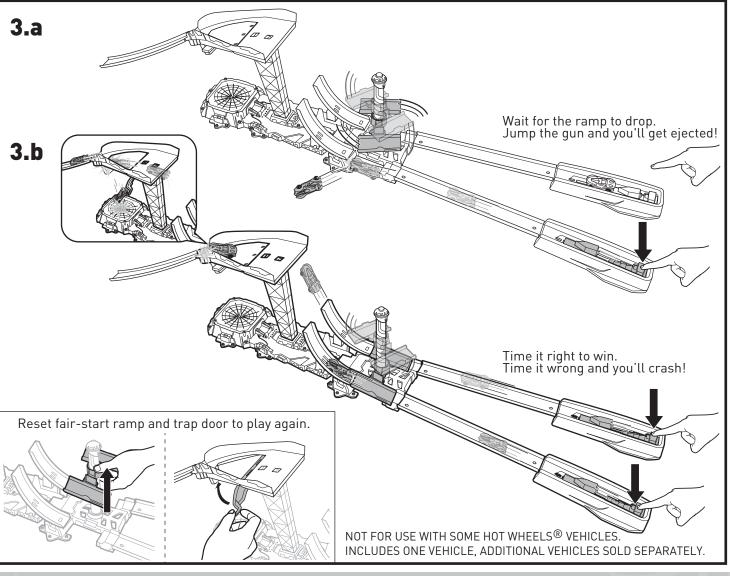


MORE WAYS TO PLAY

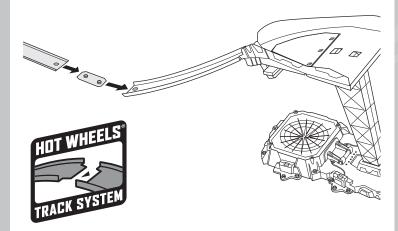


CONNECT TO HOT WHEELS® SETS (SOLD SEPARATELY).

TROUBLESHOOTING

 - Q. Why does the fair-start ramp land on the track facing the wrong way?
- A. To stop the ramp landing the wrong way, always attach the ramp to the top of the pole and press the button to release it.
- Q. My cars keep crashing on the tracks for no reason. What is the problem?
- A. Clear all obstructions on the tracks. Adjust track side walls at connection points.



- Q. My car keeps slowing down by itself on the tracks.
- A. Lint may collect around your car's axles. This may cause the car to run slowly. Use tweezers or a toothpick to remove lint.

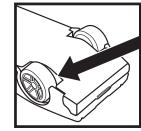

5