



4+




CCW77-0970
1100308782-DOM G1

INSTRUCTIONS:

MISSION™ ELITE RESCUE™ STRIKE HAWK™

CONTENTS

 NOT A FLYING TOY.

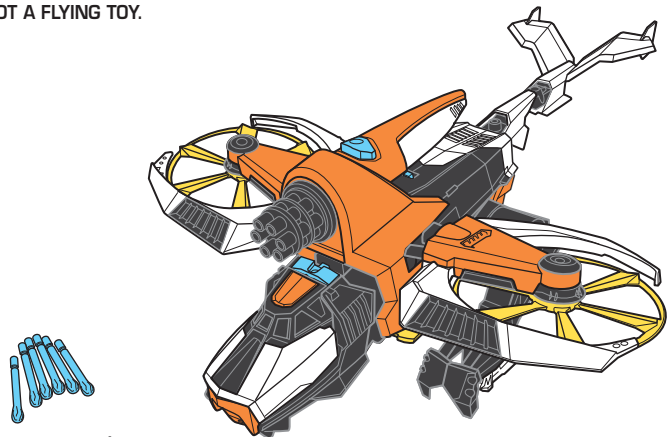

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

INCLUDES 3 AA ALKALINE BATTERIES.
DISPOSE OF BATTERIES SAFELY.

©2015 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

SERVICE.MATTEL.COM

1 BATTERY REPLACEMENT

- Batteries included are for demonstration purpose only.
- Replace batteries when propellers slow down or sounds distort.
- Push button with a pen (not included), then lift mid-section of chopper to separate parts. (see 1)
- Pull mid-section and propellers away from the body. (see 2)
- Flip mid-section over to access the battery compartment. Unscrew the battery cover with a Phillips head screwdriver (not included). Remove batteries and dispose of them safely.
- Install 3 new AA (LR6) alkaline batteries (not included) in the orientation (+/-) shown. Replace battery cover and tighten screw. For longer life, use alkaline batteries. (see 3)
- Fold propellers into the horizontal position. (see 4)
- Rotate and center the handle. (see 5)
- Slide mid-section and propellers back into the body. Make sure the moving joints are aligned correctly or else the parts will not connect. (see 6)
- Press the mid-section down to lock parts together. (see 7)
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries.

BATTERY SAFETY INFORMATION

 
In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Battery Performance Note:
For best performance use alkaline batteries. Battery life may vary depending on battery brand.




Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

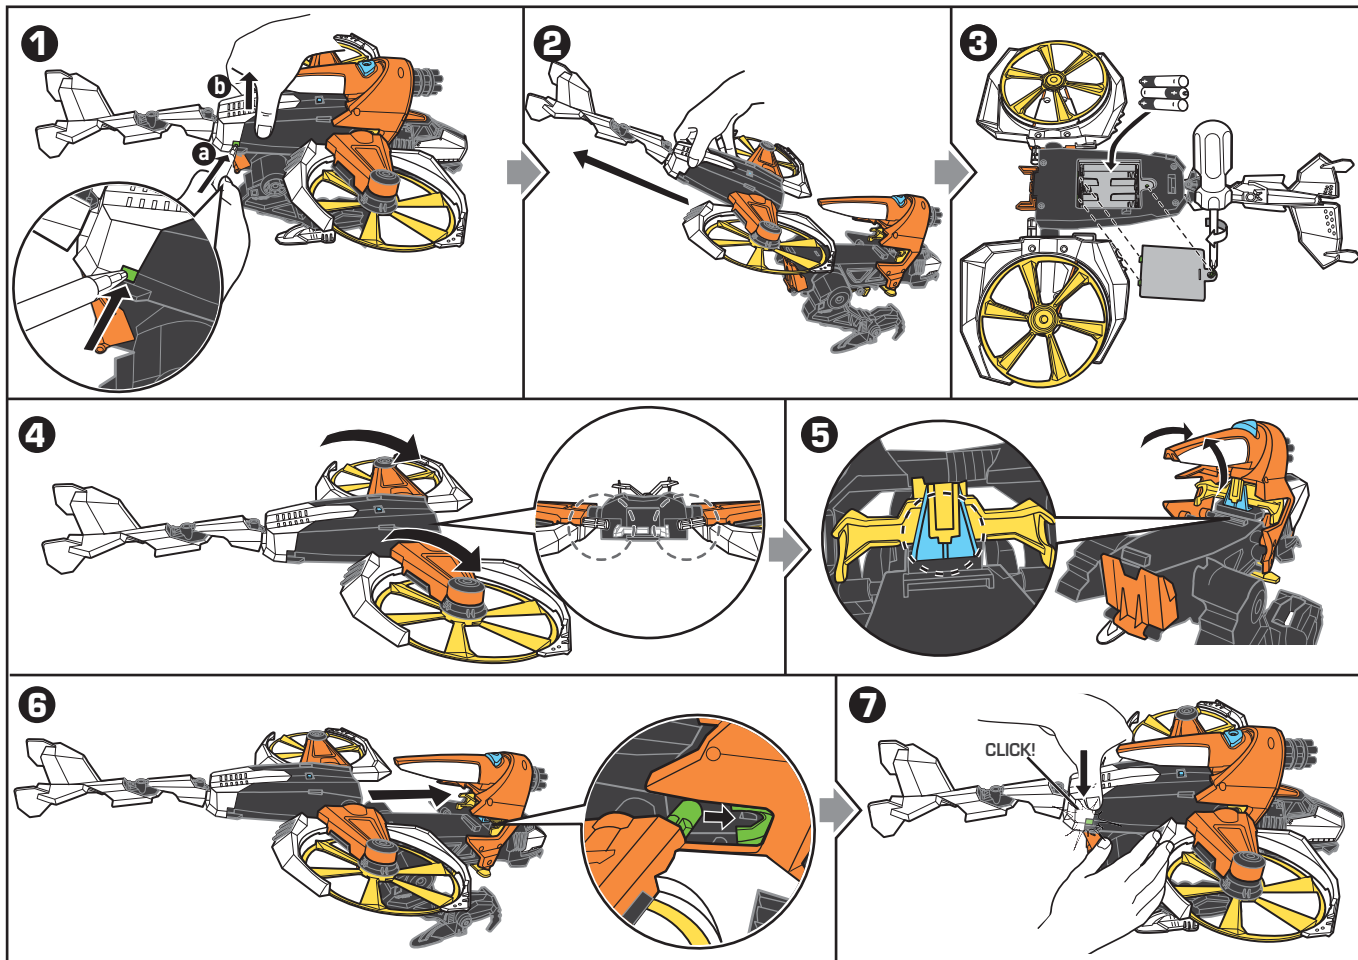


2 CHOPPER OPERATIONS

 
1. LOAD PROJECTILES

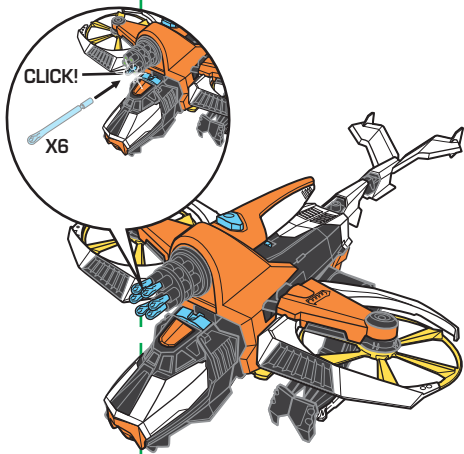

 
2. POWER ON AND HOLD THE HANDLE. TAKE OFF TO START PROPELLERS AND SOUND EFFECTS.

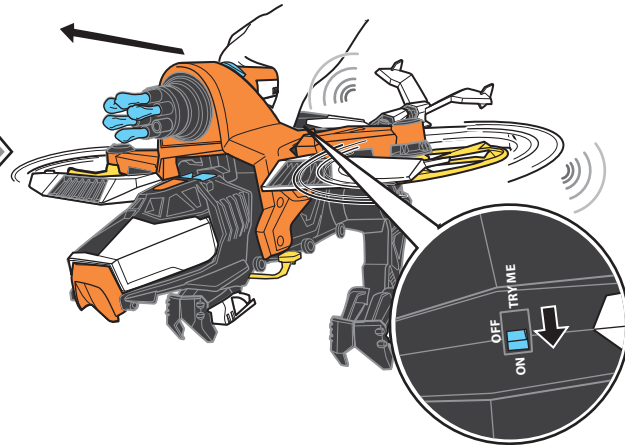

 
3. TURN HANDLE LEFT TO BANK LEFT.

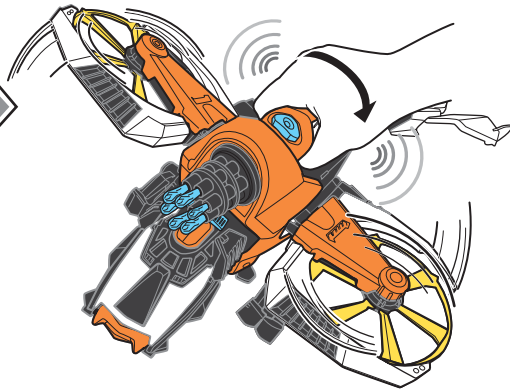

 4. TURN HANDLE RIGHT TO BANK RIGHT.

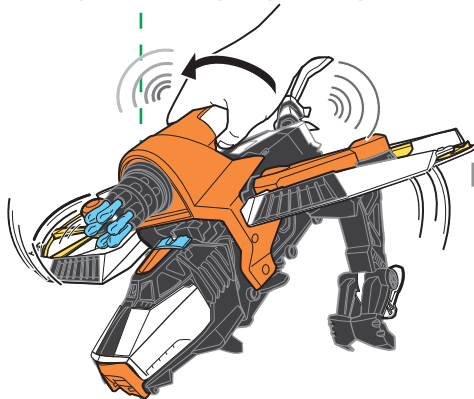


 5. PRESS BUTTON TO FIRE PROJECTILES.

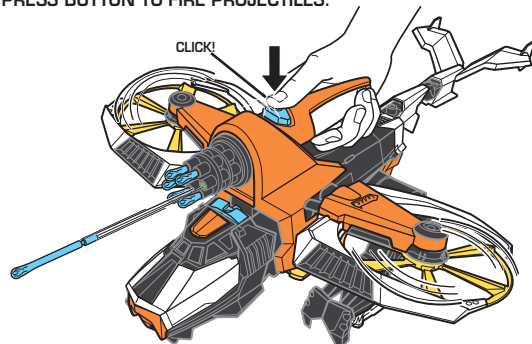


WARNING: DO NOT AIM AT EYES OR FACE.
ONLY USE PROJECTILES SUPPLIED WITH THIS TOY.
DO NOT FIRE AT POINT-BLANK RANGE.

 6. LAND AND RELEASE THE HANDLE. PROPELLERS AND SOUND EFFECTS WILL POWER OFF AUTOMATICALLY.

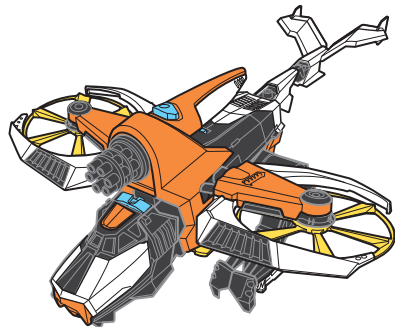


3 LOADING AND LAUNCHING VEHICLES

 
1. OPEN DOOR AND LOAD CAR.

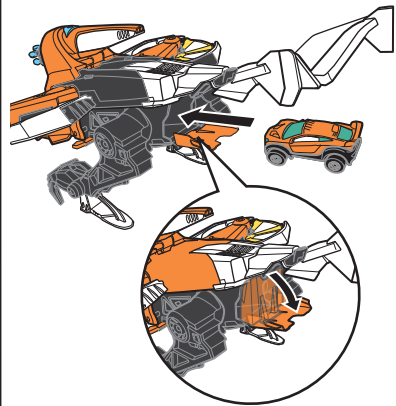

 
2. PUSH BUTTON TO MOVE CAR INTO THE COCKPIT.

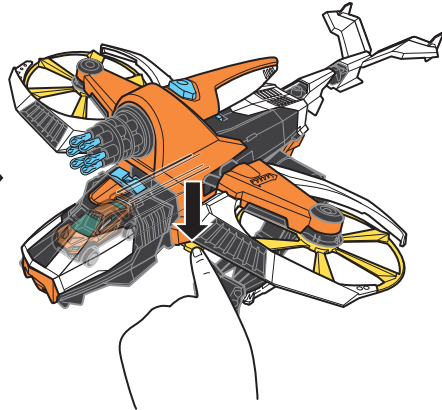

 
3. LOAD 2 MORE CARS AND CLOSE THE DOOR.

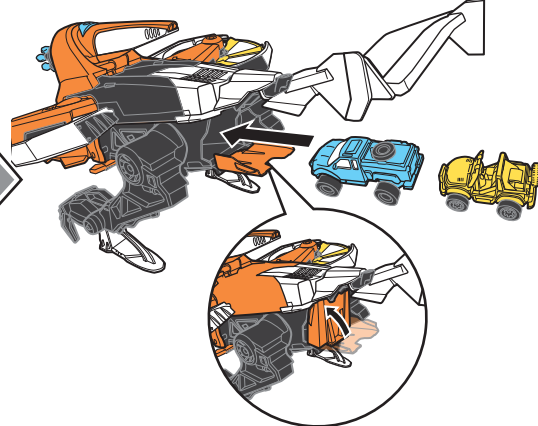

 
4. TILT CHOPPER FORWARD TO LAUNCH CAR.

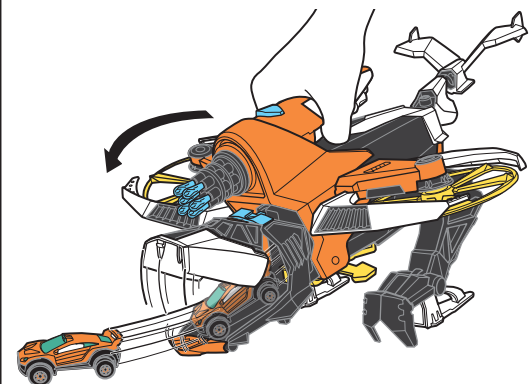

 5. PUSH BUTTON TO LAUNCH REMAINING CARS ONE AT A TIME.

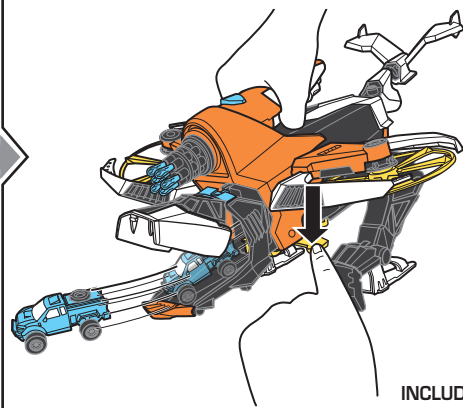

 
6. CLOSE THE COCKPIT.

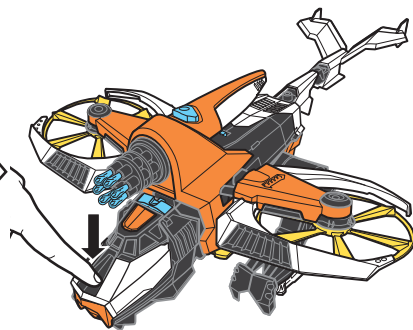


NOT FOR USE WITH SOME MATCHBOX® VEHICLES.
INCLUDES 1 VEHICLE. ADDITIONAL VEHICLES SOLD SEPARATELY.

4 GRAB & DEPLOY VEHICLES

 
1. ALIGN THE CLAW WITH THE CAR.

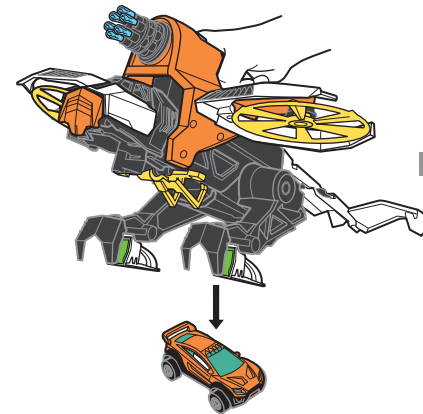

 
2. PUSH CHOPPER DOWN AND FORWARD TO GRAB CAR.

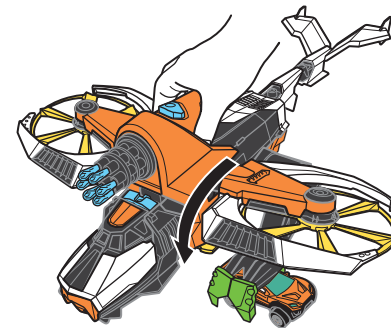

 
3. "FLY" THE CAR TO THE RESCUE.

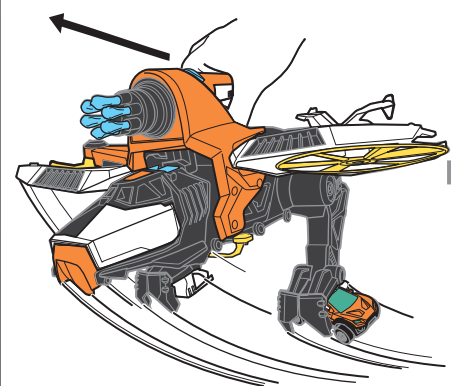

 
4. WITH BOTH CLAWS PRESSED AGAINST THE FLOOR, PULL CHOPPER BACK AND UP TO RELEASE THE CAR.

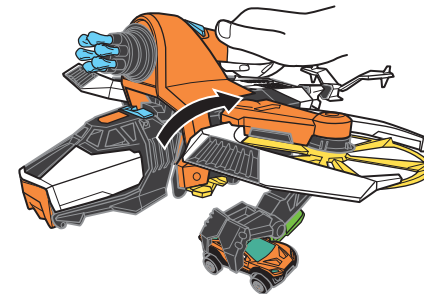

 - 1.** WORKS WITH ELITE RESCUE™ SKY SHIFTER™, SOLD SEPARATELY, SUBJECT TO AVAILABILITY.

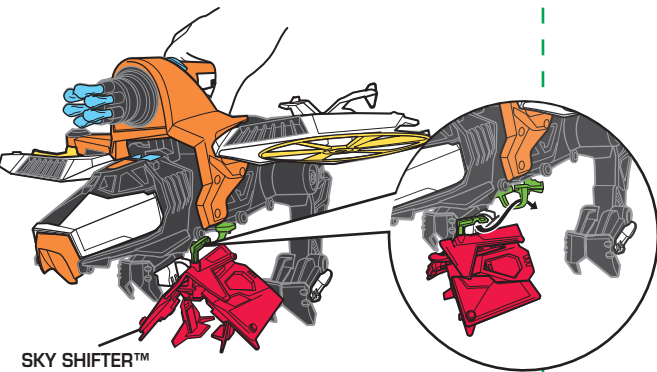


 - 2.** WORKS WITH ELITE RESCUE™ TURBO CANOE™, SOLD SEPARATELY, SUBJECT TO AVAILABILITY.

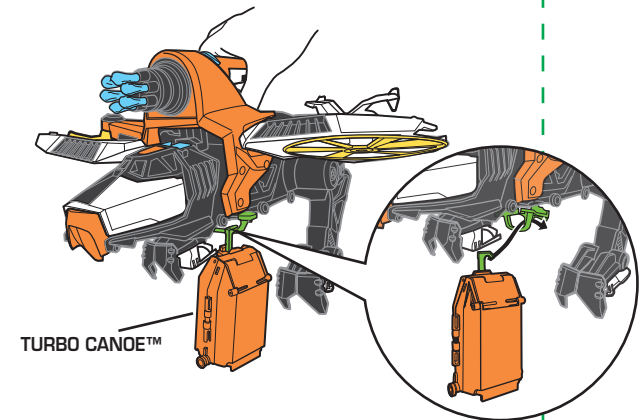


- 3.** WORKS WITH ELITE RESCUE™ RESCUE HEADQUARTERS™, SOLD SEPARATELY, SUBJECT TO AVAILABILITY.

 
- A.** ATTACH STRIKE HAWK™ TO CRANE AND LOAD CAR.

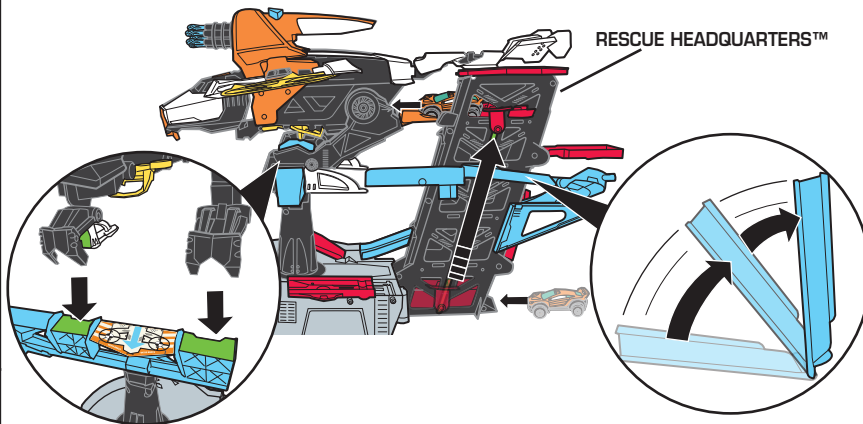

 - B.** ROTATE STRIKE HAWK™ TO FACE THE PLATFORM.

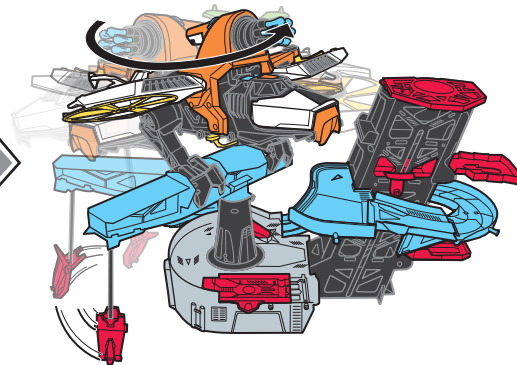

 - C.** MOVE CAR INTO COCKPIT, THEN LAUNCH ONTO PLATFORM.

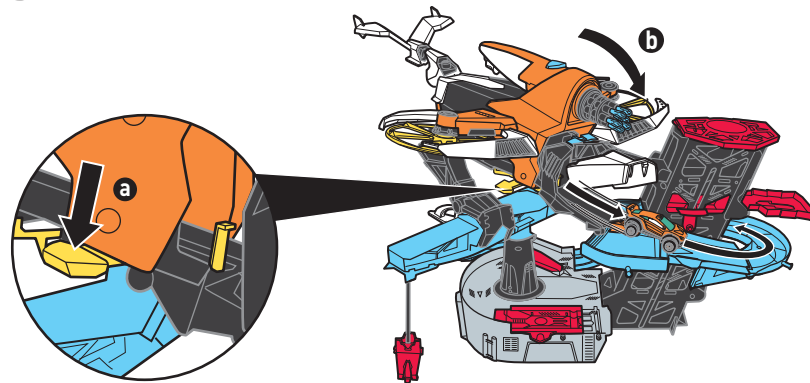

- D.** TILT CHOPPER FORWARD TO RELEASE CRANE, THEN "FLY" AWAY.

