

Thomas the Tank Engine & Friends™

CREATED BY BRITT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.

©2015 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends and Thomas & Friends

are trademarks of Gullane (Thomas) Limited. ©2015 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

CDB61-0970

1100319692_DOM

©2015 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.** Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500.



Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,

Mississauga, Ontario L5R 3W2; www.service.mattel.com Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

! WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.


Colors and decorations may vary.



BATTERY INFORMATION

BATTERY INSTALLATION

- Access the battery compartment by unscrewing and separating the top half of the
- engine from the bottom half of the engine. Install the batteries as indicated inside the
- battery compartment. Re-assemble the two halves of the engine, re-insert the screw and tighten.
- If the product begins to malfunction, check the battery installation. You may need to reset
- the electronics by removing the batteries and reinstalling them.
- If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries. Requires 2 "AAA" (LR03) batteries.

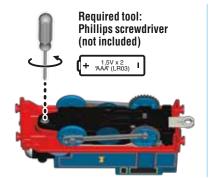





BATTERY SAFETY INFORMATION

- In exceptional circumstances batteries may leak fluids that can
- cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Non-rechargeable batteries are not to be recharged. • Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision. • Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries. • Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

WHAT'S INCLUDED

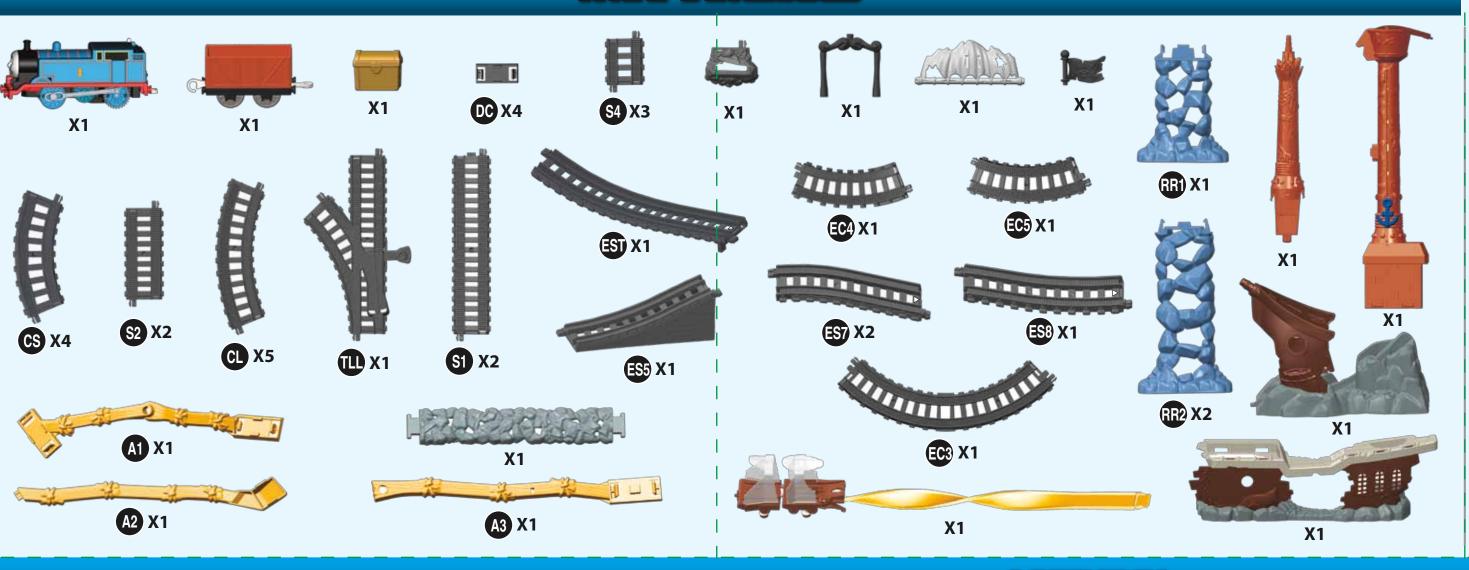

HELPFULHINTS

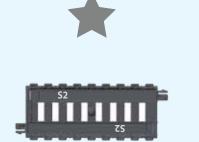

• **ONE-TIME SNAPS**: Assembly steps that are marked with a star are "one-time snaps". Once these parts are put together, they cannot be taken apart.

• Track marking codes are found on the bottom of tracks and risers.




- While connecting the tracks (ES8, EST, ES7) that are marked with a triangle , make sure the side with the triangle is aligned to the lower track.
- Some track sections (EST, EC4, EC5, ES7, ES8, EC3) are intentionally curved, they are not damaged.


Note: Some engines may not work on this track set.

ADULT ASSEMBLY REQUIRED. No tools needed.

ASSEMBLY

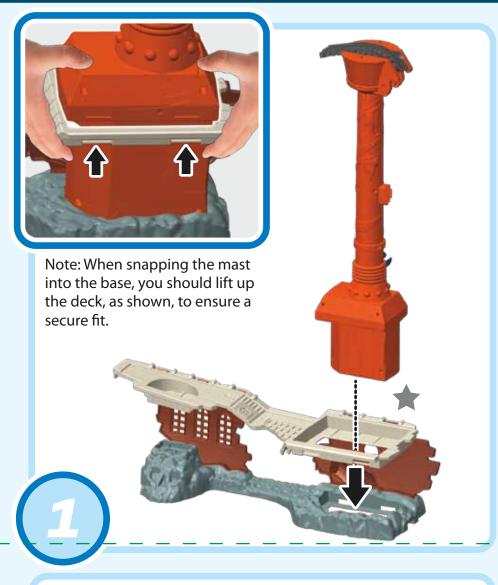




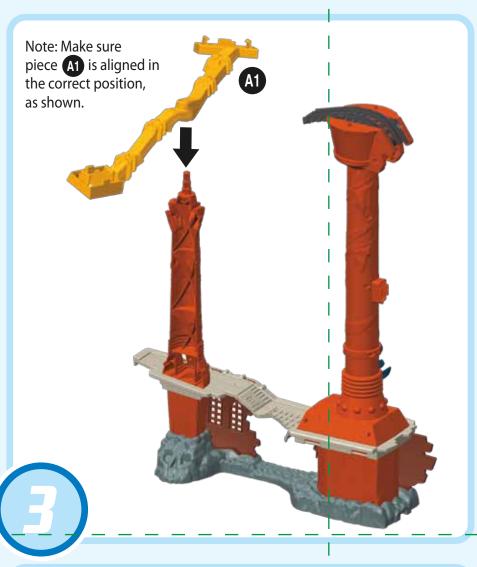





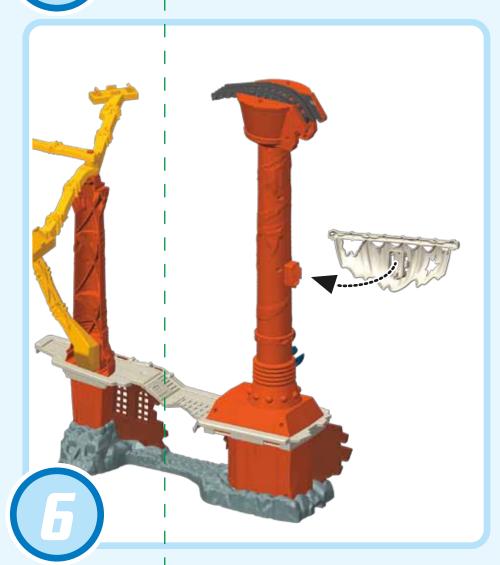







ASSEMBLY Note: Next: Ne

TRACK LAYOUT

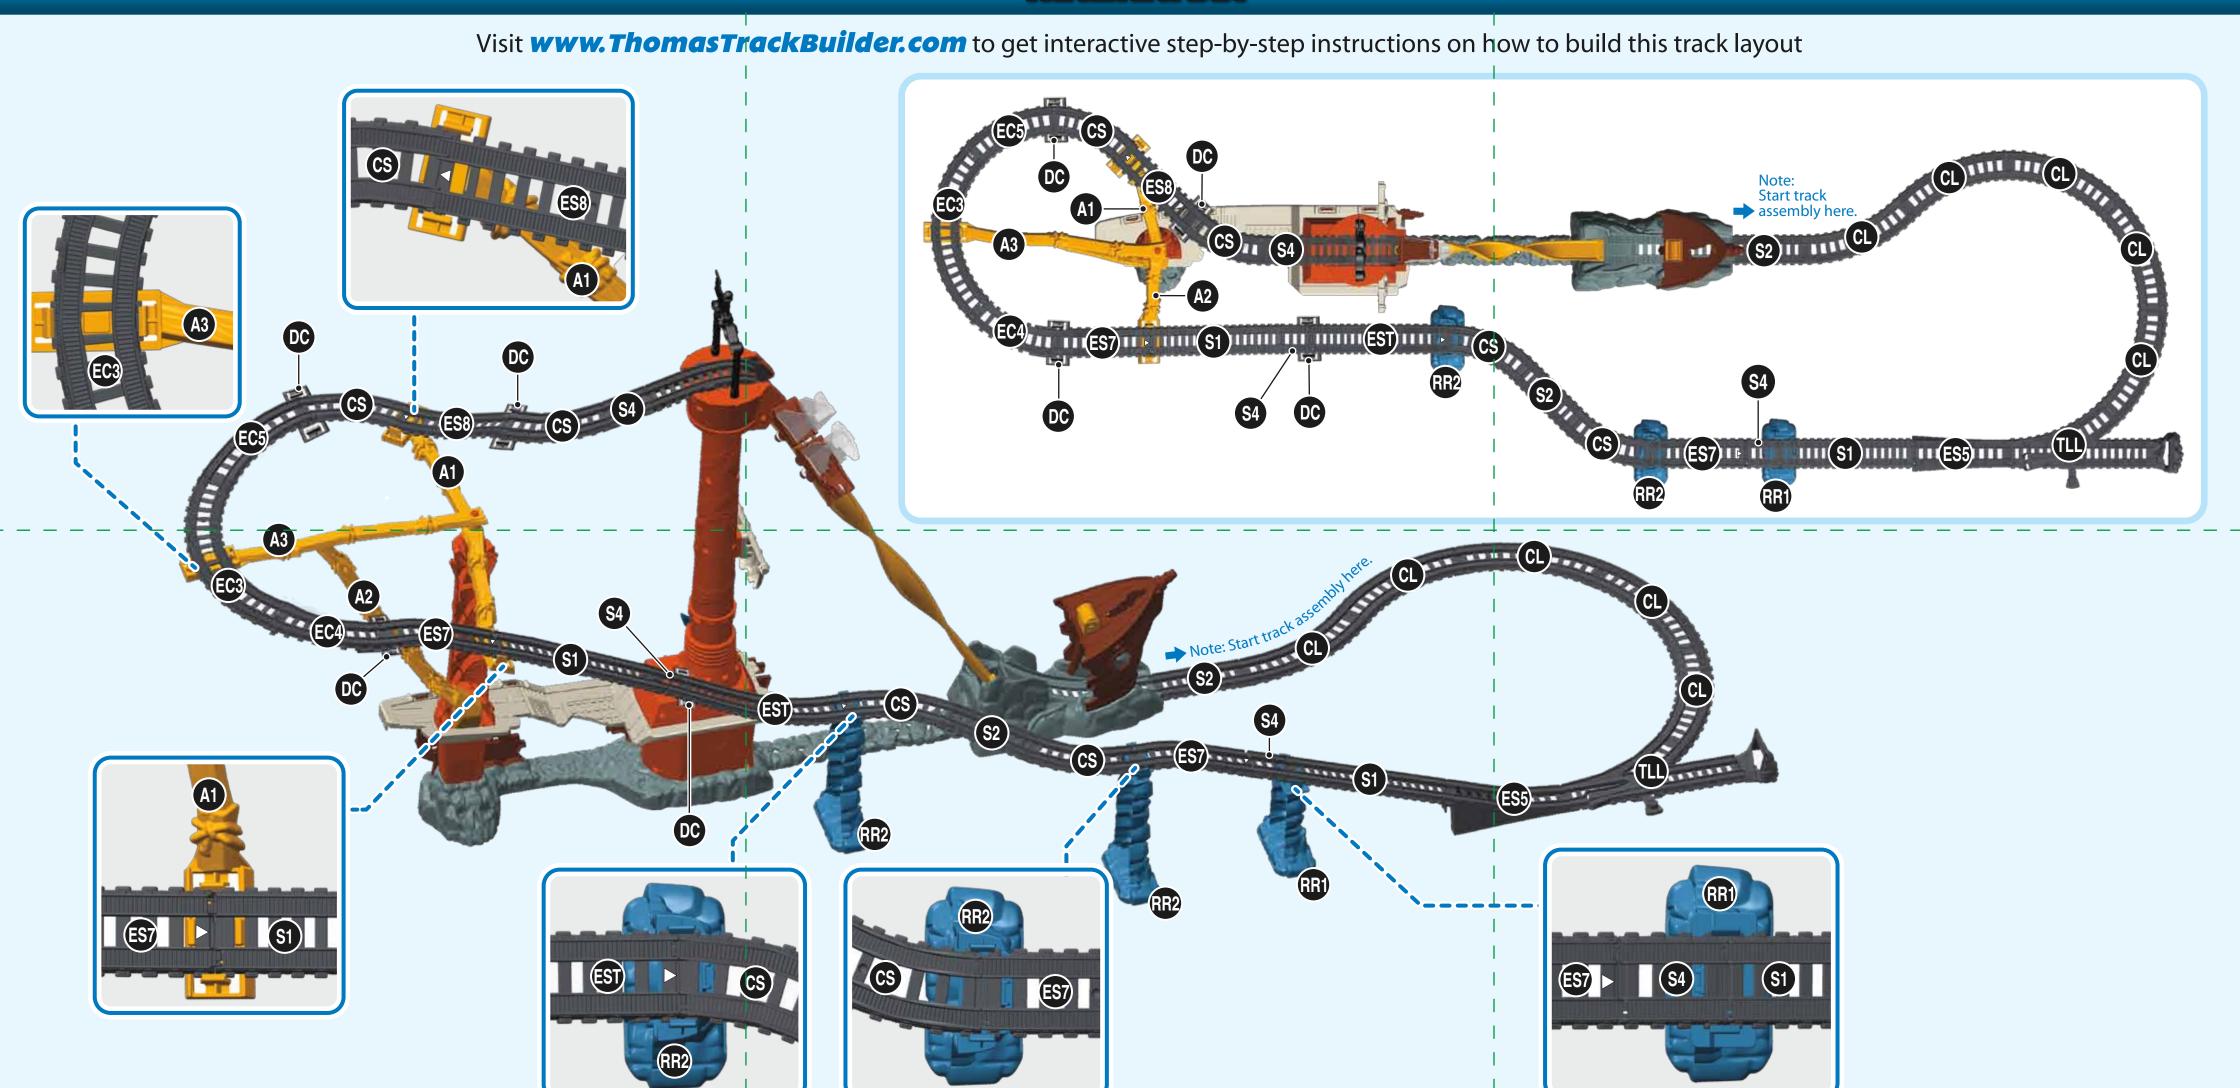


BEFORE YOU PLAY

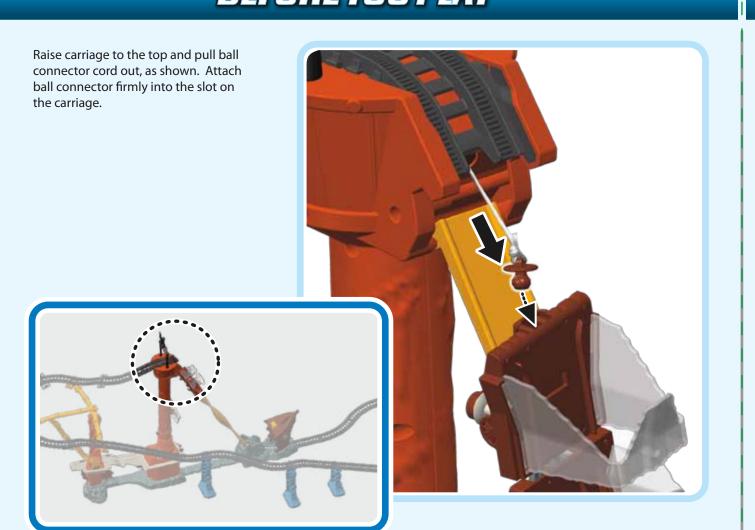

1 Place treasure chest on the deck.



HOW TO PLAY

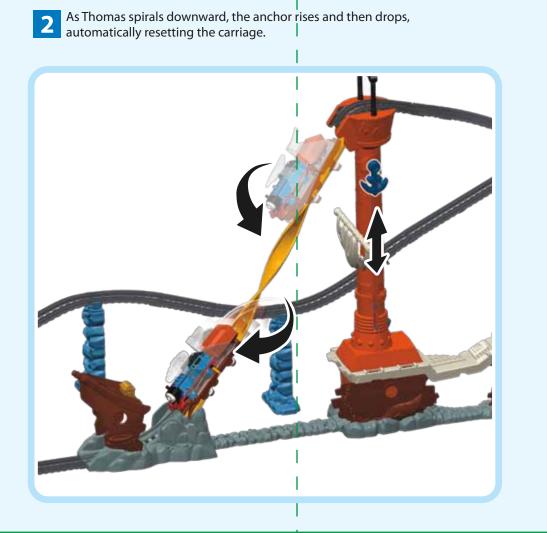

Thomas rushes into the ship's bow and triggers the treasure chest to fall down into his cargo car.

