


INSTRUCTIONS



RACE SPIN STORM™

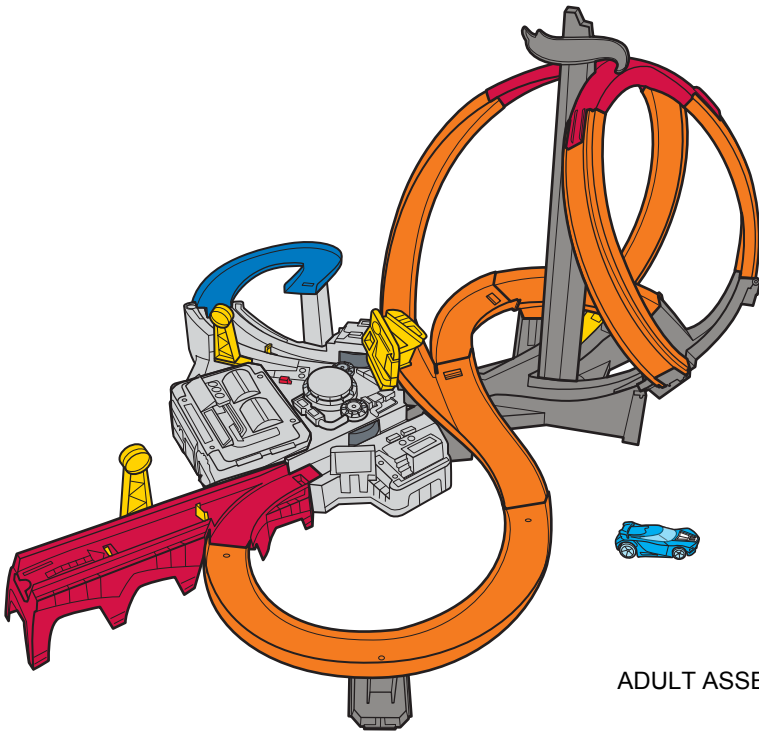

ADULT ASSEMBLY REQUIRED

5+

service.mattel.com
HOTWHEELS.COM

REQUIRES 4 "D" SIZE (LR20) ALKALINE BATTERIES (NOT INCLUDED).
DISPOSE OF BATTERIES SAFELY.




CDL45-0970_G2
1100294881_DOM


PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE
REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

CONTENTS

Refer to letter on toy parts and this page to help with assembly.

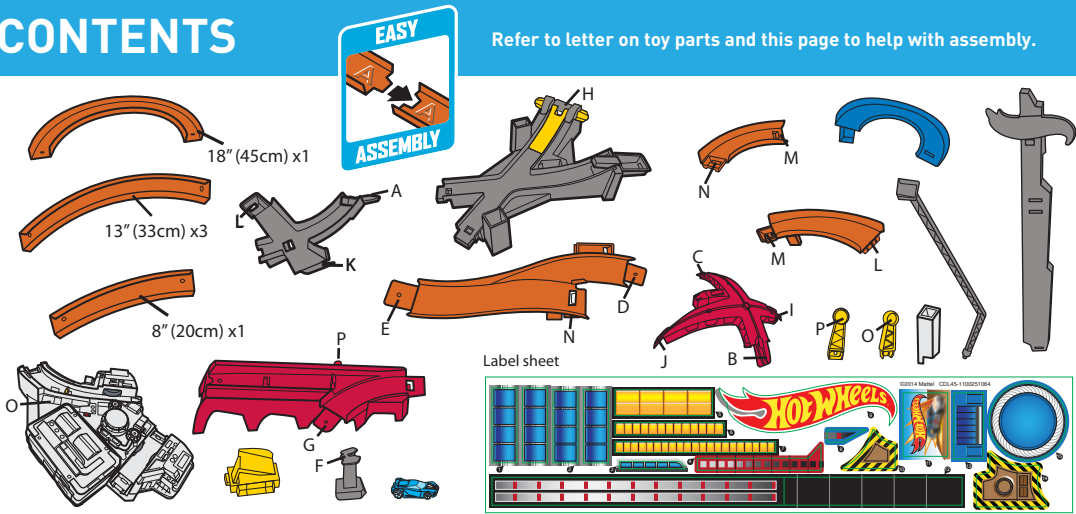


APPLY LABELS

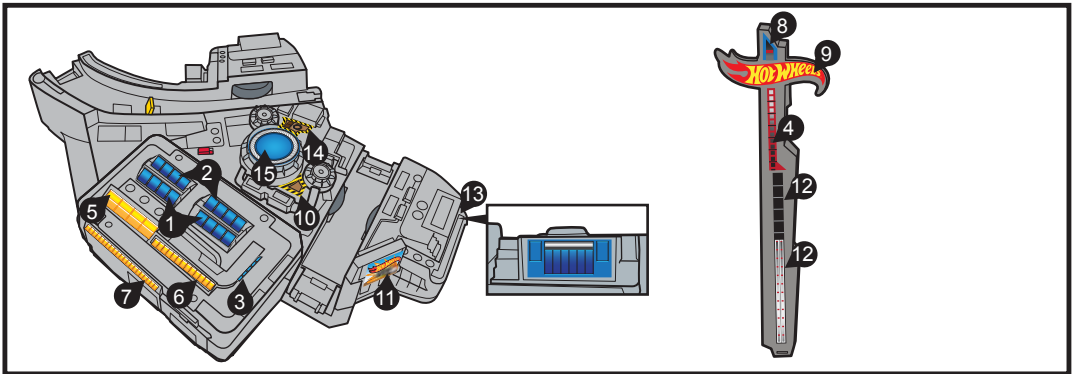









BATTERY INSTALLATION

- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 4 new "D" size (LR20) alkaline batteries (not included) in the orientation (+/-) shown.
- Replace battery cover and tighten screws.
- Replace batteries when boosters can no longer propel cars through the track set.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries.

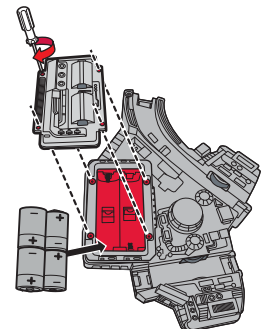


Battery Performance Note: For best performance use alkaline batteries. Battery life may vary depending on battery brand.


ASSEMBLY

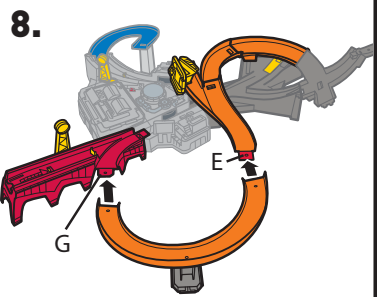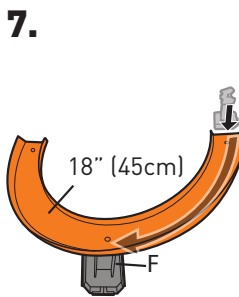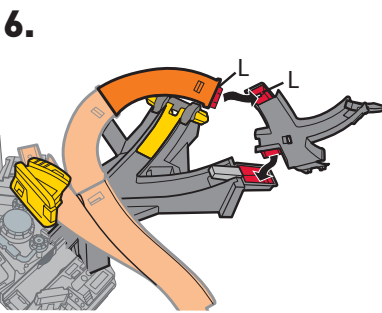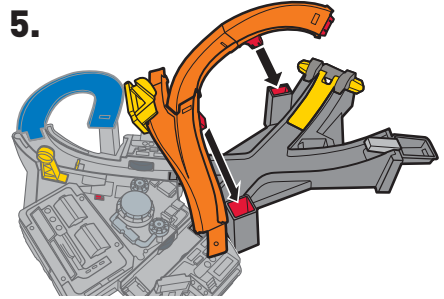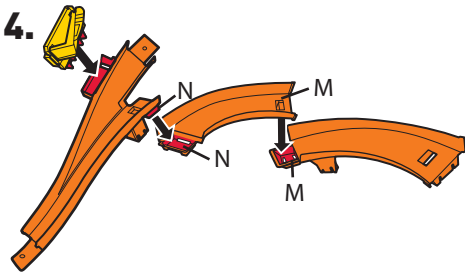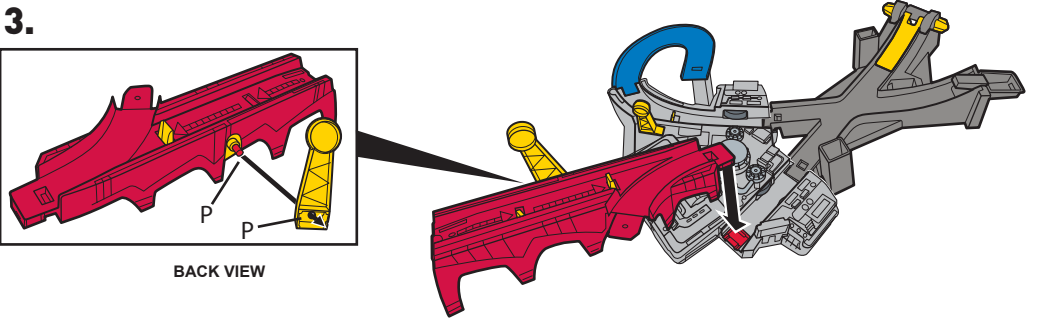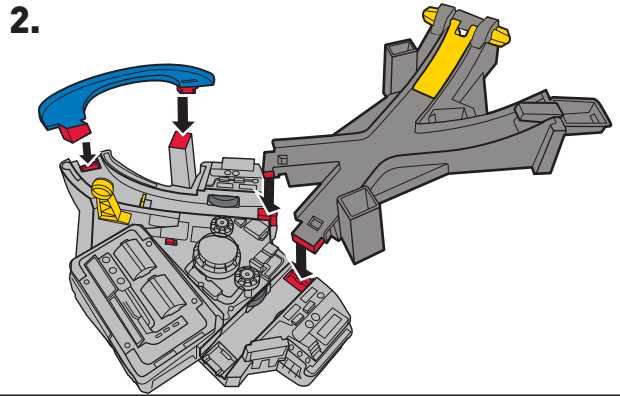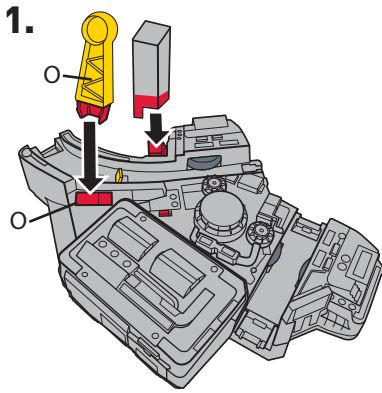


9.

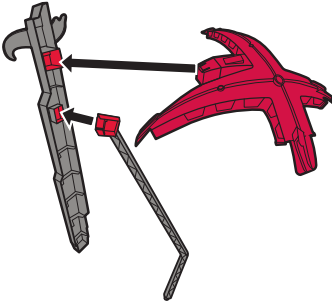


10.

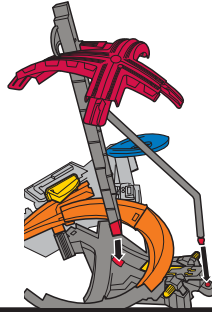

TRACK CONNECTION GUIDELINES FOR STEPS 11-14

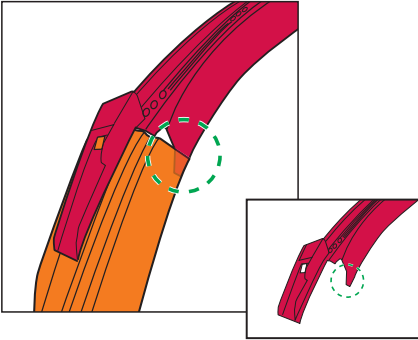


ORANGE TRACK ATTACHED OUTSIDE RED CROSS PIECE

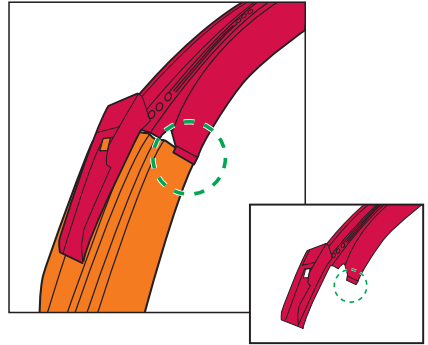


ORANGE TRACK ATTACHED INSIDE RED CROSS PIECE

For steps 11-14, make sure to attach track correctly as specified.


11.

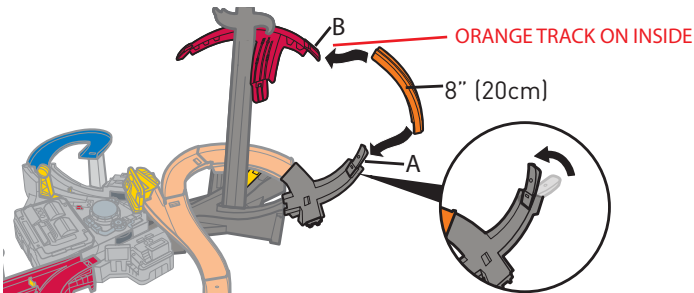


12.

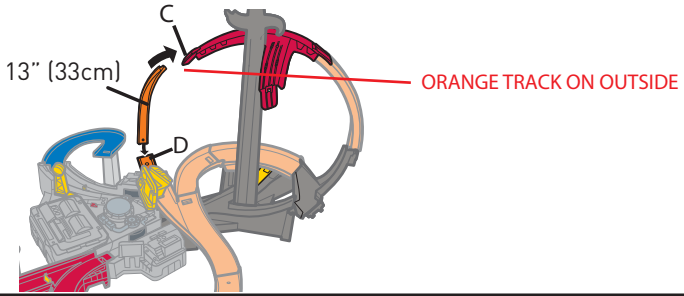


13.

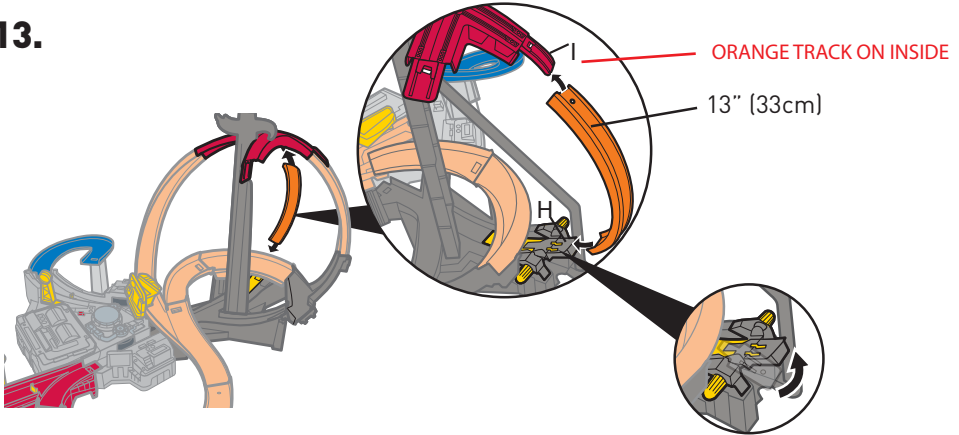

14.


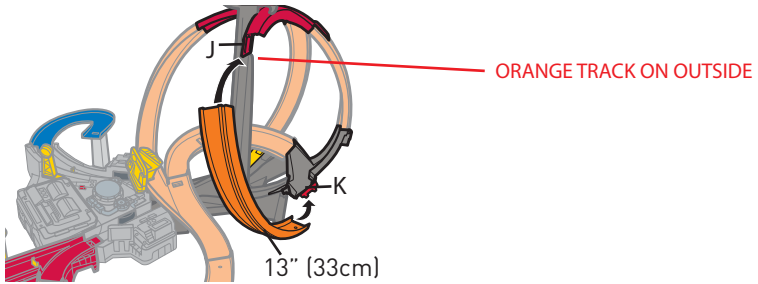


15.

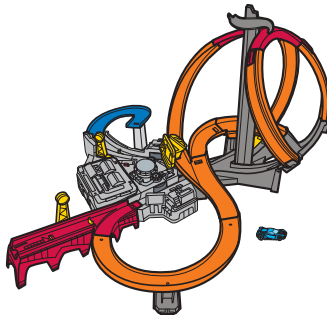


TO PLAY

1. Power ON and load cars.

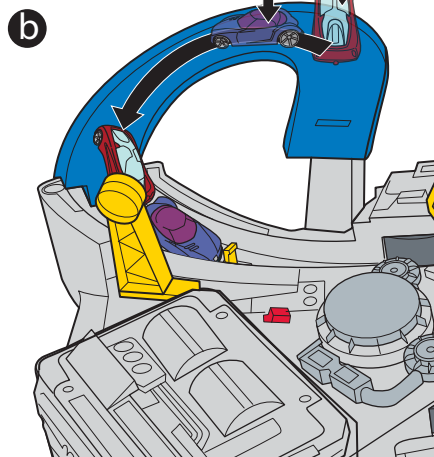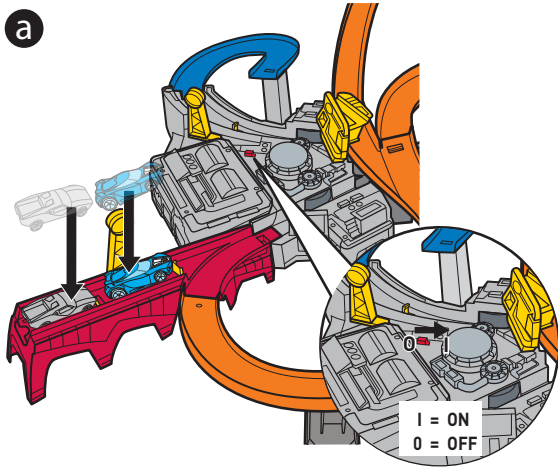

2. Launch cars in different directions.

Push and release the handles to launch cars one at a time from each lane.

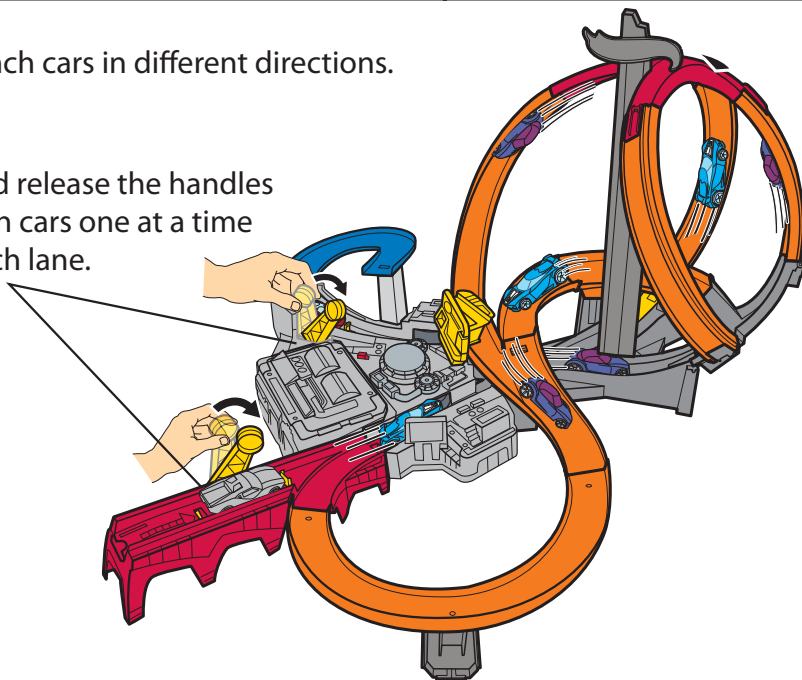


PERFORMANCE TIPS

Q. My car keeps crashing on the track for no reason.
What can I do?

A. Try the following:

- Make sure tracks are connected as described in Assembly steps 11 to 14.
- Clear all obstructions on the track. Adjust track side walls at each connection point.
- Check all connection points are completely attached.
- Use different cars.
- Try installing new batteries.

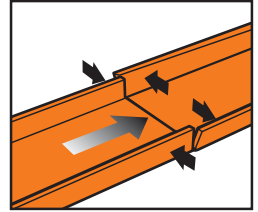

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- **Non-rechargeable batteries are not to be recharged.**
- **Rechargeable batteries are to be removed from the product before being charged.**
- **Rechargeable batteries are only to be charged under adult supervision.**
- **Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.**
- **Do not mix old and new batteries.**
- **Only batteries of the same or equivalent type as recommended are to be used.**
- **Batteries are to be inserted with the correct polarity.**
- **Exhausted batteries are to be removed from the product.**
- **The supply terminals are not to be short-circuited.**
- **Dispose of battery(ies) safely.**
- **Do not dispose of this product in a fire. The batteries inside may explode or leak.**



Protect the environment by not disposing of this product with household waste (2002/96/EC).
Check your local authority for recycling advice and facilities.

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697
(US and Canada only).

SERVICE.MATTEL.COM