

my PASSWORD™ HIDDEN SAFE

— o — instruction manual — o —

Keep these instructions for future reference
as they contain important information! ♥

contents

- 1 Safe
- 1 Ribbon Board
- 4 Shelves
- Sheet of Reusable
Theme Stickers



Please remove all components from the container and compare them to the contents list. If any items are missing, please call 1-800-524-8697. Outside the U.S., please consult the listing of your local Mattel offices at the end of these instructions.

my password™ hidden safe features

 
front

Combination Buttons

Removable
Ribbon Board

Sticker with
Your Combination


Pull tab

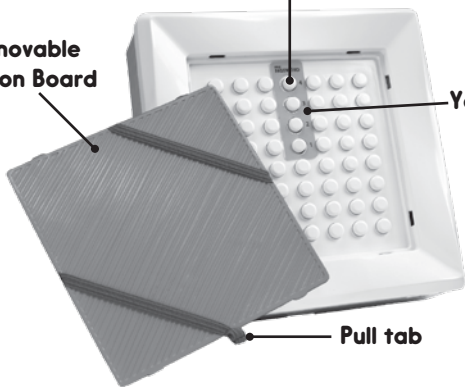

back

Reset Button

 Stand

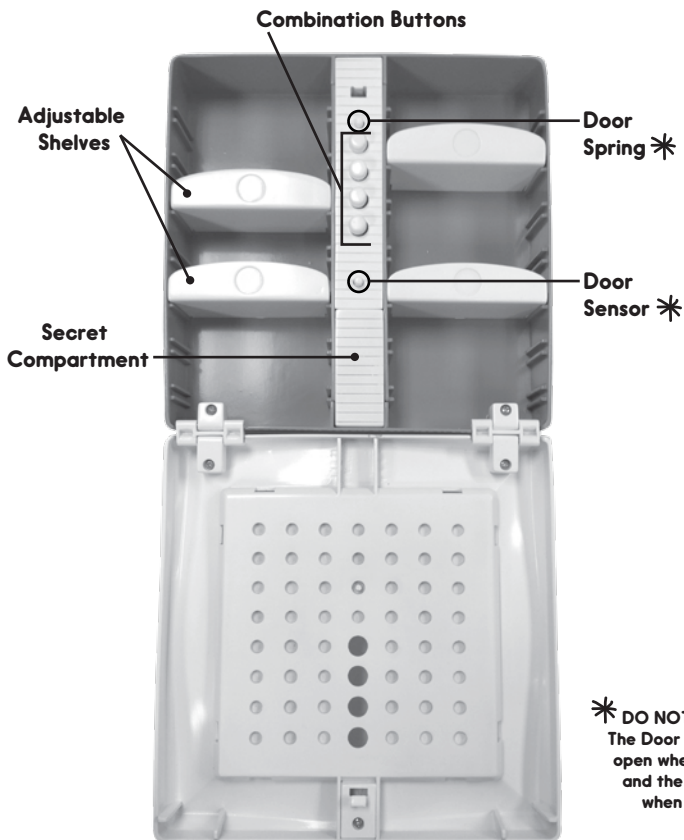

* DO NOT press these switches.
The Door Spring pushes the door
open when you unlock the safe,
and the Door Sensor detects
when the door is closed.

Depending on how private you want something to be, the My Password™ Hidden Safe provides different levels of security!

 
1 SECURITY LEVEL ONE – THE RIBBON BOARD

Show off **public** pictures on the front of the ribbon board and keep your **private** pictures safe in back.
Remove the ribbon board by pulling the pull tab.

2 SECURITY LEVEL TWO – COMBINATION LOCK

After you remove the ribbon board, you'll find a sticker with your combination printed on it. The number that appears beside each button tells you the order in which you need to press those buttons to open the safe – "1" is first, "2" is second, etc..

After you memorize your combination, remove the sticker so no one else can learn it!

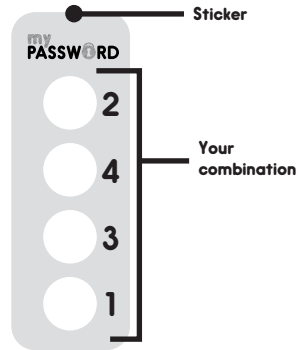

3 SECURITY LEVEL THREE – SECRET COMPARTMENT

Press the bottom of this panel to tip it open and use the space inside to stash jewelry or other little things you want to keep super safe!



Your backup combination is here!



FORGOT YOUR COMBINATION?

Press the Reset Button with the tip of a pen to open the safe.

IMPORTANT: If you can't remember your combination, you can find it on the back of the secret compartment panel.

personalizing your hidden safe

ADJUSTABLE SHELVES

Arrange them however you want by sliding them in and out of the slots.

REUSABLE THEME STICKERS

Use these stickers to help organize your stuff! If everything on one shelf is "lucky," you might want to label that shelf with the Four-Leaf Clover. Each sticker can mean whatever you want it to mean, or you can just use them as decorations!

 
When you want to change a sticker, peel it off the shelf and place it back on the sticker sheet.



displaying your hidden safe

USING THE STAND

Pull out the stand to display your hidden safe on a table or desk – it looks just like a picture frame!

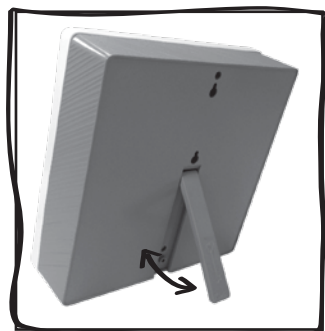

MOUNTING ON THE WALL

NOTE: Adult supervision required.

You can hang your hidden safe on a wall by using the holes on the back of the safe (mounting screws not included).

troubleshooting

If you are having difficulty opening your hidden safe with your combination, press the Reset Button with the tip of a pen to open the safe without a combination.

CGK88-XXXX



RADICALS



©2014 Mattel. All Rights Reserved.

Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697.

Mattel Canada Inc., Mississauga, Ontario L5R 3W2.

Mattel Europa, B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312

Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel:03-78803817, Fax:03-78803867