


4 ATTACHING TARGETS

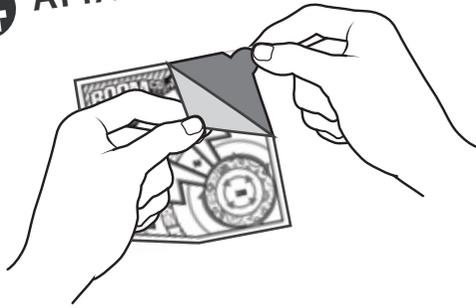


Peel backing off target before sticking it to surface.

✘ Do not stick target to walls or furniture as it may cause damage to the surface.


6 REMOVING DARTS

Keep one hand pressed on target, hold dart by the tip and gently peel dart off.

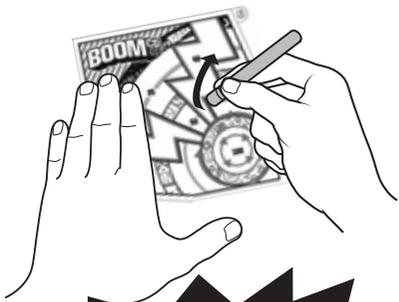

REMOVE DARTS IMMEDIATELY TO MAINTAIN SMART STICK™ TECHNOLOGY!

5 CLEANING DARTS

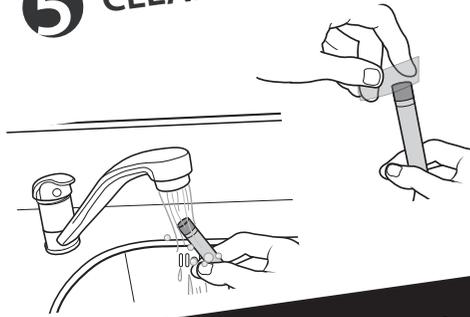

Dust, dirt, and other debris can cause darts to lose their adhesiveness.

To clean darts, rinse darts' tips with tap water or use tape to remove excess debris.

NOTE: Dry darts before using again.

7 REPLACING TARGETS & SHIELDS



Y8620/BBY17

Replace time-worn targets and shields with Y8620/BBY17 SMART STICK™ REFILLS.

Each sold separately, subject to availability.



DYNAMAG™



INSTRUCTIONS
BOOM.CO.COM

6+

Please keep these instructions for future reference as they contain important information.

1 CONTENTS

WARNING: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.
TO AVOID INJURY: Do not modify rounds, darts, or dart blaster. Always wear appropriate eye-wear, sold separately.

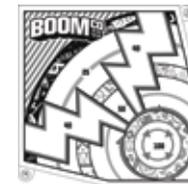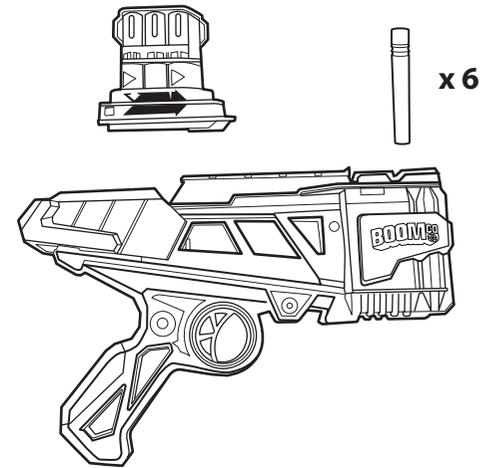

©2014 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty, Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.


CJF20_1100323876_DOM




service.mattel.com

2 TO LOAD


A. Fully load clip with darts.

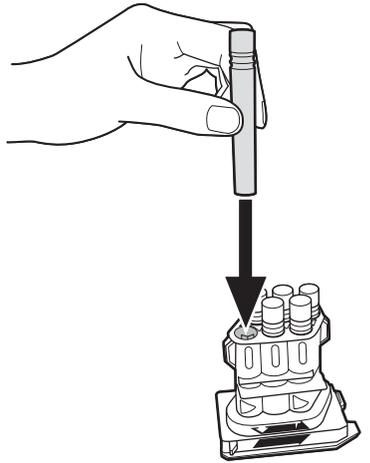

B. Insert the fully loaded clip from the top of the blaster with the arrowheads pointing down.

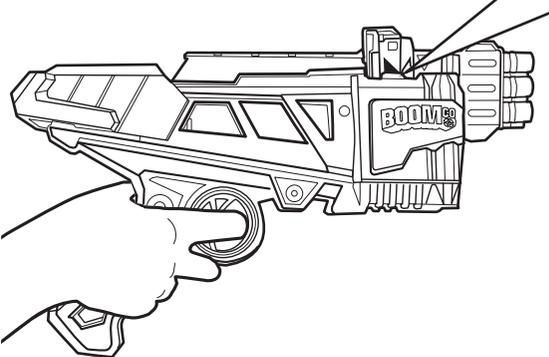


Align marking (◀) to blaster as shown.

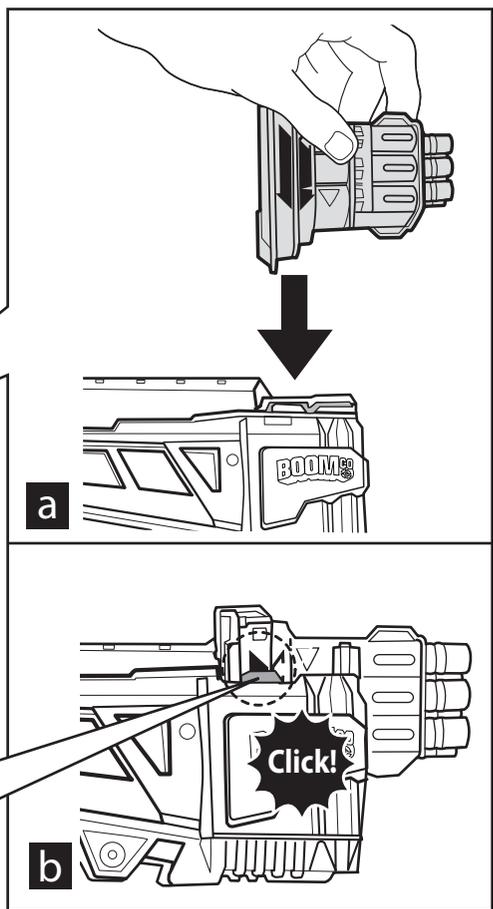


Works with all BOOMco.™ clips.

3 TO FIRE

A. Pull slide all the way back and release.

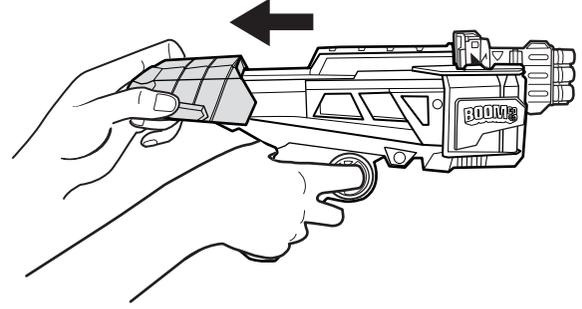

B. Press trigger to fire!
Pull slide back and press trigger again to fire the next dart!

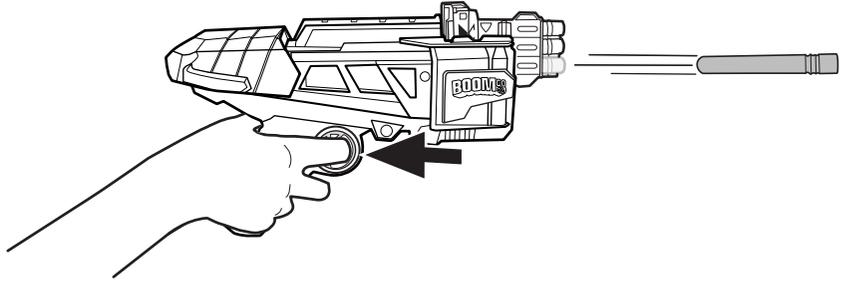

C. Remove empty clip and reload!

