

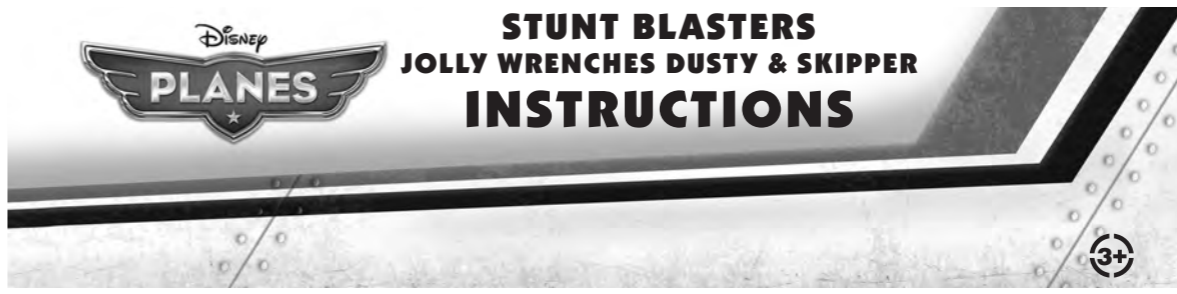


| INSTRUCTION SHEET SPECIFICATIONS | |
|----------------------------------|--------------|
| Toy: | |
| Toy No.: | DHJ22 |
| Part No.: | 0970 |
| Trim Size: | A5 |
| Folded Size: | |
| Type of Fold: | accordian |
| # colors: | One |
| Colors: | Black |
| Paper Stock: | White Offset |
| Paper Weight: | 70 lb. |
| EDM No.: | 001a |


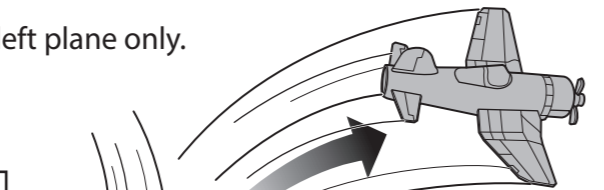


2 Select left side to launch left plane only.


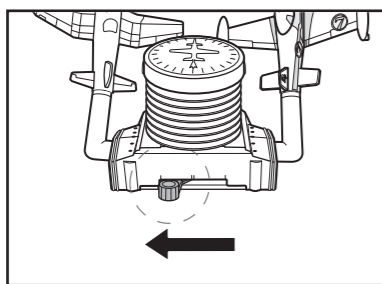


WARNING: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.




3 Select right side to launch right plane only.

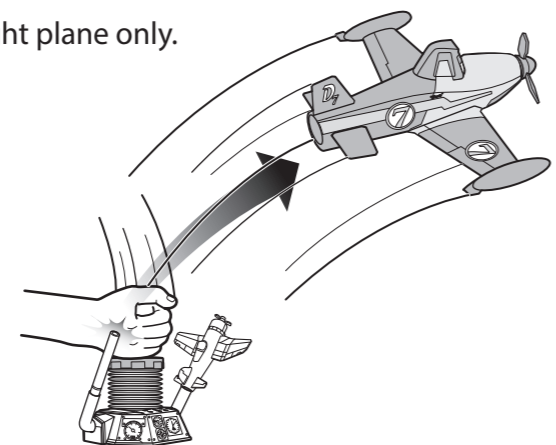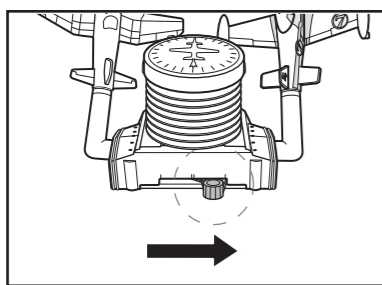

4 Select the middle to launch both planes together.

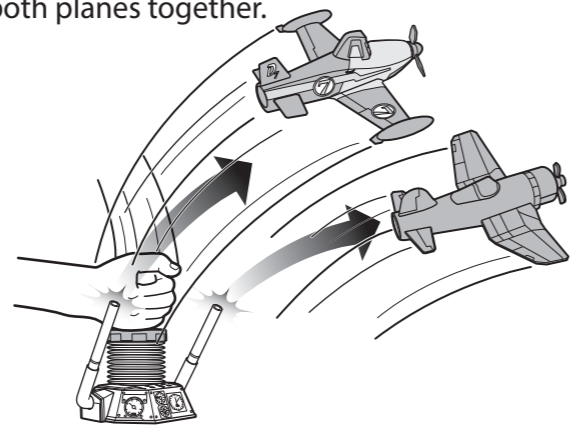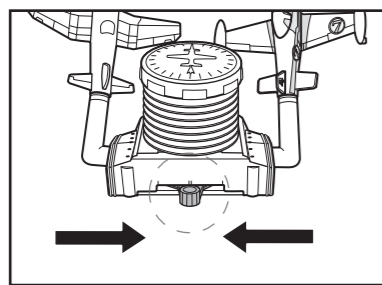

CONTENTS

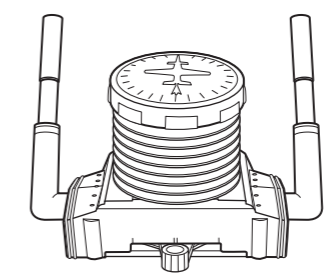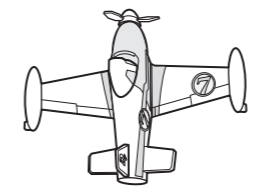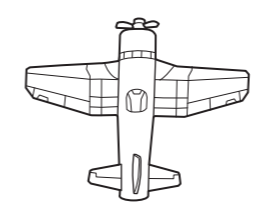


TO PLAY

1

Select the desired launch angle. For best performance, try angles between 30° and 60°.

NOTE: Planes CANNOT launch vertically straight into the air.

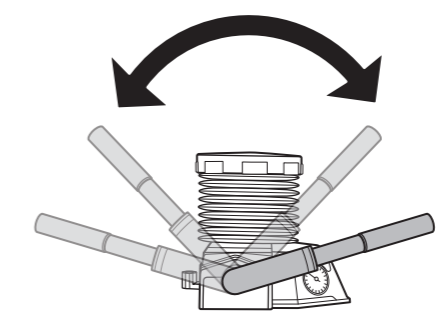

©2015 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

© Disney www.disney.com/planes service.mattel.com

Asst. DHJ19
DHJ22-0970
1101113494-DOM

Folding Dummy

